Manualslib.com - The Global Manuals Library

SHARP 15JF-25F SERVICE MANUAL

Table of Contents

Table of Contents
ELECTRICAL SPECIFICATION
IMPORTANT SERVICING NOTES
Remote Control
CONTROLS & TERMINALS
Service Mode Function
SERVICE ADJUSTMENTS
Screen Adjustment
Focus Adjustment
AGC Adjustment
Hotel Mode Functions
CHASSIS LAYOUTS
LED FLASHING CODES
PRINTED WIRING BOARDS
ICs ADDITIONAL INFORMATION
Block Diagram
Pin Descriptions
SOURCE OF DOCUMENTATION
SCHEMATIC DIAGRAMS
BLOCK DIAGRAMS
Mother Unit
TROUBLESHOOTING TABLES
PARTS LISTING
ACCESSORIES
Other ManualsLib Projects

SHARP®

SERVICE MANUAL

SE0015JF25F00
Issued: 12th Sept. 2002

GA-1E CHASSIS

SECAM B/G, L/L' - PAL B/G SYSTEM COLOUR TELEVISION

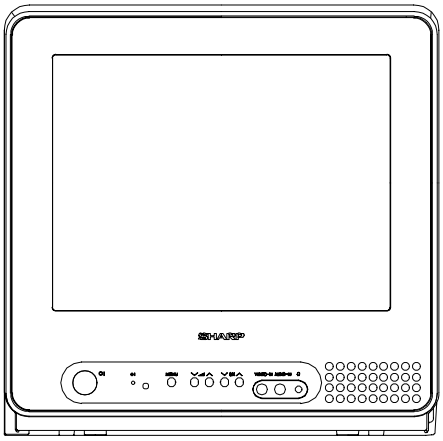

MODEL 15JF-25F

In the interests of user safety (required by safety regulations in some countries) the set should restored to its original condition and only parts identical to those specified should be used.

CONTENTS

ELECTRICAL SPECIFICATION 3
IMPORTANT SERVICING NOTES 4
CONTROLS & TERMINALS 5
SERVICE ADJUSTMENTS 6
CHASSIS LAYOUTS 14
LED FLASHING CODES 15
PRINTED WIRING BOARDS 16
ICs ADDITIONAL INFORMATION 21
SOURCE OF DOCUMENTATION 28
SCHEMATIC DIAGRAMS 29
BLOCK DIAGRAMS 36
TROUBLESHOOTING TABLES 39
PARTS LISTING 42
ACCESSORIES 47

SHARP CORPORATION

This document has been published to be used for after sales service only.

SERVICE MANUAL UPDATE LOG SHEET

Technical Report No. Technical Bulletin No.	Cause / Solution	Part No.	Page No.	Application Data /Serial No.

Use this page to keep any special servicing information as Technical Report (Bulletin), Technical Information, etc.
If only part number changes are required, just change part number directly the part number in the Parts Listing Section.
If you need more information, please refer to the Technical Report (Bulletin).

ELECTRICAL SPECIFICATIONS

- Power Input ..... 220V-240 Volts AC 50Hz

- Power Consumption
  Normal Operation (Method IEC60107) 37W
  Stand-by Operation 3W

- Audio Power Output Rating ..... 2 W (MPO)
  Speaker ..... 16Ω, 4W, 9 x 5 cm, 1pc

- Convergence ..... Self Converging System

- Focus ..... High Bi-Potential Electrostatic

- Sweep Deflection ..... Magnetic

- Picture Intermediate frequency ..... 38.9 MHz

- Sound Carrier Trap
  L'.....40.4MHz
  L.....32.4MHz
  B/G.....33.4MHz

- Adjacent Sound Carrier Trap
  L'.....32.4MHz
  L, B/G.....40.4MHz

- Adjacent Picture Carrier Trap
  L'.....41.9MHz
  L.....30.9MHz
  B/G.....31.9MHz

- Aerial Input Impedance
  VHF/UHF.....75 ohm Unbalanced

- Tuning Ranges
  L/L'.....55.75MHz thru 855.25 MHz
  B/G.....48.25MHz thru 855.25 MHz
  CATV Special Channels

- White Level
  Set brightness control to get total picture tube cathode current of 700 μA under no signal condition. Maximum necessary correction of each picture tube cathode current to get 8900 degrees K-20 MPCD screen temperature should not exceed 15% of its original value.

X=0.290 ± 0.015 Y=0.284 ± 0.015

Specifications are subject to change without prior notice.

WARNING

The chassis in this receiver is partially hot. Use an isolation transformer between the line cord plug and power receptacle, when servicing this chassis.
To prevent electric shock, do not remove cover. No user-serviceable parts inside. Refer servicing to qualified service personnel.

IMPORTANT SERVICING NOTES

Only qualified service personnel are allowed to carry out maintenance and repair of this receiver.

Servicing of High Voltage System and CRT

It is important that the static charge is removed from the high voltage system when carrying out work on the receiver. This can be achieved by connecting a 10K resistor (with a suitably insulated lead) from the CRT cavity connector to the CRT ground tag. This must be carried out with the AC supply disconnected from the receiver.

Note the following:

- The CRT in this receiver employs Integral Implosion Protection.
- If the CRT has to be changed it MUST be replaced with the correct type for continued safe working.
- DO NOT lift the CRT by its neck.
- When handing the CRT, ensure that shatterproof goggles are worn.
- Ensure that the CRT is discharge before handling.

X-Ray

This receiver is designed to keep any x-ray emission to an absolute minimum. Some fault conditions and servicing procedures may produce potentially hazardous x-ray radiation levels. This is a problem when in close proximity to the receiver for long periods of time. To reduce any risks associated with this, please observe the following precautions:

1. When undertaking any servicing on this chassis, DO NOT increase the EHT to more than 27.5 KV, (at a instantaneous beam current of 1000μA).

2. Ensure that during normal operation the EHT does not exceed 24.5 KV±1.5KV (at a beam current of 900μA). This level has been preset in the factory. Always check that this level has not been exceeded after carrying out any repair on the receiver.

3. DO NOT replace the CRT with any other type than that specified in the parts listing as this may cause excessive x-ray radiation.

Before returning the receiver to the customer

In addition to the above checks, the following should also be carried out before returning the receiver to the customer.

1. Inspect all the leads to ensure that they are dressed correctly and that they are not obstructed or pinched by any other parts.

2. Ensure that all protective devices are in good condition. These will include nonmetallic control knobs, insulating fish papers, cabinets backs, compartment covers or shields, mechanical insulators, etc.

CONTROLS & TERMINALS

Remote Control

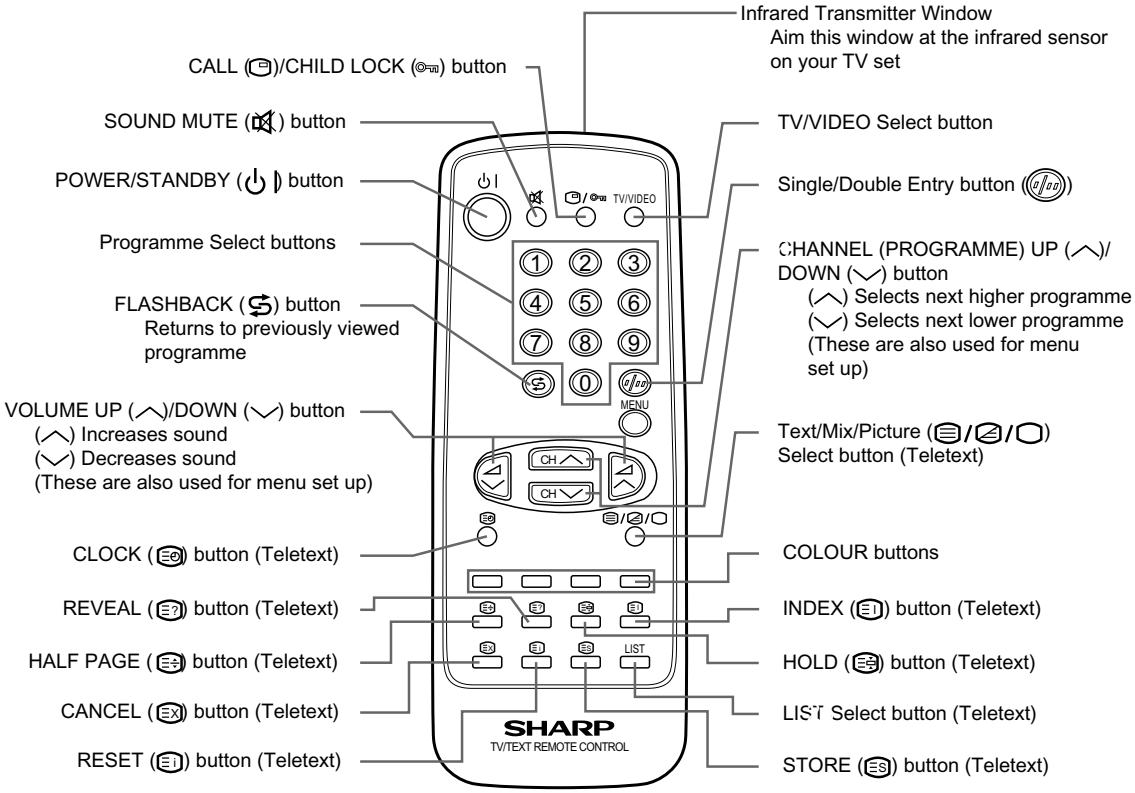
Infrared Transmitter Window
Aim this window at the infrared sensor on your TV set
CALL ( )/CHILD LOCK ( ) button
SOUND MUTE ( ) button
POWER/STANDBY ( ) button
Programme Select buttons
FLASHBACK ( ) button
Returns to previously viewed programme
VOLUME UP ( )/DOWN ( ) button
( ) Increases sound
( ) Decreases sound
(These are also used for menu set up)
CLOCK ( ) button (Teletext)
REVEAL ( ) button (Teletext)
HALF PAGE ( ) button (Teletext)
CANCEL ( ) button (Teletext)
RESET ( ) button (Teletext)
TV/VIDEO Select button
Single/Double Entry button ( )
CHANNEL (PROGRAMME) UP ( )/ DOWN ( ) button
( ) Selects next higher programme
( ) Selects next lower programme
(These are also used for menu set up)
Text/Mix/Picture (/ /) Select button (Teletext)
COLOUR buttons
INDEX ( ) button (Teletext)
HOLD ( ) button (Teletext)
LIST Select button (Teletext)
STORE ( ) button (Teletext)
TV/VIDEO
MENU
CH
LIST
SHARP
TV/TEXT REMOTE CONTROL

TV Front

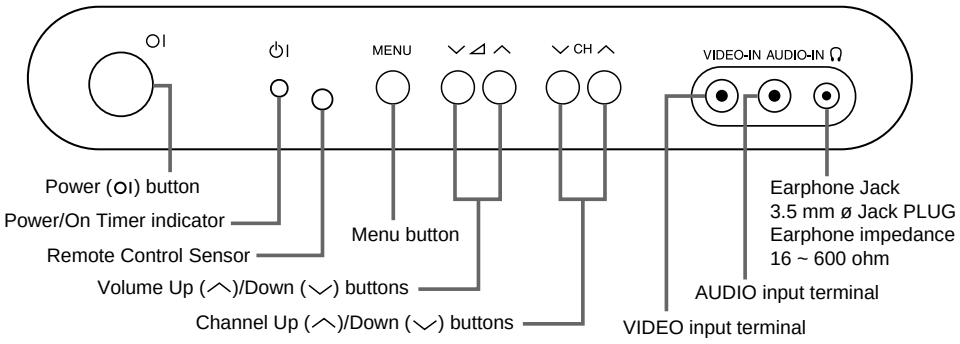

Euro-SCART, 21 Pin Terminal

For greater A/V enjoyment, various audio and video devices may be connected via the Euro-SCART 21-Pin Terminal.

21-Pin Euro-

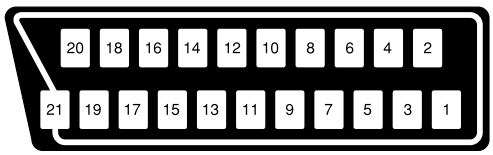

1. Audio right output
2. Audio right input
3. Audio left output
4. Common earth for audio
5. Earth for blue
6. Audio left input
7. Blue input
8. Audio-video control
9. Earth for green
10. Not used
11. Green input
12. Not used
13. Earth for red
14. Not used
15. Red input
16. Red/Green/Blue control
17. Earth for video
18. Earth for video
19. VIDEO output
20. VIDEO input
21. Common earth

NOTE

Audio: Mono Input/Output.

SERVICE ADJUSTMENTS

•Service Mode Function

All required adjustments for servicing this TV set, may be done in “Service Mode”, excepting G2 and FOCUS.

How to access the Service Mode

1. Turn the receiver on and ensure that it is tuned into a test pattern.
2. Turn the receiver off using the mains switch.
3. Press the volume down and channel up buttons together. See Figure 1.
4. Continue pressing the volume down and channel up buttons while turning the mains on using the mains switch. See Figure 1.
5. Keep pressing the volume down and channel up buttons until the picture appears.
6. When <<SHARPX X VXX.XX>> appears on the screen, release the two buttons.
7. The receiver is now in the Service Mode. See Figure 2.

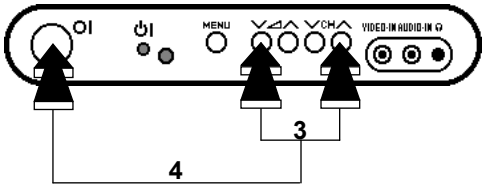

Figure 1

To move between the various Service Mode functions, use the channel up and down buttons. See Figure 3.

Use the volume buttons to change the data to the desired value. See Figure 3.

The data will be stored automatically when exiting the Service Mode. To exit the Service Mode press the stand-by button on the remote control or turn the receiver off with the mains switch.

Figure 2

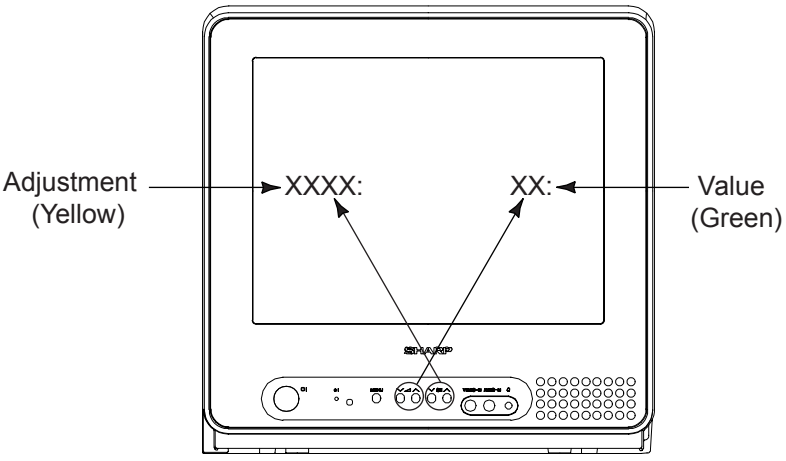

Figure 3

•How to record a new (blank) NVM (EEP-ROM)

When the NVM (EEP-ROM) is replaced for a new one, the Microprocessor automatically record values shown in “Initial” column (Page 7).

Procedure:

1. Access the Service Mode. See the above procedure “How to access the Service Mode”. Now the Microprocessor has recorded the “Initial” Values.

2. Change manually the value of those NVM position pointed out in grey shadow from the “Initial” Value to “Default” Value (Page 7) .

3. Adjust the TV set as detailed in the following pages (Screen, AGC, Geometry and Colour Adjustments).

• Service Adjustments and Data List

The table below shows the various Service Mode positions, range of values and default value. The columns are headed as follows.

Heading: Description:

OSD This is what will appear on the screen when at this position

Function This is the description of the mode’s function

Range This is the range of values that can be entered while in this mode

Initial This is the value recorded just after changing the NVM

Default This is the recommended default value for this mode

FIX/ADJ If this is ADJ, then it may be necessary to adjust this value away from the default

No.	OSD	Function	Range	Initial	Default	FIX/ADJ
1	AGC	AGC Take Over Point	0...63	14	34	ADJ
2	V-LIN	Vertical Slope [VS]	0...63	32	33	ADJ
3	V-AMP	Vertical Amplitude [VA]	0...63	32	27	ADJ
4	V-CENT	Vertical Shift [VSH]	0...63	32	32	ADJ
5	H-CENT	Horizontal shift [HS]	0...63	32	24	ADJ
6	H-CENT60	offset to H-CENT for 60 Hz	0...31 data (-16..+15)	16	20	FIX
7	EW / /	Horizontal Parallelogram [HP]	0...63	32	32	FIX
8	HB	Horizontal Bow	0...63	32	32	FIX
9	S-COR	S-Correction [SC]	0...63	0	22	FIX
10	DRI-RS	White point Red Standard white temp.	0...63	32	42	ADJ
11	DRI-GS	White point Green Standard white temp.	0...63	32	42	ADJ
12	DRI-BS	White point Blue Standard white temp	0...63	32	42	ADJ
13	DRI-RW	White point Red Warm white temp.	0...32	16	16	FIX
14	DRI-GW	White point Green Warm white temp.	0...32	16	9	FIX
15	DRI-BW	White point Blue Warm white temp.	0...32	16	9	FIX
16	DRI-RC	White point Red Cold white temp.	0...32	16	9	FIX
17	DRI-GC	White point Green Cold white temp.	0...32	16	9	FIX
18	DRI-BC	White point Blue Cold white temp.	0...32	16	16	FIX
19	SUB-VOL	Max Volume	0...63	60	52	FIX
20	SUB-CON	Sub Contrast	0...63	63	63	FIX
21	SUB-COL	Sub Colour	0...63	32	18	FIX
22	SUB-BRI	Sub Brightness	0...63	32	33	FIX
23	TINT	Sub Tint	0...63	32	32	FIX
24	SUB-SHP	Sub Sharpness	0...63	32	18	FIX

No.	OSD	Function	Range	Initial	Default	FIX/ADJ
25	HTL-VOL	Max Hotel Volume	0...63	30	30	FIX
26	HTL-PRG	Hotel Program number	0...99 or > 99 for none	255	255	FIX
27	RGB	OSD RGB Reference	0...15	15	0	FIX
28	SEARCH-SYS	Sound system for auto turning	0(L-BG),1(BG),2(I),3(DK)	1	0	FIX
29	CUT-R	Black Level off-set R [BLR]	0...63	0	0	FIX
30	CUT-G	Black Level off-set G [BLG]	0...63	0	10	FIX
31	CDL	Cathode Drive Level [CL]	0...15	0	5	FIX
32	DL-PT	Y-Delay time for PAL (TV) [YD]	0...15	12	4	FIX
33	DL-ST	Y-Delay time for SECAM (TV) [YD]	0...15	15	8	FIX
34	DL-4T	Y-Delay time for N443 (TV) [YD]	0...15	12	8	FIX
35	COL-OP	COLOUR OFFSET (PAL)	0...15	8	8	FIX
36	COL-OS	COLOUR OFFSET (SECAM)	0...15	8	8	FIX
37	COL-O4	COLOUR OFFSET (NTSC443)	0...15	4	4	FIX
38	SHP-OP	SHARPNESS OFFSET(PAL)	0...15	8	8	FIX
39	SHP-OS	SHARPNESS OFFSET(SECAM)	0...15	4	4	FIX
40	SHP-O4	SHARPNESS OFFSET(NTSC443)	0...15	8	8	FIX
41	SC-VOL	SCART volume	0..255	115	115	FIX
42	PRE-SC	Prescaler SCART input	0..127	25	25	FIX
43	PRE-FM	Prescaler FM/AM	0..127	72	72	FIX
44	PRE-NICAM	Prescaler SCART input	0..127	0	0	FIX
45	AVC-DKY	AVC Decay	0...3 data(1.2.4.8.)	2	2	FIX
46	AC-OFF-TIM	Time to set the AC-OFF timer is in steps of 10 minutes	0..15	0	0	FIX
47	DISP	Language or symbols	0(symboles), 1(English), 2(French)	0	2	FIX
48	TXT-EUR	Teletext pan-European language	0 (teletext pan-European language) 1 (second language;cyrillic) 2 (third language;Greek)	0	0	FIX
49	BKS	Black Stretch	0 (disable) or 1 (enable)	1	1	FIX
50	AVC	Automatic Volume Control(AVL)	0 (disable) or 1 (enable)	0	1	FIX
51	FFI	Fast Filter IF-PLL	0 (disable) or 1 (enable)	0	0	FIX
52	ACL	Auto Colour Limit	0 (disable) or 1 (enable)	0	1	FIX
53	S-L	Sound system L	0 (disable) or 1 (enable)	0	1	FIX
54	S-DK	Sound system DK	0 (disable) or 1 (enable)	1	0	FIX
55	S-I	Sound system I	0 (disable) or 1 (enable)	1	0	FIX
56	S-BG	Sound system BG	0 (disable) or 1 (enable)	1	1	FIX
57	BLUE-BACK	Video mute at Ident loss	0 (disable) or 1 (enable)	1	1	FIX
58	VMC	Video Mute at program/source Change	0 (disable) or 1 (enable)	1	0	FIX
59	HTL	Hotel mode	0 (disable) or 1 (enable)	0	0	FIX
60	BTSC	Reduced FM demodulator Gain (for BTSC sig)	0 (disable) or 1 (enable)	0	0	FIX
61	AV	Number of external AV sources	0 for 1 AV or 1 for 2 AV	1	1	FIX
62	FMWS	FM Window Selection	0 (disable) or 1 (enable)	0	0	FIX
63	SM0	Sound Mute bit 0	0 (disable) or 1 (enable)	1	1	FIX
64	SM1	Sound Mute bit 1	0 (disable) or 1 (enable)	0	0	FIX
65	AGC0	IF AGC speed bit0	0 (disable) or 1 (enable)	1	0	FIX
66	AGC1	IF AGC speed bit1	0 (disable) or 1 (enable)	0	0	FIX
67	FOA-FE	Phi 1 time constant for FE(RF)	0 (disable) or 1 (enable)	0	0	FIX
68	FOB-FE	Phi 2 time constant for FE(RF)	0 (disable) or 1 (enable)	0	0	FIX
69	FOA-AV	Phi 1 time constant for AV	0 (disable) or 1 (enable)	1	1	FIX
70	FOB-AV	Phi 2 time constant for AV	0 (disable) or 1 (enable)	1	1	FIX
71	TXT	Teletext	0 (disable) or 1 (enable)	0	1	FIX
72	TXT-WE	Teletext Western or Eastern characters	0 (western) or 1 (eastern)	0	0	FIX
73	FSL	Forced V-SYNC slicing level	0 (disable) or 1 (enable)	0	0	FIX
74	HP2	Sync of OSD	0 for Ph1 or 1 for Ph2	0	0	FIX
75	CP	Charge pump	0 (fast tuning) or 1 (moderate speed tuning)	0	0	FIX
76	NICAM	NICAM decoding enabled	0 (disable) or 1 (enable)	0	0	FIX
77	IGR	IGR decoding enabled	0 (disable) or 1 (enable)	0	0	FIX
78	AUTO	Start auto tuning at POWER-ON	0 (disable) or 1 (enable)	0	0	FIX
79	TXT-TGL	Function of TXT key	0 or 1	0	1	FIX
80	EVG	Enable Vertical Guard	0 (disable) or 1 (enable)	1	1	FIX

• Screen Adjustment

1. G2 Adjustment

1. Enter the Service Mode (see page 6).
2. Use the channel up or channel down buttons to enter the << BLUE-BACK >> function.
3. Set this to << BLUE-BACK: 0 >>, i.e. blue background is turned off.
4. Turn the set off at the mains.
5. Turn the set back on.
6. Set the picture control settings to normal.
7. Select the SCART input by pressing the TV/SCART button on the remote control. Do not connect an input to the SCART socket. A blank raster will appear.
8. Connect an oscilloscope to TP852 on the CRT PWB. The waveform as in figure 4 should be displayed.
9. Adjust the G2 control (screen voltage) so that the peak of this waveform is 3.0V +/-0.1V above the zero volt line.
10. Enter the Service Mode.
11. Turn the blue background function back on again - set << BLUUE-BACK: 1 >>.
12. Turn off the receiver using the mains button.
13. The G2 adjustment is now complete.

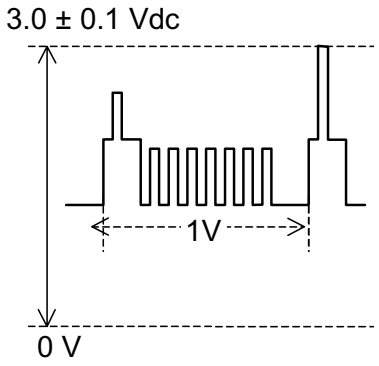

Figure 4

2. Focus Adjustment

1. Receive a monoscope pattern signal at a level of 60 to 80 dB/μV.
2. Set the picture settings to normal.
3. Adjust the focus potentiometer to obtain maximum definition.

• AGC Adjustment

1. Tune the receiver into a colour bar signal on channel E-12.
2. Set the RF generator to an output signal strength of 57dB/μV (+/-1dBμV) –50 Ohms unbalanced.
3. Connect an oscilloscope to TP201. TP201 is one end of R201.
4. Enter the Service Mode (see page 6).
5. Use the channel up and channel down buttons to enter the AGC mode.
6. By using the volume up and the volume down buttons, adjust the AGC until the voltage on TP201 drops by 0.1V to 0.3V below its maximum value.
7. Change the input signal strength to 66-70 dB/μV and make sure that there is no noise apparent in the picture.
8. Turn the receiver off at the mains, this will exit the Service Mode and store the adjustment.

• Geometry Adjustment Procedure

To adjust the geometry, follow the procedure outlined below:

1. Tune the set into a Philips test pattern.
2. Enter the Service Mode as described on page 6.
3. Use the channel up or channel down buttons to enter the desired mode.
4. Use the volume buttons to achieve correct setting.
5. When adjustments are complete, use the stand-by button to turn off the set. The adjustment values will be stored at this point.

V-LIN

Adjust the vertical linearity control so that the picture centring is as shown in figure 5.

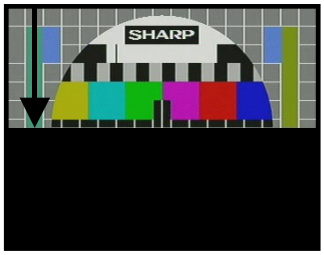

Figure 5

V-AMP

Adjust the vertical amplitude control so that the picture overscans as shown in figure 6.

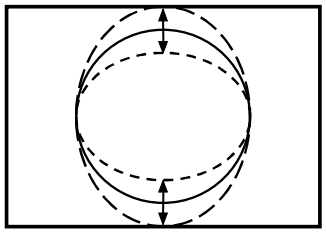

Figure 6

V-CENT

Adjust the vertical centring control so that the picture is centred as shown in figure 7.

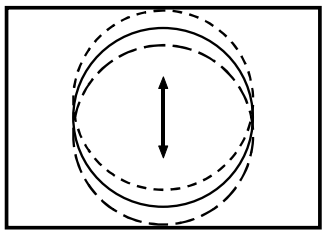

Figure 7

H-CENT

Adjust the horizontal centring control so that the picture is centred as shown in figure 8.

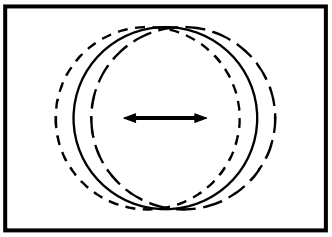

Figure 8

•Colour Adjustment Procedure

The following adjustments should only be carried out when the CRT or IC801 are replaced.

Notes:

- This adjustment must be done after warming up the unit for 30 minutes or longer with a beam current over 700 µA.
- The red value «DRI-RS» should be fixed to 42. (Refer to “How to access Service Mode” section).
- «DRI-GS» adjustment alters “Y” co-ordinate.
- «DRI-BS» adjustment alters “X” and “Y” co-ordinates.

Adjustment Method 1 (using the signal generator, varying the picture signal)

1. Adjust G2.
2. Input a white pattern with burst signal from SCART.
3. Position the colorimeter in the centre of screen.
4. Adjusting input signal level, select a luminance of 70 nits.
5. Operate again in “Service Mode“ and select «DRI-GS» and/or «DRI-BS» locations to obtain colour co-ordinates:

X	Y	Screen temperature
0.290 ± 0.015	0.284 ± 0.015	8900º K-20 MPCD

6. Re-set the TV with the mains switch button to store the adjustment and exit Service Mode.
7. Check colour co-ordinates “X” and “Y” at 20 a 120 Nits. It may be necessary to repeat the same procedure to obtain the above values.

Adjustment Method 2 (using the signal generator, with a fixed picture signal)

1. Adjust G2.
2. Tune a white pattern with burst signal.
3. Operate in “Service Mode”:
4. Using «SUB-CON», select a luminance of 70 nits.
5. Operate again in “Service Mode“ and select «DRI-GS» and/or «DRI-BS» locations to obtain colour co-ordinates:

X	Y	Screen temperature
0.290 ± 0.015	0.284 ± 0.015	8900º K-20 MPCD

6. Select «SUB-CON». Return data to “63”.
7. Re-set the TV with the mains switch button to store the adjustment and exit Service Mode.
8. Check colour co-ordinates “X” and “Y” at 20 a 120 Nits. It may be necessary to repeat the same procedure to obtain the above values.

•Hotel Mode Functions

The following procedure details how to set up the Hotel Mode Functions.

1. Short Description

1.1. Hotel Mode “HTL”: Main Hotel Mode. It deactivates “Channel Setting” functions. It reduces the Maximum Volume.

1.2. Hotel Mode “HTL-VOL”: Maximum Volume Level Regulation.

1.3. Hotel Mode “HTL-PRG”: Fixing start up program when the TV set is switched on.

2. Before start

2.1. It is necessary to program “Channel Setting” before setting up Hotel Mode “HTL” because after that Channel Setting are deactivated.

2.2. Consider that regarding TXT Features, after activate any of the Hotel modes in the “List Mode” will not be stored any page.

2.3. Consider that changed video control values are not stored.

3. Procedure

3.1. Hotel Mode “HTL” (Main Hotel Mode).

3.1.1. Previous Service Information: Initial Value: 0. Range: 0 to 1. Service Mode Indication: HTL.

3.1.2. Access the Service Mode (see this procedure on page 6).

3.1.3. Select “HTL” by using channel up/down buttons.

3.1.4. Change initial value from “0” (off) to “1” (on).

3.1.5. Notes:

3.1.5.1. The maximum volume level has been reduced from 60 to 30. For other value go to *3.2. Hotel Mode “HTL-VOL”*

3.1.5.2. “Channel Setting” functions have been deactivated.

3.1.5.3. It is necessary to select Hotel Mode “HTL” to be able to set up Hotel Mode “HTL-VOL” or Hotel Mode “HTL-PRG”.

3.1.5.4. If you do not need to set up Hotel Mode “HTL-VOL” or “HTL-PRG” get out from Service Mode (To exit the Service Mode press the stand-by button on the remote control or turn the receiver off with the mains switch).

3.2. Hotel Mode “HTL-VOL” (Maximum Volume Level Regulation)

3.2.1. Previous Service Information: Initial value: 30. Range: 0 to 60. Service Mode indication: HTL-VOL.

3.2.2. To activate this Hotel Mode it is necessary activate previously Hotel Mode “HTL”. Then the maximum volume level changed fro 60 to 30 as initial value.

3.2.3. Select “HTL-VOL” by using channel up/down buttons.

3.2.4. Set the value according to your necessities by using volume up/down buttons.

3.2.5. Change initial value from “0” (off) to “1” (on).

3.2.6. Note: If you do not need to set up Hotel Mode “HTL-PRG” get out from Service Mode (To exit the Service Mode press the stand-by button on the remote control or turn the receiver off with the mains switch).

3.3. Hotel Mode “HTL-PRG” (Fixing start up program when the TV Set is switched on)

3.3.1. Initial value: 255. Range: 0 to 255. Service Mode indication: HTL-PRG.

3.3.2. To activate this Hotel Mode it is necessary activate previously Hotel Mode “HTL”.

3.3.3. Select “HTL-PRG” by using channel up/down buttons.

3.3.4. The initial value to 255, ensures that the TV Set starts up in the same program number that it was been displayed before turn it off.

3.3.5. If you want to fix other program number proceed as follows set the value according to your necessities by using volume up / down buttons. Use values between 0 to 99. In this way, the new program number appear fixed when you start up the TV set.

Example: If you would like to set starting program number “2”, change from 255 to 2.

3.3.6. Get out from Service Mode (To exit the Service Mode press the stand-by button on the remote control or turn the receiver off with the mains switch).

CHASSIS LAYOUTS

Mother Unit

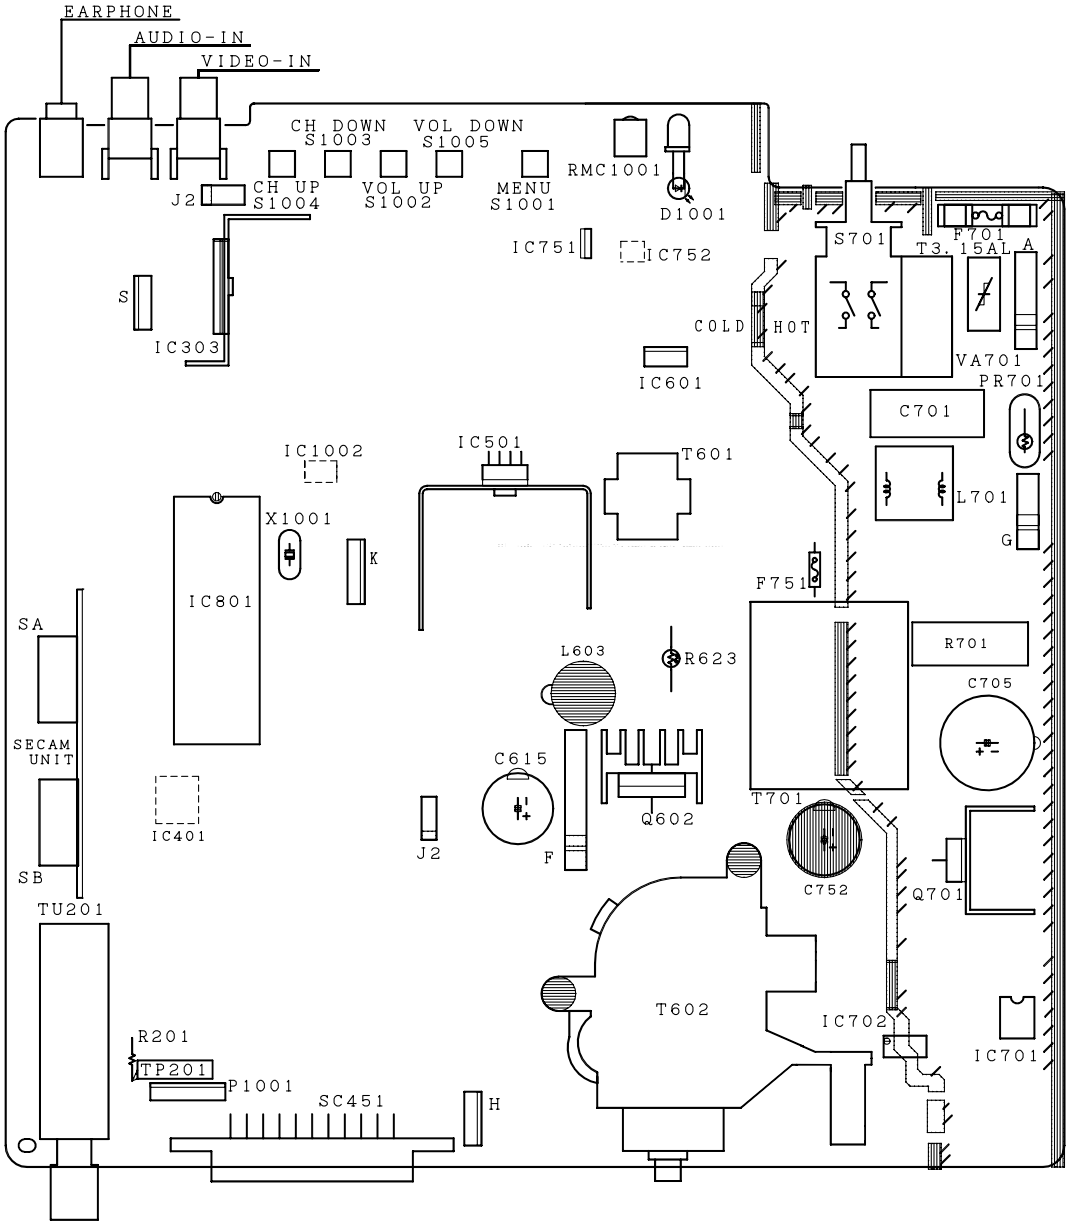

CRT Unit

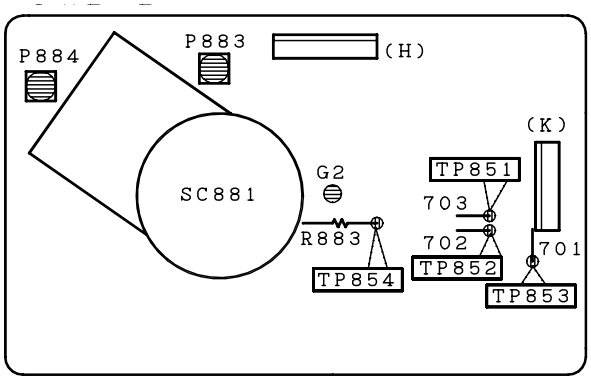

Secam Unit

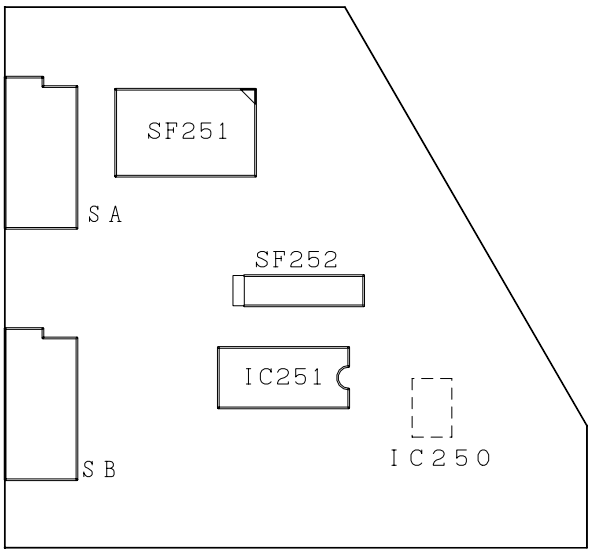

LED FLASHING CODES

PURPOSE: The led indicates the power mode,ocurred I²C error and On timer

INPUT:
- Current power mode
- I²C Errors
- On timer

Processing:
- If in STAND-BY mode and On timer in-active then switch LED off.
- If in STAND-BY and On timer active
  set LED to blinking, (switch on and off at 1 Hz with a 50 % duty cycle).
- If in POWER-ON mode, switch LED on.
- If an I²C error occurred, let the LED blink at 1 Hz, 50 % duty cycle.
  For the blinking times see the Table below.

Note: Only when an I²C error occurs for a number of times, or for a number of seconds, the I²C error is handled by the system (that is ,only then the set will go to stand-by, the led starts blinking).

IC/Module Name	Slave Address	Bus Error LED Blinking Time	Remarks	Ref. No.
M24C04 or M24C08	A0,A2	2	512x8 EEPROM or 1024x8 EEPROM	IC1002
TDA935x/6x/8x	8A	3	Address of Internal TV Processor	IC801
M62334FP	98	4	Sound System Switch	IC250
VTST6HD64 or CTF551	C0 C0	6 6	PLL Tuner	TU201

Table Error LED blinking times

PRINTED WIRING BOARDS

F7340N6 PWB. Component side

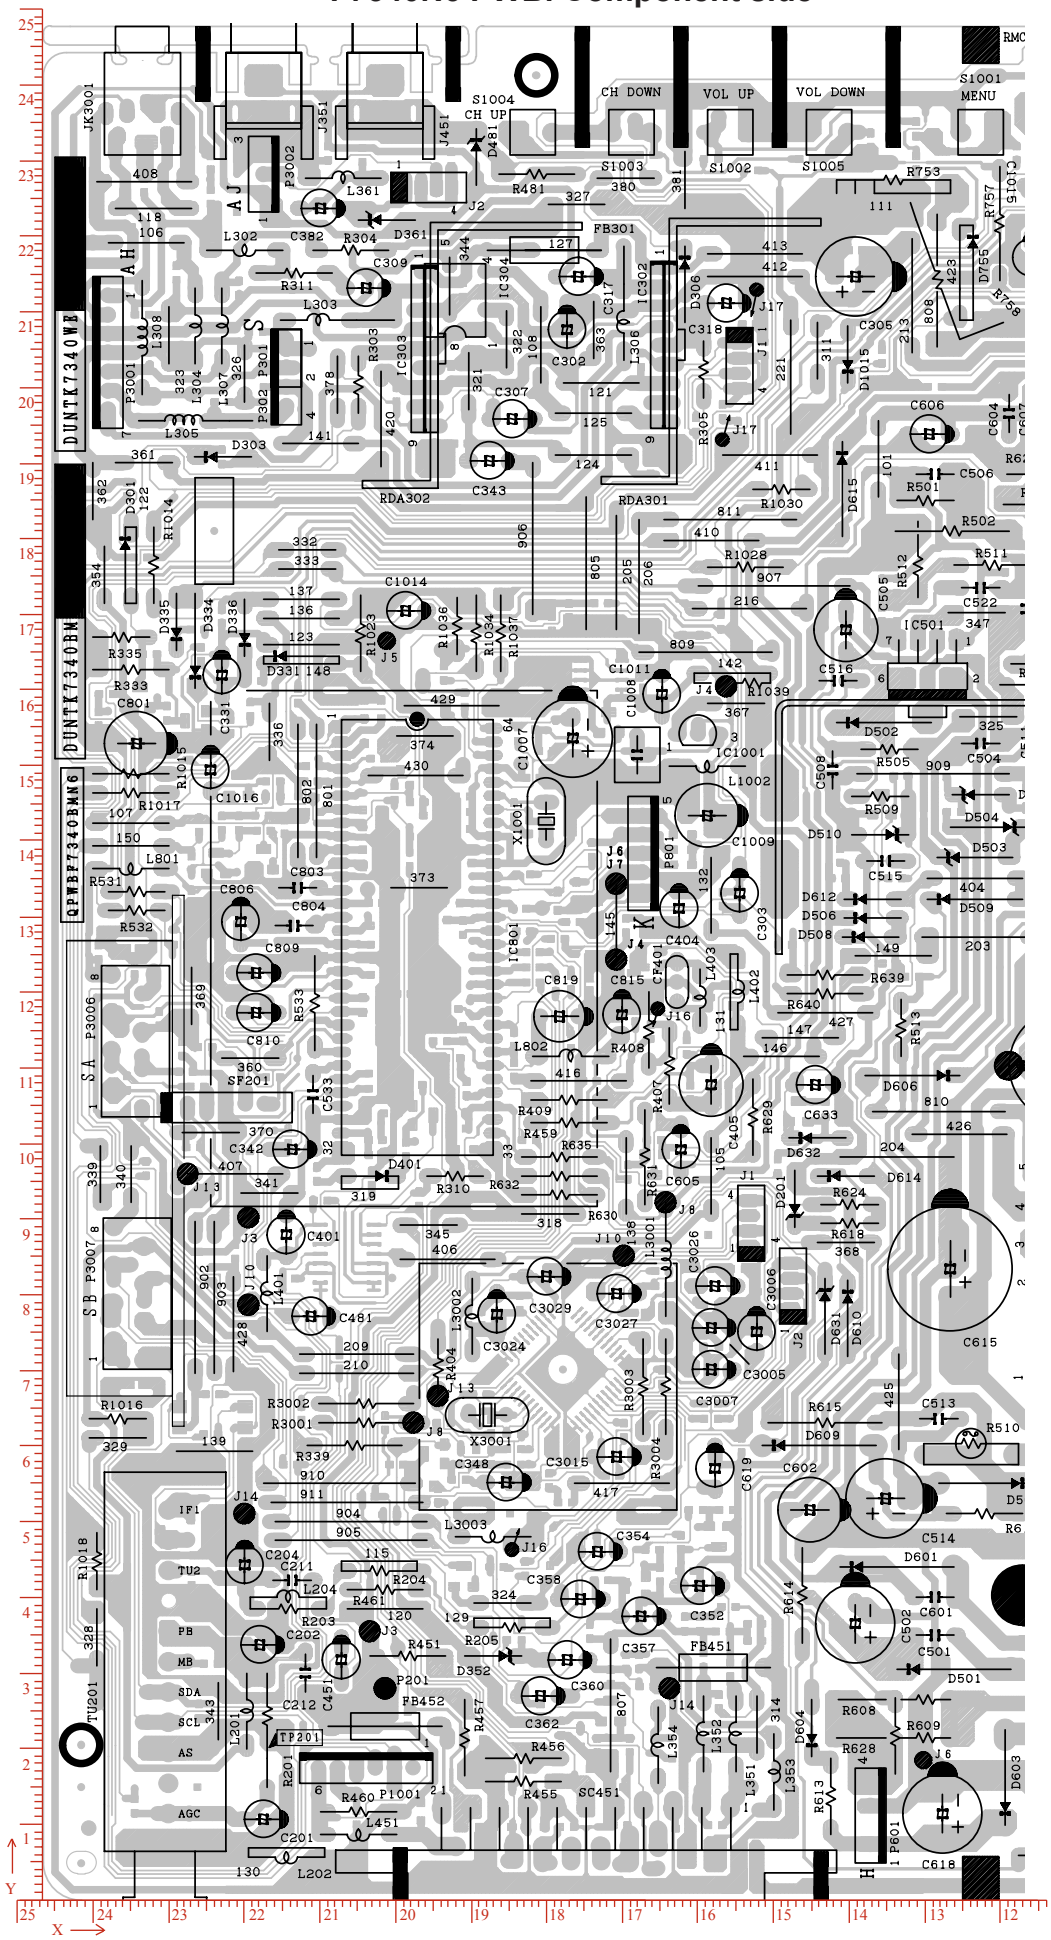

Page 17

F7340N6 PWB. Component side

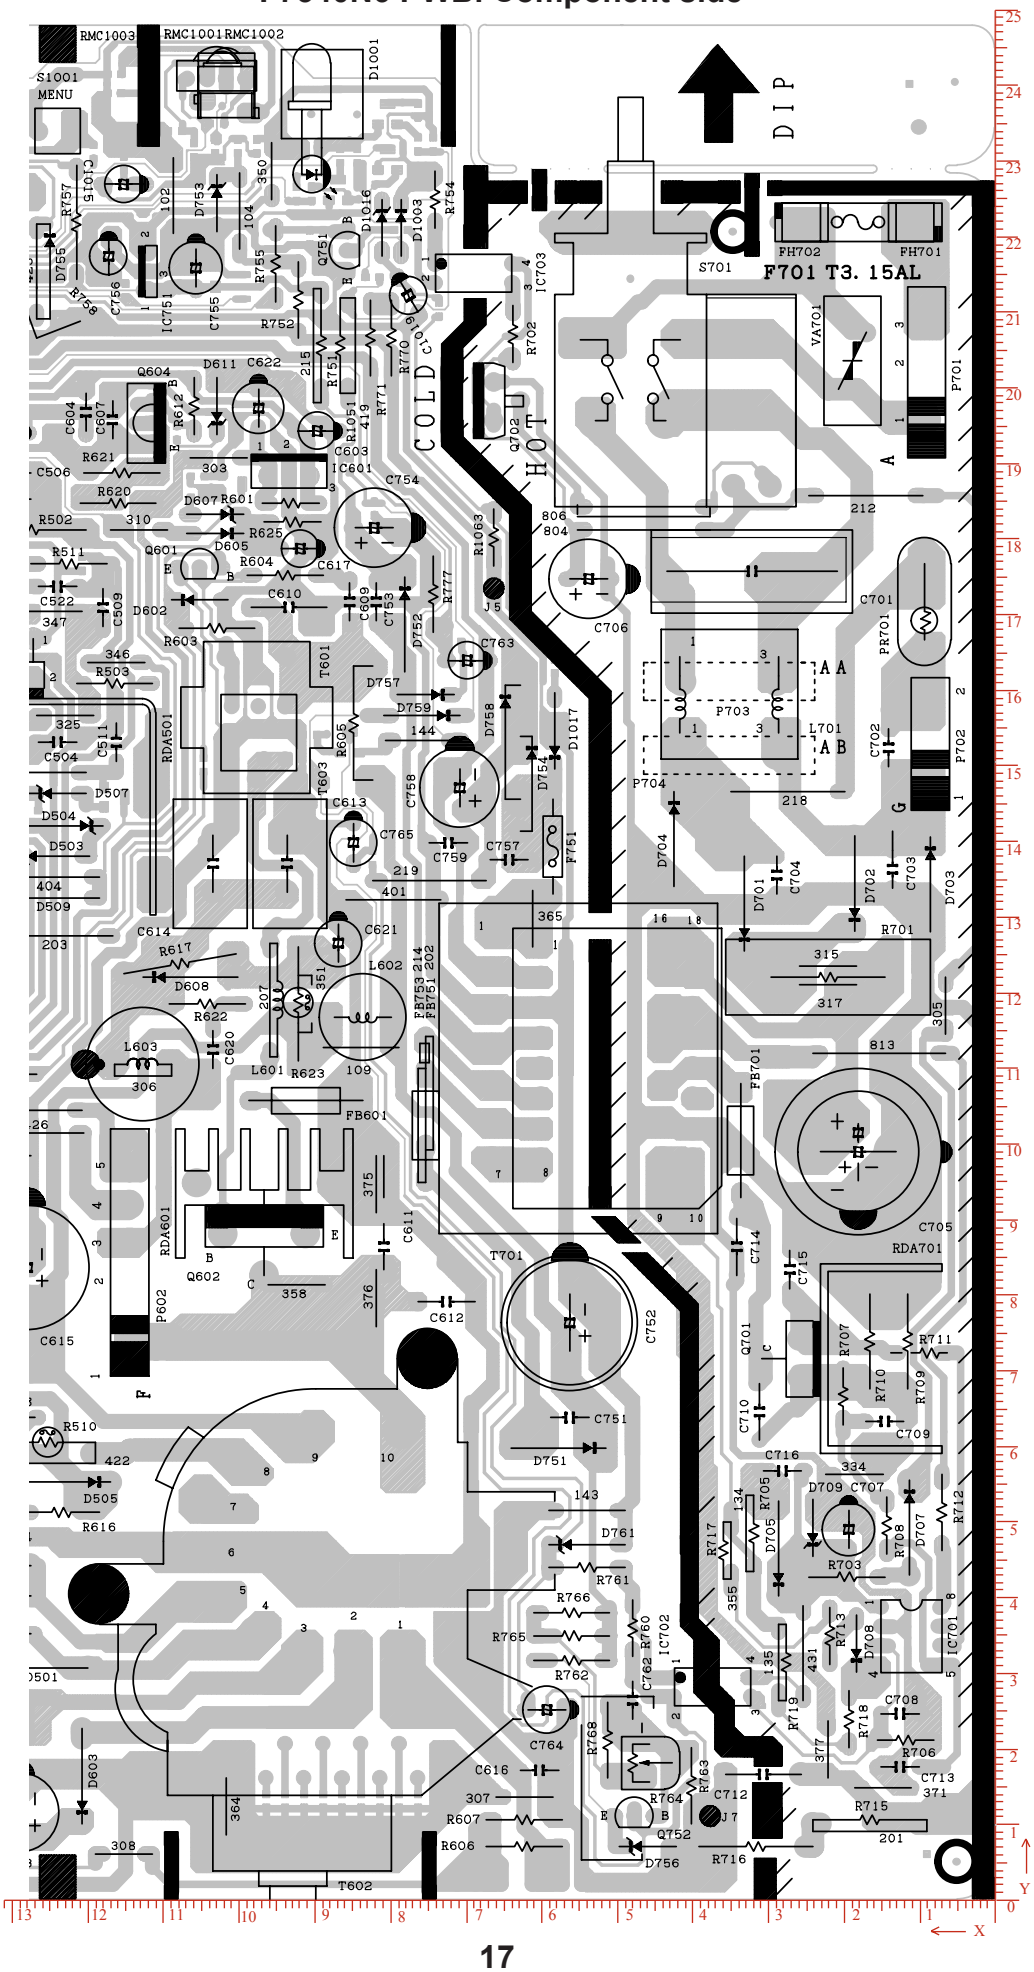
RMC1003
RMC1001
RMC1002
S1001
MENU
D1001
DIP
S701
F701 T3. 15AL
FH702
FH701
VA701
P701
COLD
HOT
Q702
IC703
IC601
IC751
Q604
Q601
Q602
Q751
Q752
Q701
T601
T602
T701
L601
L602
L603
RDA501
RDA601
RDA701
P602
P703
P704
L701
PR701
PR751
PR753
PB701
PB751
F751
J5
D504
D503
D507
D509
D505
D603
D751
D761
D756
D701
D702
D703
D704
D705
D707
D708
D709
IC702
IC701
C615
C706
C705
C752
C751
C764
C712
C713
C715
C716
C707
C708
C709
C710
C711
C612
C616
C614
C621
C620
C613
C765
C759
C757
C758
C763
C754
C617
C610
C609
C603
C604
C607
C506
C504
C511
C509
C522
C615
R757
R755
R752
R754
R751
R770
R771
R1051
R1063
R777
R752
R621
R620
R502
R511
R625
R604
R603
R503
R605
R617
R622
R623
R510
R616
R761
R766
R765
R762
R760
R768
R763
R764
R607
R606
R716
R715
R719
R717
R718
R706
R707
R710
R711
R712
R713
R703
R708
R709
R701
FB601
FB701
FH702
FH701
A
G
A A
A B
212
218
219
401
365
813
315
317
305
422
143
134
356
431
135
377
371
334
307
308
364
306
109
207
214
202
351
375
376
358
144
303
310
346
347
325
404
203
215
419
102
104
350
806
804
D611
D607
D605
D602
D608
D759
D758
D754
D1017
D1016
D1003
C1015
C622
R601
R612
R1051
R609
R1063
R777
R752
R605
R603
R617
R622
R623
R620
R621
R625
R604
R503
R502
R511
R510
R616
R603
R607
R606
R716
R715
R719
R717
R718
R706
R707
R710
R711
R712
R713
R703
R708
R709
R701
R754
R755
R752
R751
R770
R771
R1051
R1063
R777
R752
R621
R620
R502
R511
R625
R604
R603
R503
R605
R617
R622
R623
R510
R616
R761
R766
R765
R762
R760
R768
R763
R764
R607
R606
R716
R715
R719
R717
R718
R706
R707
R710
R711
R712
R713
R703
R708
R709
R701
FB601
FB701
FH702
FH701
A
G
A A
A B
212
218
219
401
365
813
315
317
305
422
143
134
356
431
135
377
371
334
307
308
364
306
109
207
214
202
351
375
376
358
144
303
310
346
347
325
404
203
215
419
102
104
350
806
804
D611
D607
D605
D602
D608
D759
D758
D754
D1017
D1016
D1003
C1015
C622
R601
R612
R1051
R609
R1063
R777
R752
R605
R603
R617
R622
R623
R620
R621
R625
R604
R503
R502
R511
R510
R616
R603

F7340N6 PWB. Copper side

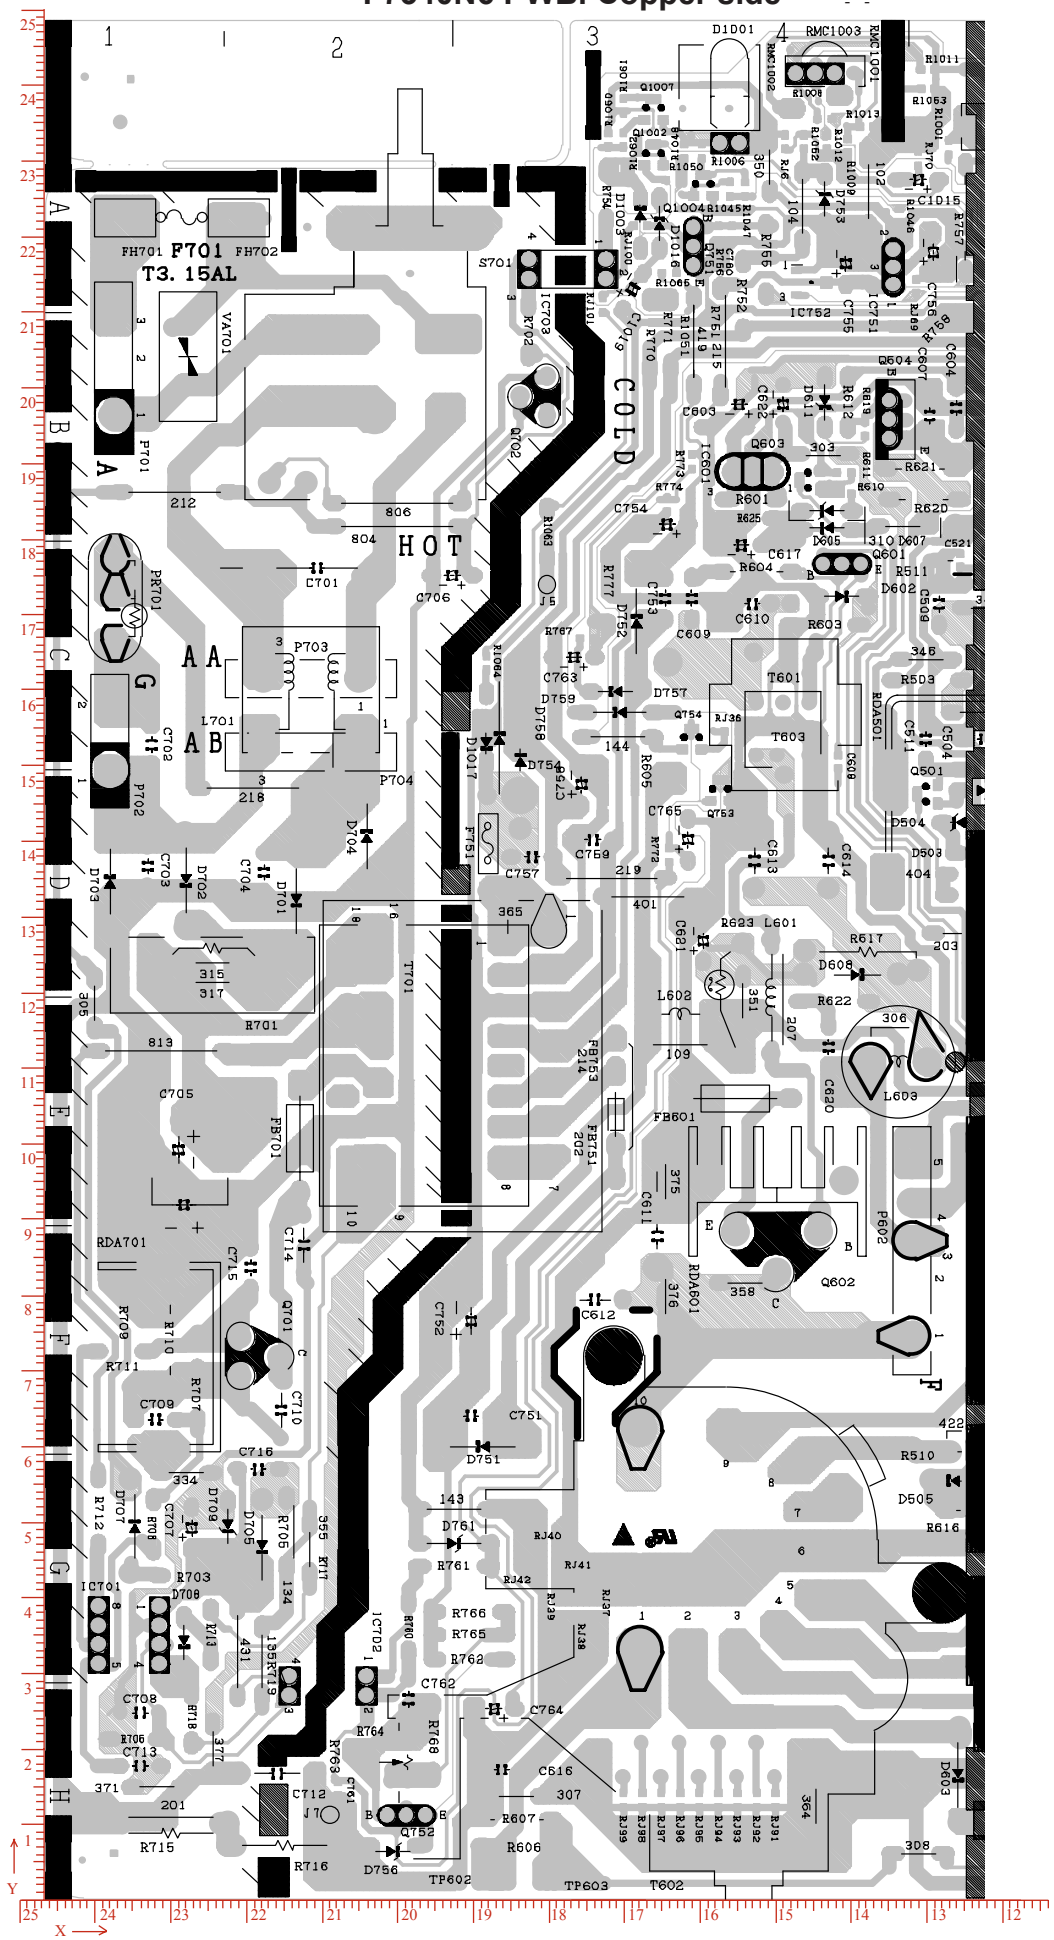

F7340N6 PWB. Copper side

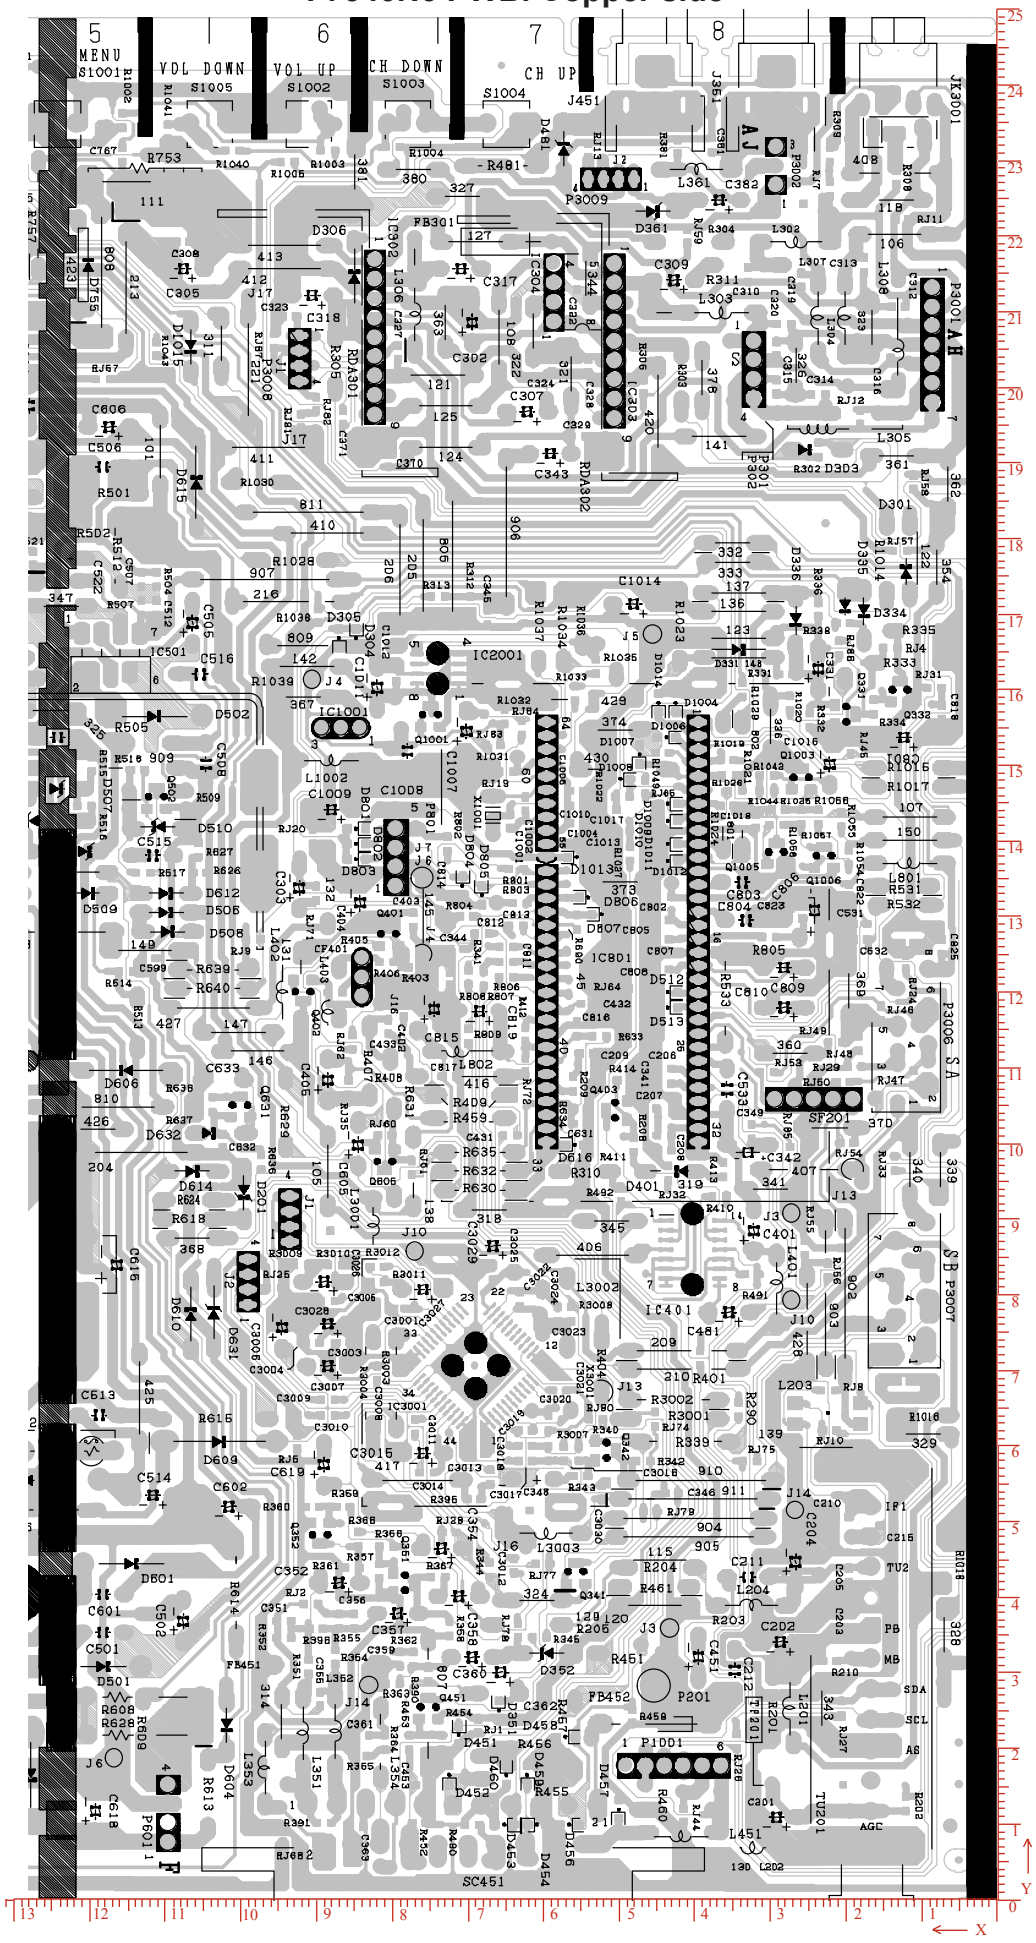

F 7341N0 PWB. Components side.

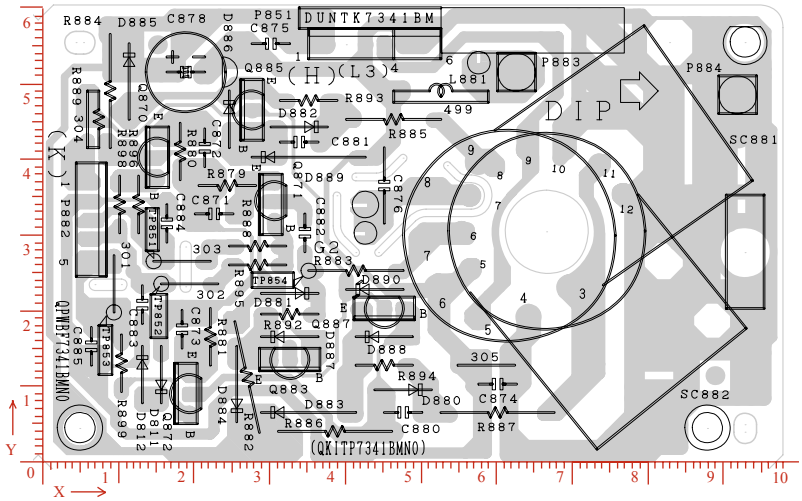

F 7343N0 PWB. Components side.

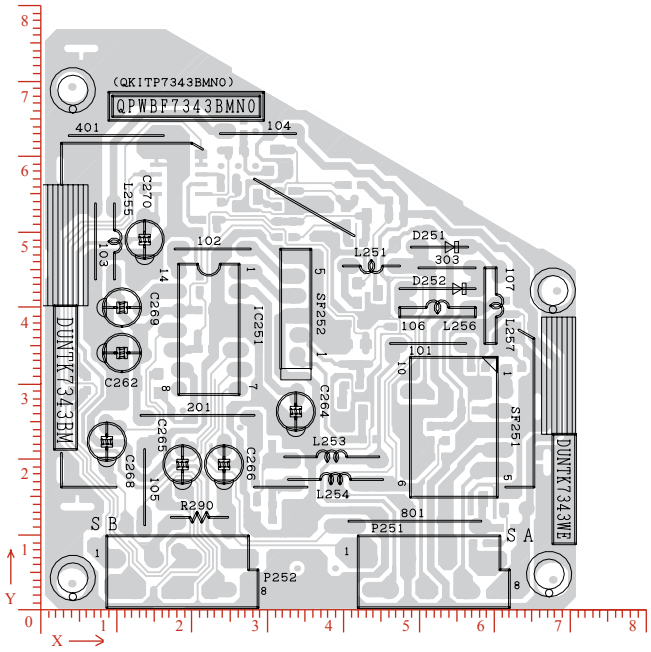

F 7343N0 PWB. Copper side.

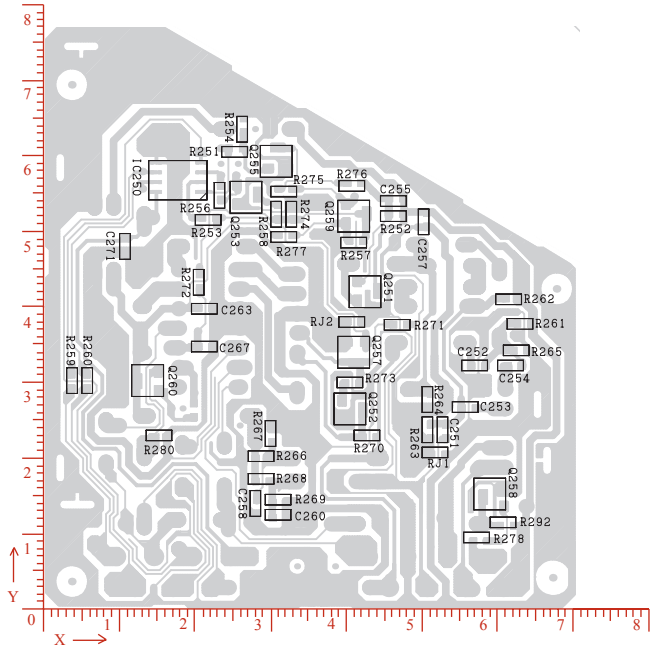

ICs ADDITIONAL INFORMATION

TDA93XX (IC801)

Quick Reference Data

SYMBOL	PARAMETER	MIN.	TYP.	MAX.	UNIT
Supply					
V_P	supply voltages	–	8.0/3.3	–	V
I_P	supply current	–	135/60	–	mA
Input voltages					
$V_{iVIFrms)}$	video IF amplifier sensitivity (RMS value)	–	75	–	µV
$V_{iSIF(rms)}$	QSS sound IF amplifier sensitivity (RMS value)	–	60	–	µV
$V_{iAUDIO(rms)}$	external audio input (RMS value)	–	500	–	mV
$V_{iCVBS(p-p)}$	external CVBS/Y input (peak-to-peak value)	–	1.0	–	V
$V_{iCHROMA(p-p)}$	external chroma input voltage (burst amplitude) (peak-to-peak value)	–	0.3	–	V
$V_{iRGB(p-p)}$	RGB inputs (peak-to-peak value)	–	0.7	–	V
$V_{iYIN(p-p)}$	luminance input signal (peak-to-peak value)	–	1.4	–	V
$V_{iUVIN(p-p)}$	U/V input signal (peak-to-peak value)	–	1.33/1.05	–	V
Output signals					
$V_{o(IFVO)(p-p)}$	demodulated CVBS output (peak-to-peak value)	–	2.5	–	V
$V_{o(QSSO)(rms)}$	sound IF intercarrier output in QSS versions (RMS value)	–	100	–	mV
$V_{o(AMOUT)(rms)}$	demodulated AM sound output in QSS versions (RMS value)	–	500	–	mV
$I_{o(AGCOUT)}$	tuner AGC output current range	0	–	5	mA
$V_{oRGB(p-p)}$	RGB output signal amplitudes (peak-to-peak value)	–	2.0	–	V
I_{oHOUT}	horizontal output current	10	–	–	mA
I_{oVERT}	vertical output current (peak-to-peak value)	1	–	–	mA
I_{oEWD}	EW drive output current	1.2	–	–	mA

Pinning

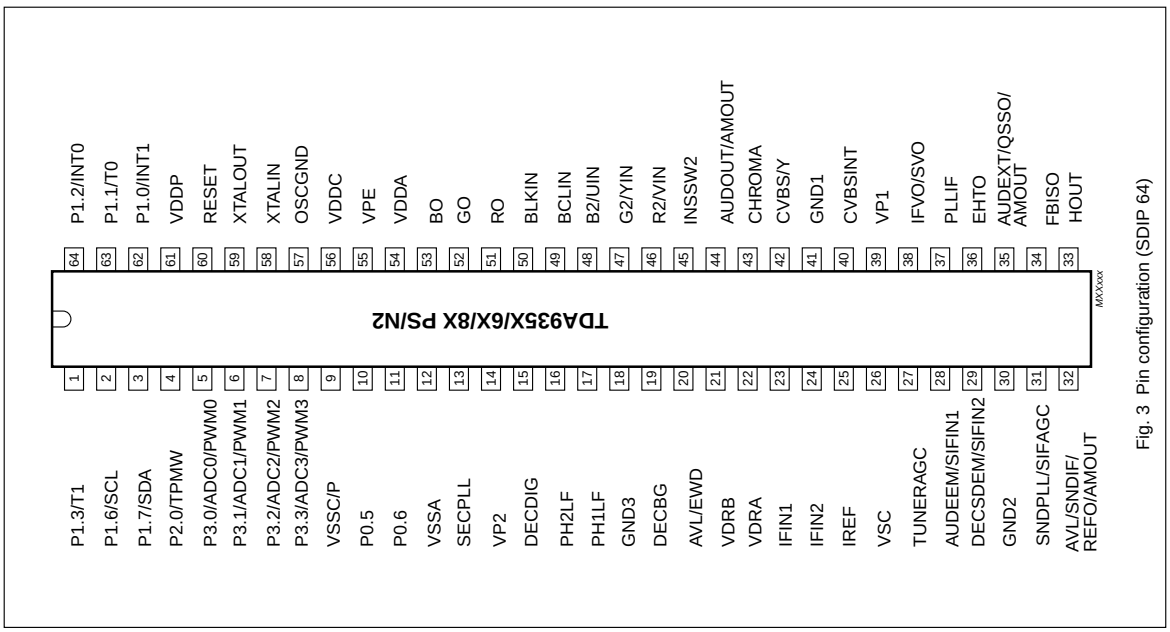

Fig. 3 Pin configuration (SDIP 64)

TDA93XX (IC801)

Pinning

SYMBOL	PIN	DESCRIPTION
P1.3/T1	1	port 1.3 or Counter/Timer 1 input
P1.6/SCL	2	port 1.6 or I^2C-bus clock line
P1.7/SDA	3	port 1.7 or I^2C-bus data line
P2.0/TPWM	4	port 2.0 or Tuning PWM output
P3.0/ADC0/PWM0	5	port 3.0 or ADC0 input or PWM0 output
P3.1/ADC1/PWM1	6	port 3.1 or ADC1 input or PWM1 output
P3.2/ADC2/PWM2	7	port 3.2 or ADC2 input or PWM2 output
P3.3/ADC3/PWM3	8	port 3.3 or ADC3 input or PWM3 output
VSSC/P	9	digital ground for µ-Controller core and periphery
P0.5	10	port 0.5 (8 mA current sinking capability for direct drive of LEDs)
P0.6	11	port 0.6 (8 mA current sinking capability for direct drive of LEDs)
VSSA	12	analog ground of Teletext decoder and digital ground of TV-processor
SECPLL	13	SECAM PLL decoupling
VP2	14	2^{nd} supply voltage TV-processor (+8V)
DECDIG	15	decoupling digital supply of TV-processor
PH2LF	16	phase-2 filter
PH1LF	17	phase-1 filter
GND3	18	ground 3 for TV-processor
DECBG	19	bandgap decoupling
AVL/EWD (1)	20	Automatic Volume Levelling /East-West drive output
VDRB	21	vertical drive B output
VDRA	22	vertical drive A output
IFIN1	23	IF input 1
IFIN2	24	IF input 2
IREF	25	reference current input
VSC	26	vertical sawtooth capacitor
TUNERAGC	27	tuner AGC output
AUDEEM/SIFIN1(1)	28	audio deemphasis or SIF input 1
DECSDEM/SIFIN2(1)	29	decoupling sound demodulator or SIF input 2
GND2	30	ground 2 for TV processor
SNDPLL/SIFAGC(1)	31	narrow band PLL filter /AGC sound IF
AVL/SNDIF/REF0/ AMOUT(1)	32	Automatic Volume Levelling / sound IF input / subcarrier reference output /AM output (non controlled)
HOUT	33	horizontal output
FBISO	34	flyback input/sandcastle output
AUDEXT/ QSSO/AMOUT(1)	35	external audio input /QSS intercarrier out /AM audio output (non controlled)
EHTO	36	EHT/overvoltage protection input
PLLIF	37	IF-PLL loop filter
IFVO/SVO	38	IF video output / selected CVBS output
VP1	39	main supply voltage TV-processor (+8 V)
CVBSINT	40	internal CVBS input
GND1	41	ground 1 for TV-processor
CVBS/Y	42	external CVBS/Y input
CHROMA	43	chrominance input (SVHS)
AUDOUT /AMOUT(1)	44	audio output /AM audio output (volume controlled)

TDA93XX (IC801)

Pinning

SYMBOL	PIN	DESCRIPTION
INSSW2	45	2nd RGB / YUV insertion input
R2/VIN	46	2nd R input / V (R-Y) input
G2/YIN	47	2nd G input / Y input
B2/UIN	48	2nd B input / U (B-Y) input
BCLIN	49	beam current limiter input / (V-guard input, note 2)
BLKIN	50	black current input / (V-guard input, note 2)
RO	51	Red output
GO	52	Green output
BO	53	Blue output
VDDA	54	analog supply of Teletext decoder and digital supply of TV-processor (3.3 V)
VPE	55	OTP Programming Voltage
VDDC	56	digital supply to core (3.3 V)
OSCGND	57	oscillator ground supply
XTALIN	58	crystal oscillator input
XTALOUT	59	crystal oscillator output
RESET	60	reset
VDDP	61	digital supply to periphery (+3.3 V)
P1.0/INT1	62	port 1.0 or external interrupt 1 input
P1.1/T0	63	port 1.1 or Counter/Timer 0 input
P1.2/INT0	64	port 1.2 or external interrupt 0 input

Note

1. The function of pin 20, 28, 29, 31, 32, 35 and 44 is dependent on the IC version (mono intercarrier FM demodulator / QSS IF amplifier and East-West output or not) and on some software control bits. The valid combinations are given in table 1.
2. The vertical guard function can be controlled via pin 49 or pin 50. The selection is made by means of the IVG bit in subaddress 2BH.

Table 1 Pin functions for various versions

IC version	FM-PLL version				QSS version					
East-West Y/N	N		Y		N			Y		
CMB1/CMB0 bits	00	01/10/11	00	01/10/11	00	01/10/11		00	01/10/11	
AM bit	–	–	–	–	–	0	1	–	0	1
Pin 20	AVL		EWD		AVL			EWD		
Pin 28	AUDEEM				SIFIN1					
Pin 29	DECSDEM				SIFIN2					
Pin 31	SNDPLL				SIFAGC					
Pin 32	SNDIF(1)	REFO(2)	AVL/SNDIF(1)	REFO(2)	AMOUT	REFO(2)		AMOUT	REFO(2)	
Pin 35	AUDEXT				AUDEXT	QSSO	AMOUT	AUDEXT	QSSO	AMOUT
Pin 44	AUDOUT				controlled AM or audio out					

Note

1. When additional (external) selectivity is required for FM-PLL system pin 32 can be used as sound IF input. This function is selected by means of SIF bit in subaddress 28H.
2. The reference output signal is only available for the CMB1/CMB0 setting of 0/1. For the other settings this pin is a switch output (see also table 67).

TDA93XX (IC801)

Block Diagram

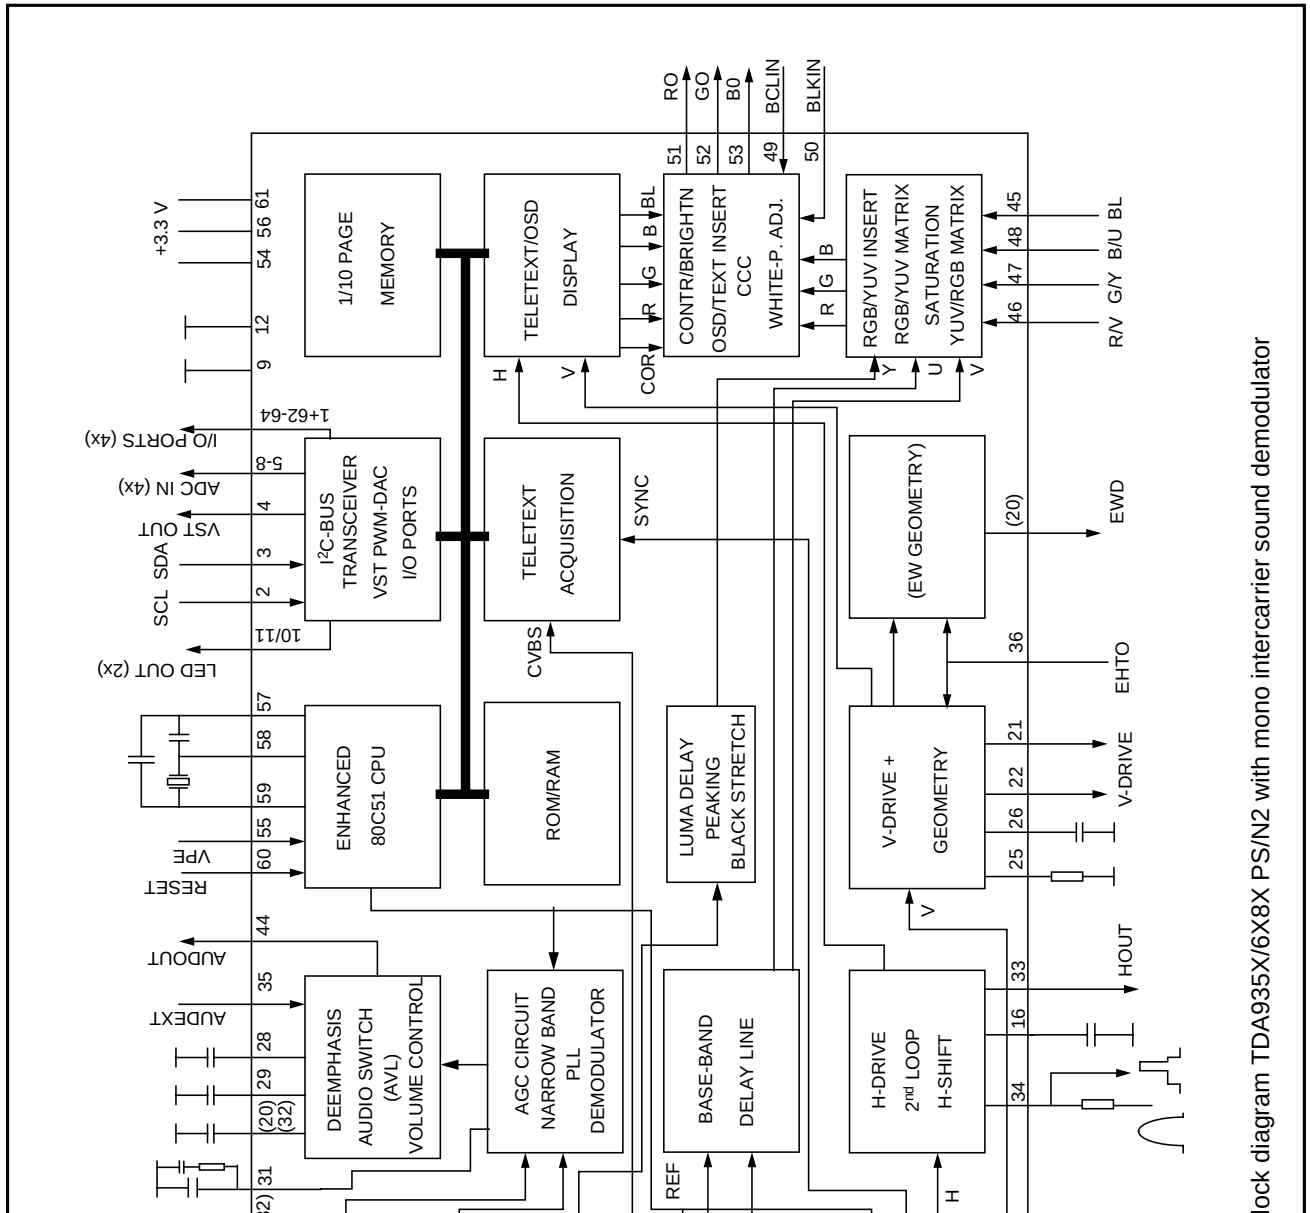

Block diagram TDA935X/6X8X PS/N2 with mono intercarrier sound demodulator

TEA1507 (IC701)

Block Diagram

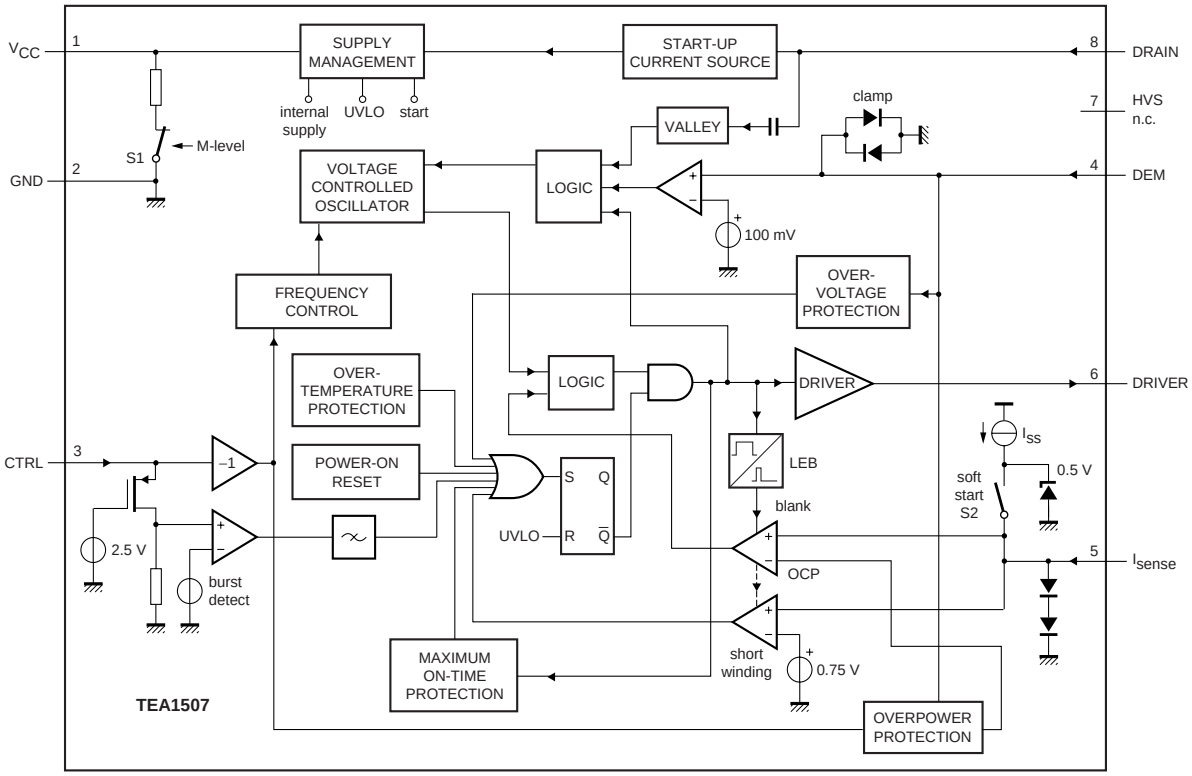

Block Diagram

SYMBOL	PIN	DESCRIPTION
V_{CC}	1	supply voltage
GND	2	ground
CTRL	3	control input
DEM	4	input from auxiliary winding for demagnetization timing, OVP and OPP
I_{sense}	5	programmable current sense input
DRIVER	6	gate driver output
HVS	7	high voltage safety spacer, not connected
DRAIN	8	drain of external MOS switch, input for start-up current and valley sensing

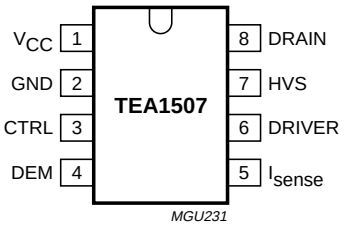

Pin configuration.

AN5522 (IC501)

Block Diagram

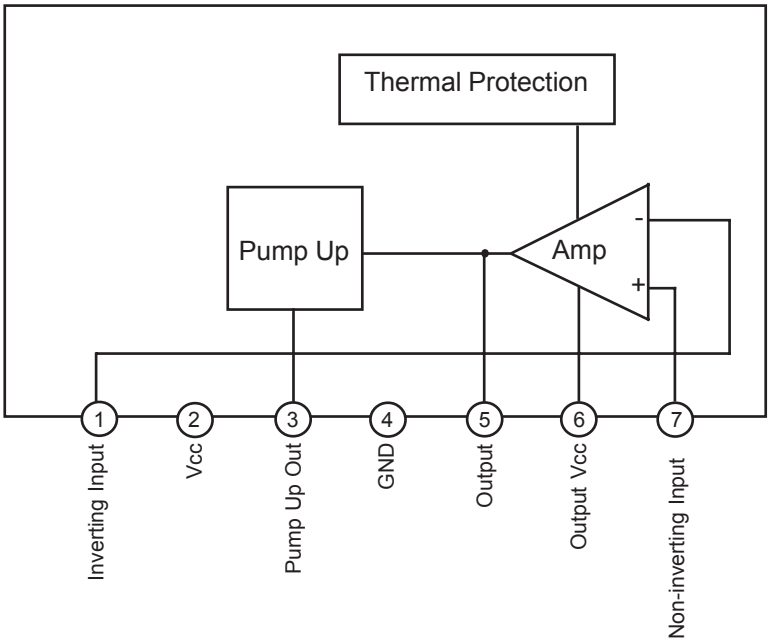

Pin Descriptions

Pin No.	Pin Name
1	Inverting Input
2	Power Supply
3	Pump-up Output
4	GND
5	Vertical Output
6	Vertical Output Power Supply
7	Non-inverting Input

AN7523 (IC303)

Block Diagram

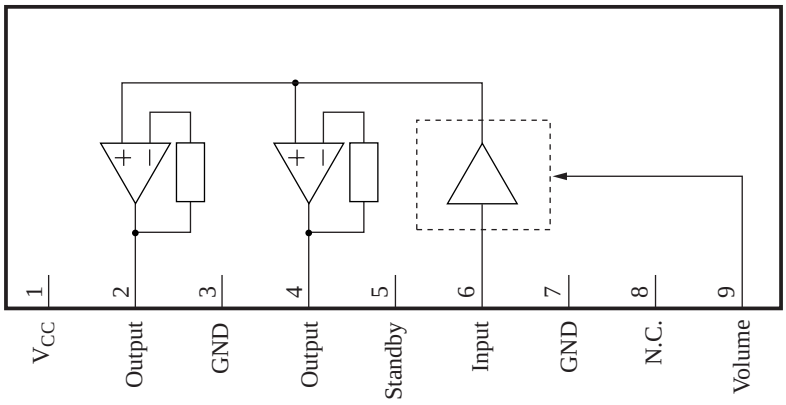

Pin Descriptions

Pin No.	Description
1	Vcc
2	Ch Output (+)
3	GND
4	Ch Output (-)
5	Stand-by
6	Ch Input
7	GND (Input)
8	N.C
9	Volume

Note: Do not apply voltage or current to NC pin from outside

STV8225 (IC251)

Block Diagram

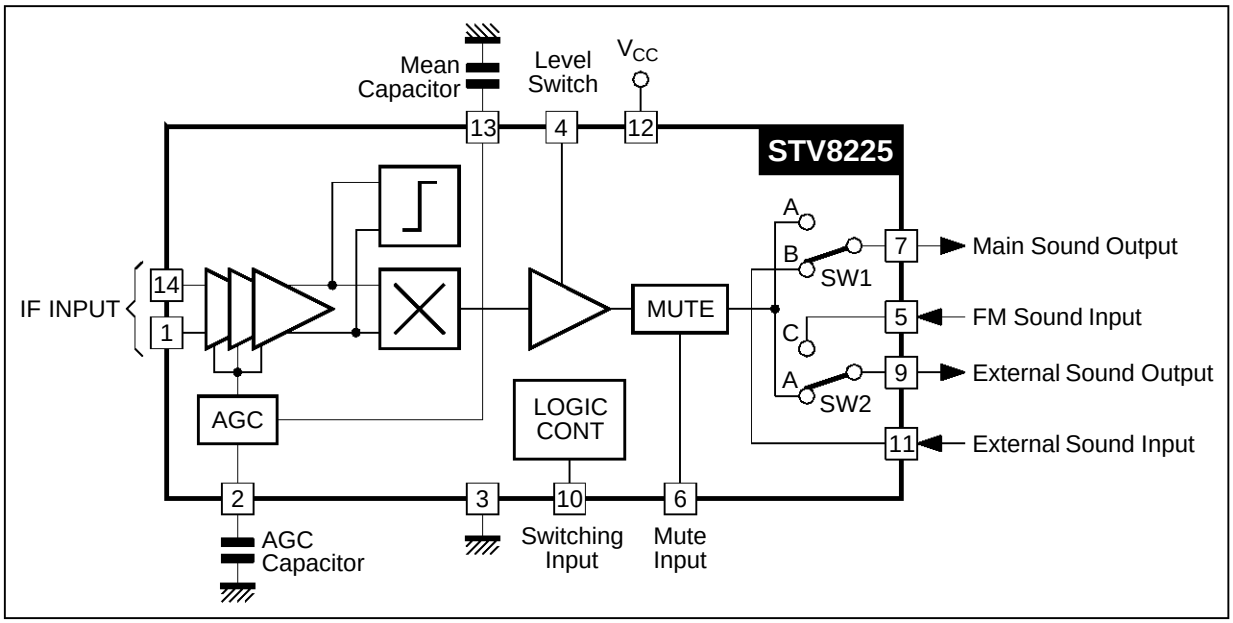

Pinning

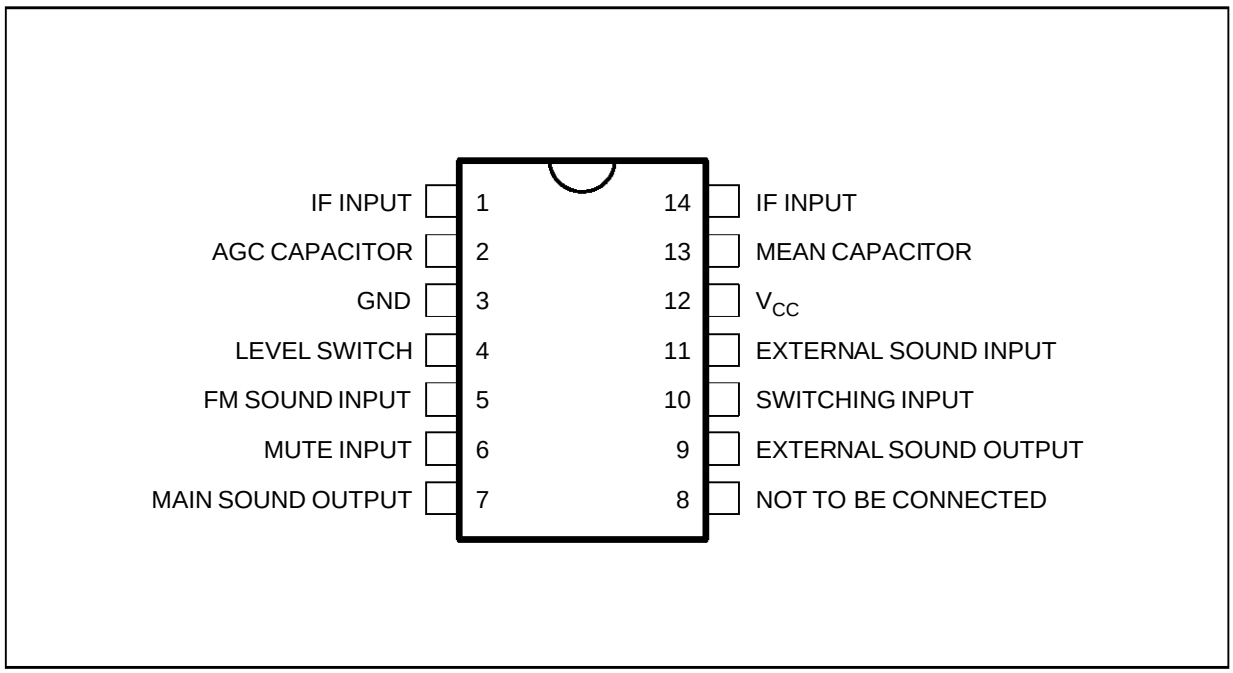

M62334FP (IC250)

http://www.mitsubishichips.com/data/datasheets/assps/assppdf/ds/M62334E.pdf

SOURCE OF DOCUMENTATION

1. **TDA93XX**, Philips Data Sheet:
   TDA935X/6X/8X PS/N2 series, TV signal processor-Teletext decoder with embedded μ-Controller.
   Tentative Device Specification, 2001 Aug 29, Version: 1.8.

2. **TEA1507**, Philips Data Sheet:
   TEA1507 GreenChipII SMPS controlIC. Preliminary specification, 2000Dec05.

3. **AN5522**, Matsushita Electronics Corporation Specifications:
   AN5522 Product Specifications. Doc No. SDSC-PSE-AN5522, Eff. Date 21-NOV-2000.

4. **AN7523**, Matsushita Electronics Corporation Specifications:
   AN7523 Product Specifications. Doc No. SDSC-PSE-AN7503, Eff. Date 23-FEB-01.

5. **STV8225**, SGS-Thomson Microelectronics Specifications:
   STV8225 Data Sheet. February 1995.

6. **M62334FP**, Mitsubishi Electrics Specifications:

   http://www.mitsubishichips.com/data/datasheets/assps/assppdf/ds/M62334E.pdf

SCHEMATIC DIAGRAMS

Description

SAFETY NOTE:
1. DISCONNECT THE AC PLUG FROM THE AC OUTLET BEFORE REPLACING PARTS.

2. SEMICONDUCTOR HEAT SINKS SHOULD BE REGARDED AS POTENTIAL SHOCK HAZARDS WHEN THE CHASSIS IS OPERATING.

IMPOTANT SAFETY NOTE:

PARTS MARKED WITH « ⚠ » ( ) ARE IMPORTANT FOR MAINTAINING THE SAFETY OF THE SET. BE SURE TO REPLACE THESE PARTS WITH SPECIFIED ONES FOR MAINTAINING THE SAFETY AND PERFORMANCE OF THE SET.

CAUTION
This circuit diagram is original one, therefore there may be slight difference from yours.

NOTE:
1. The unit of resistance «ohm»is omitted (K=1000 ohms. M= Megaohm).
2. All resistors are 1/16 watt. unless otherwise noted.
3. All capacitors are μF, unless otherwise noted (P= μμF).
4. The capacitor with Part No. RC-FZ9XXXBMNJ is designed to with stand 63V.
5. The capacitor with Part No. RC-FZ4XXXBMNJ is designed to with stand 50V.

SERVICE PRECAUTION:

THE AREA ENCLOSED BY THIS LINE (−•−•−) IS DIRECTLY CONNECTED WITH AC MAINS VOLTAGE.
WHEN SERVICING THE AREA, CONNECT AN ISOLATING TRANSFORMER BETWEEN TV RECEIVER AND AC LINE TO ELIMINATE HAZARD OF ELECTRIC SHOCK.

WAVEFORM MEASUREMENT CONDITION:
Colour bar generator signal of 70 dB from RF input.

Waveforms

① 1.0 Vp-p

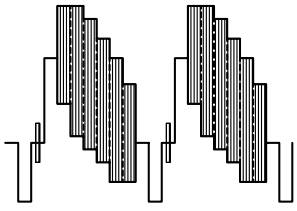

Horiz Rate

② 3.11 Vp-p

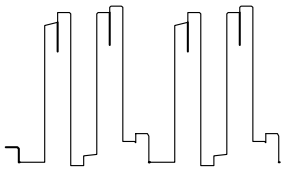

Horiz Rate

③ 3.3 Vp-p

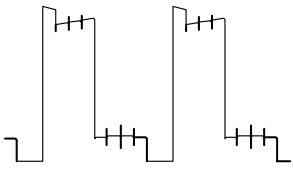

Horiz Rate

④ 3.58 Vp-p

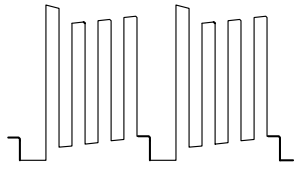

Horiz Rate

⑤ 79.6 Vp-p

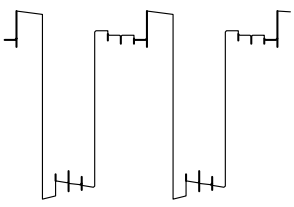

Horiz Rate

⑥ 92 Vp-p

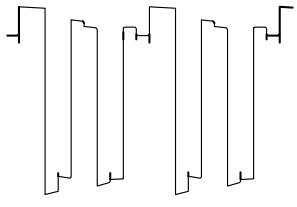

Horiz Rate

⑦ 90 Vp-p

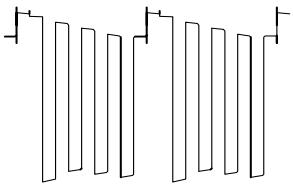

Horiz Rate

⑧ 3.14 Vp-p



Vert Rate

⑨ 2.58 Vp-p

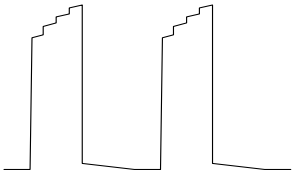

Horiz Rate

⑩ 120 Vp-p

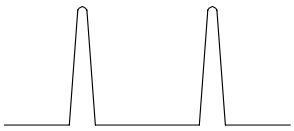

Horiz Rate

⑪ 9.2 Vp-p

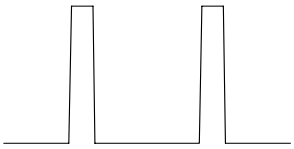

Horiz Rate

⑫ 0.14 Vp-p



Vert Rate

⑬ 0.192 Vp-p

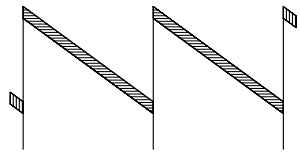

Vert Rate

⑭ 1.36 Vp-p

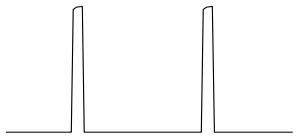

Vert Rate

⑮ 48.6 Vp-p



Vert Rate

⑯ 145 Vp-p

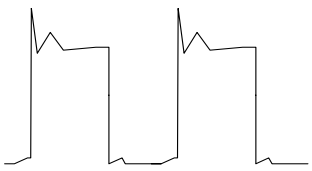

Horiz Rate

⑰ 1055 Vp-p

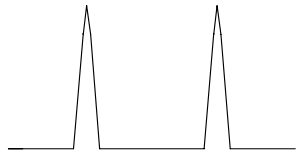

Horiz Rate

⑱ 612 Vp-p

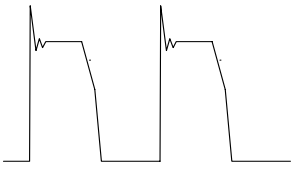

Vert Rate

⑲ 2.0 Vp-p

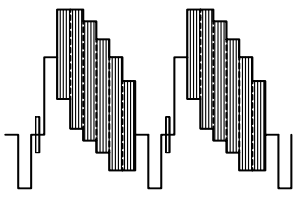

Horiz Rate

Schematic Diagram of CRT Unit (F7341N0, 00 Version)

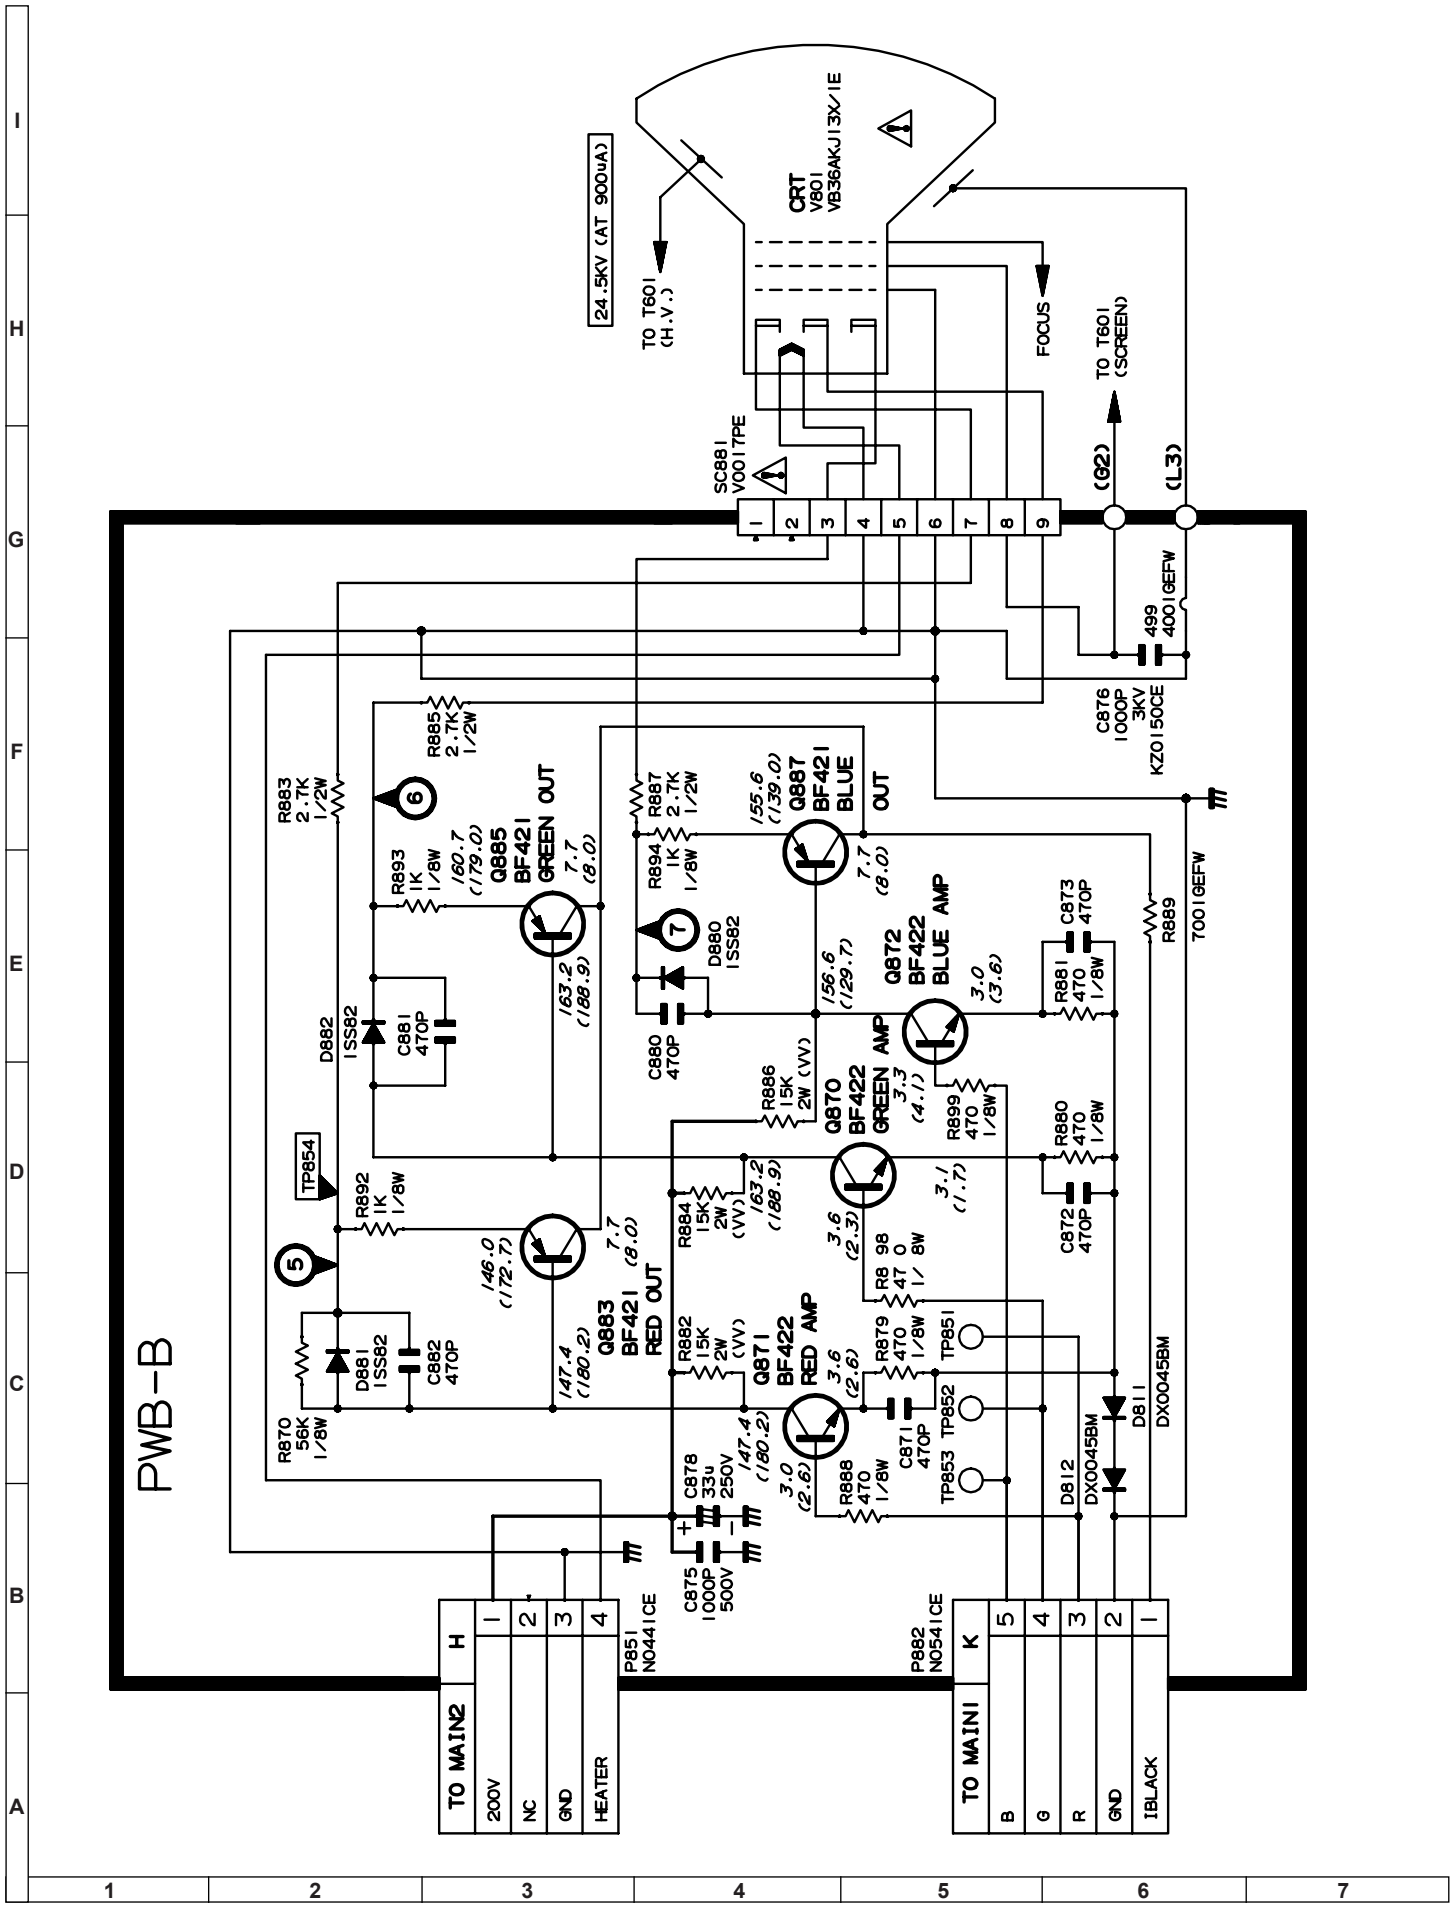

Schematic Diagram of Mother Unit (F7340N6, 00 Version)

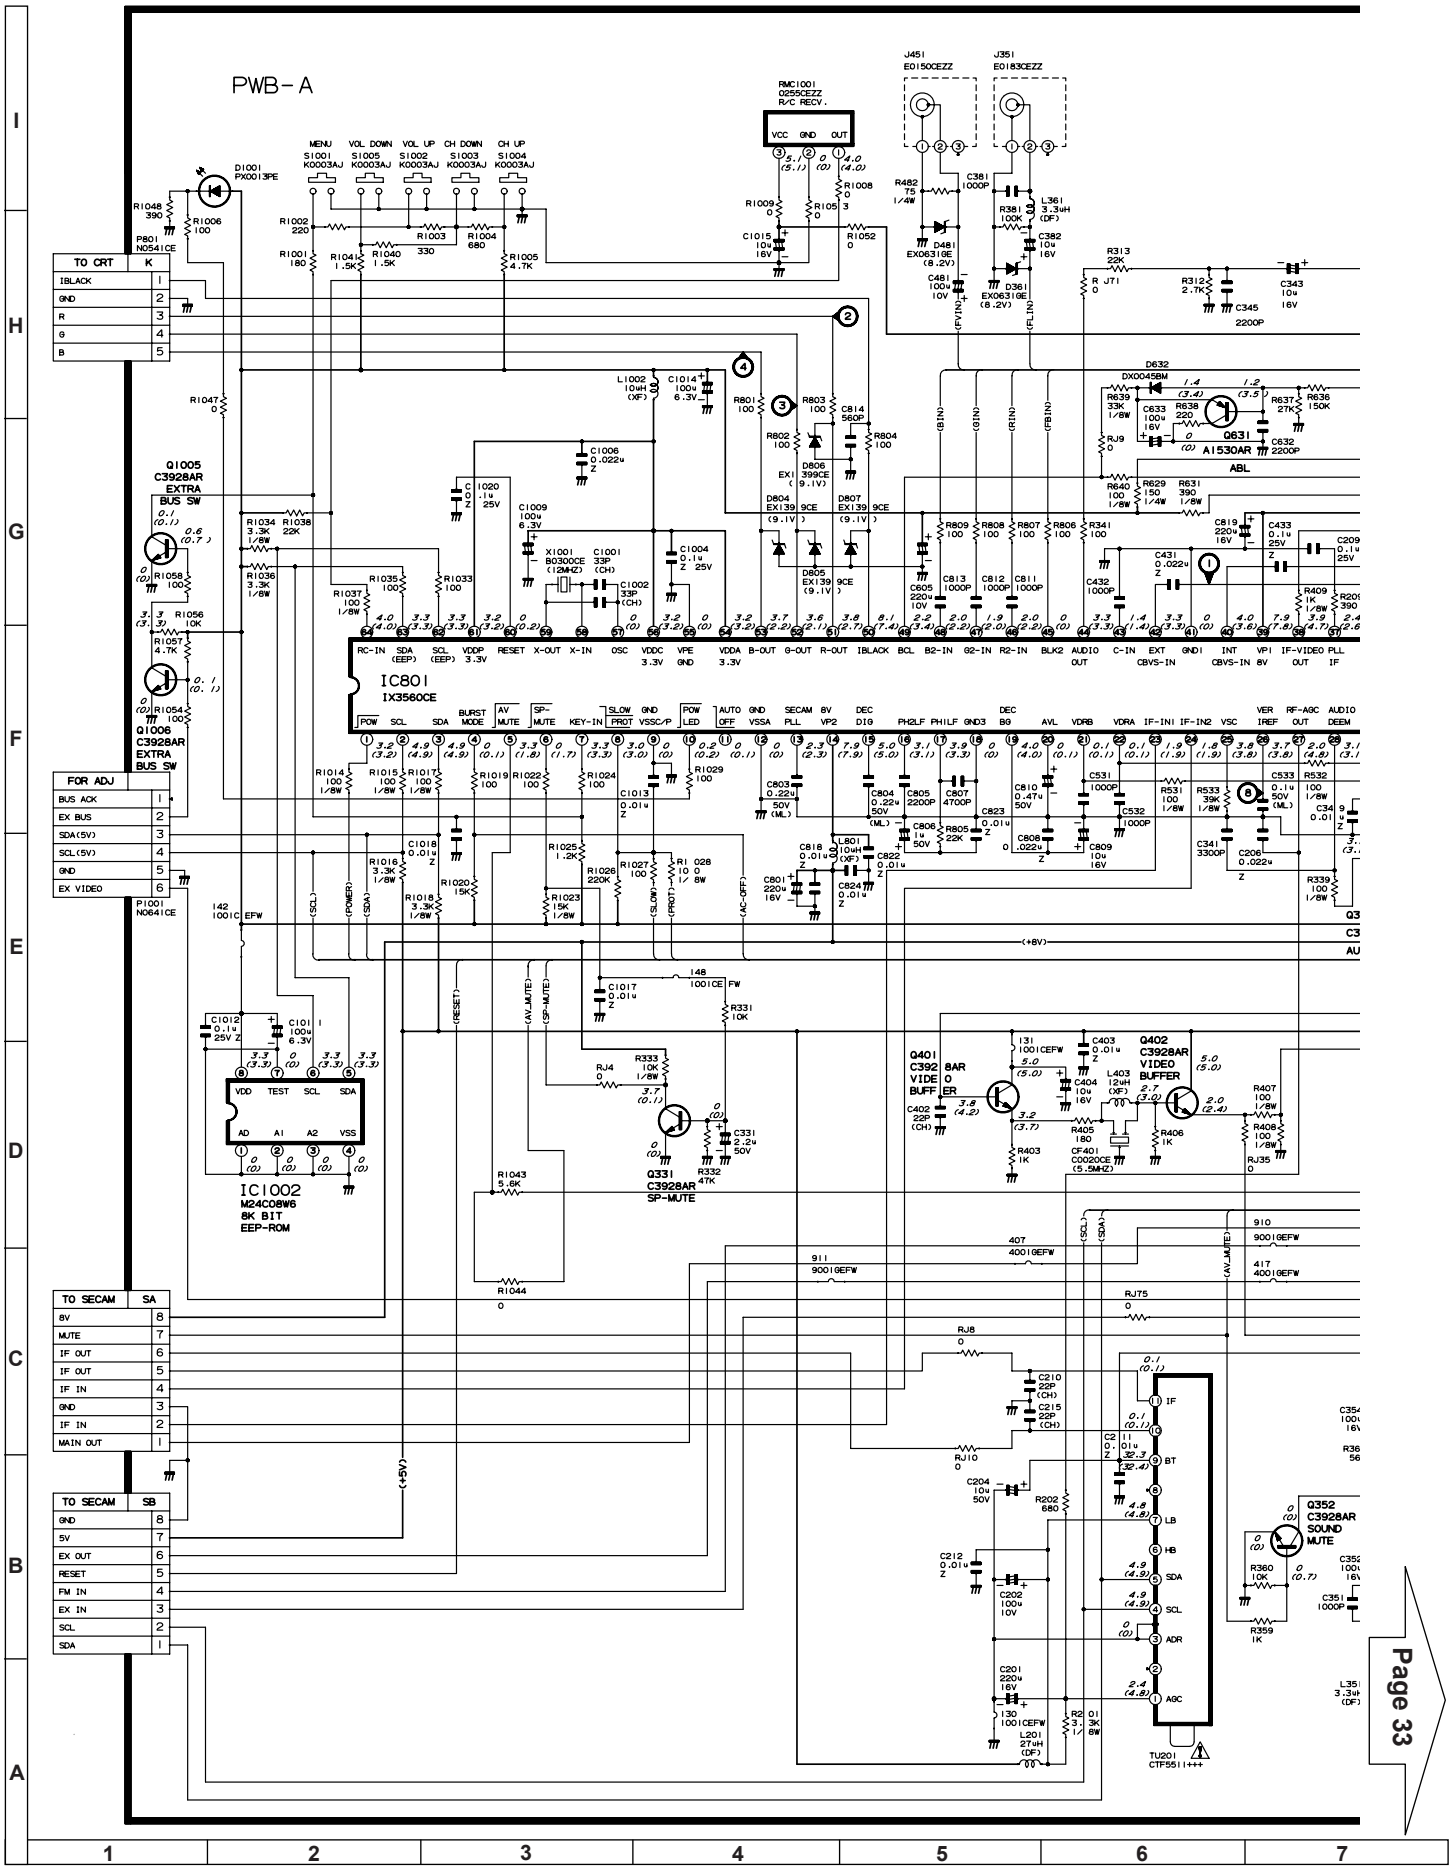

Schematic Diagram of Mother Unit (F7340N6, 00 Version)

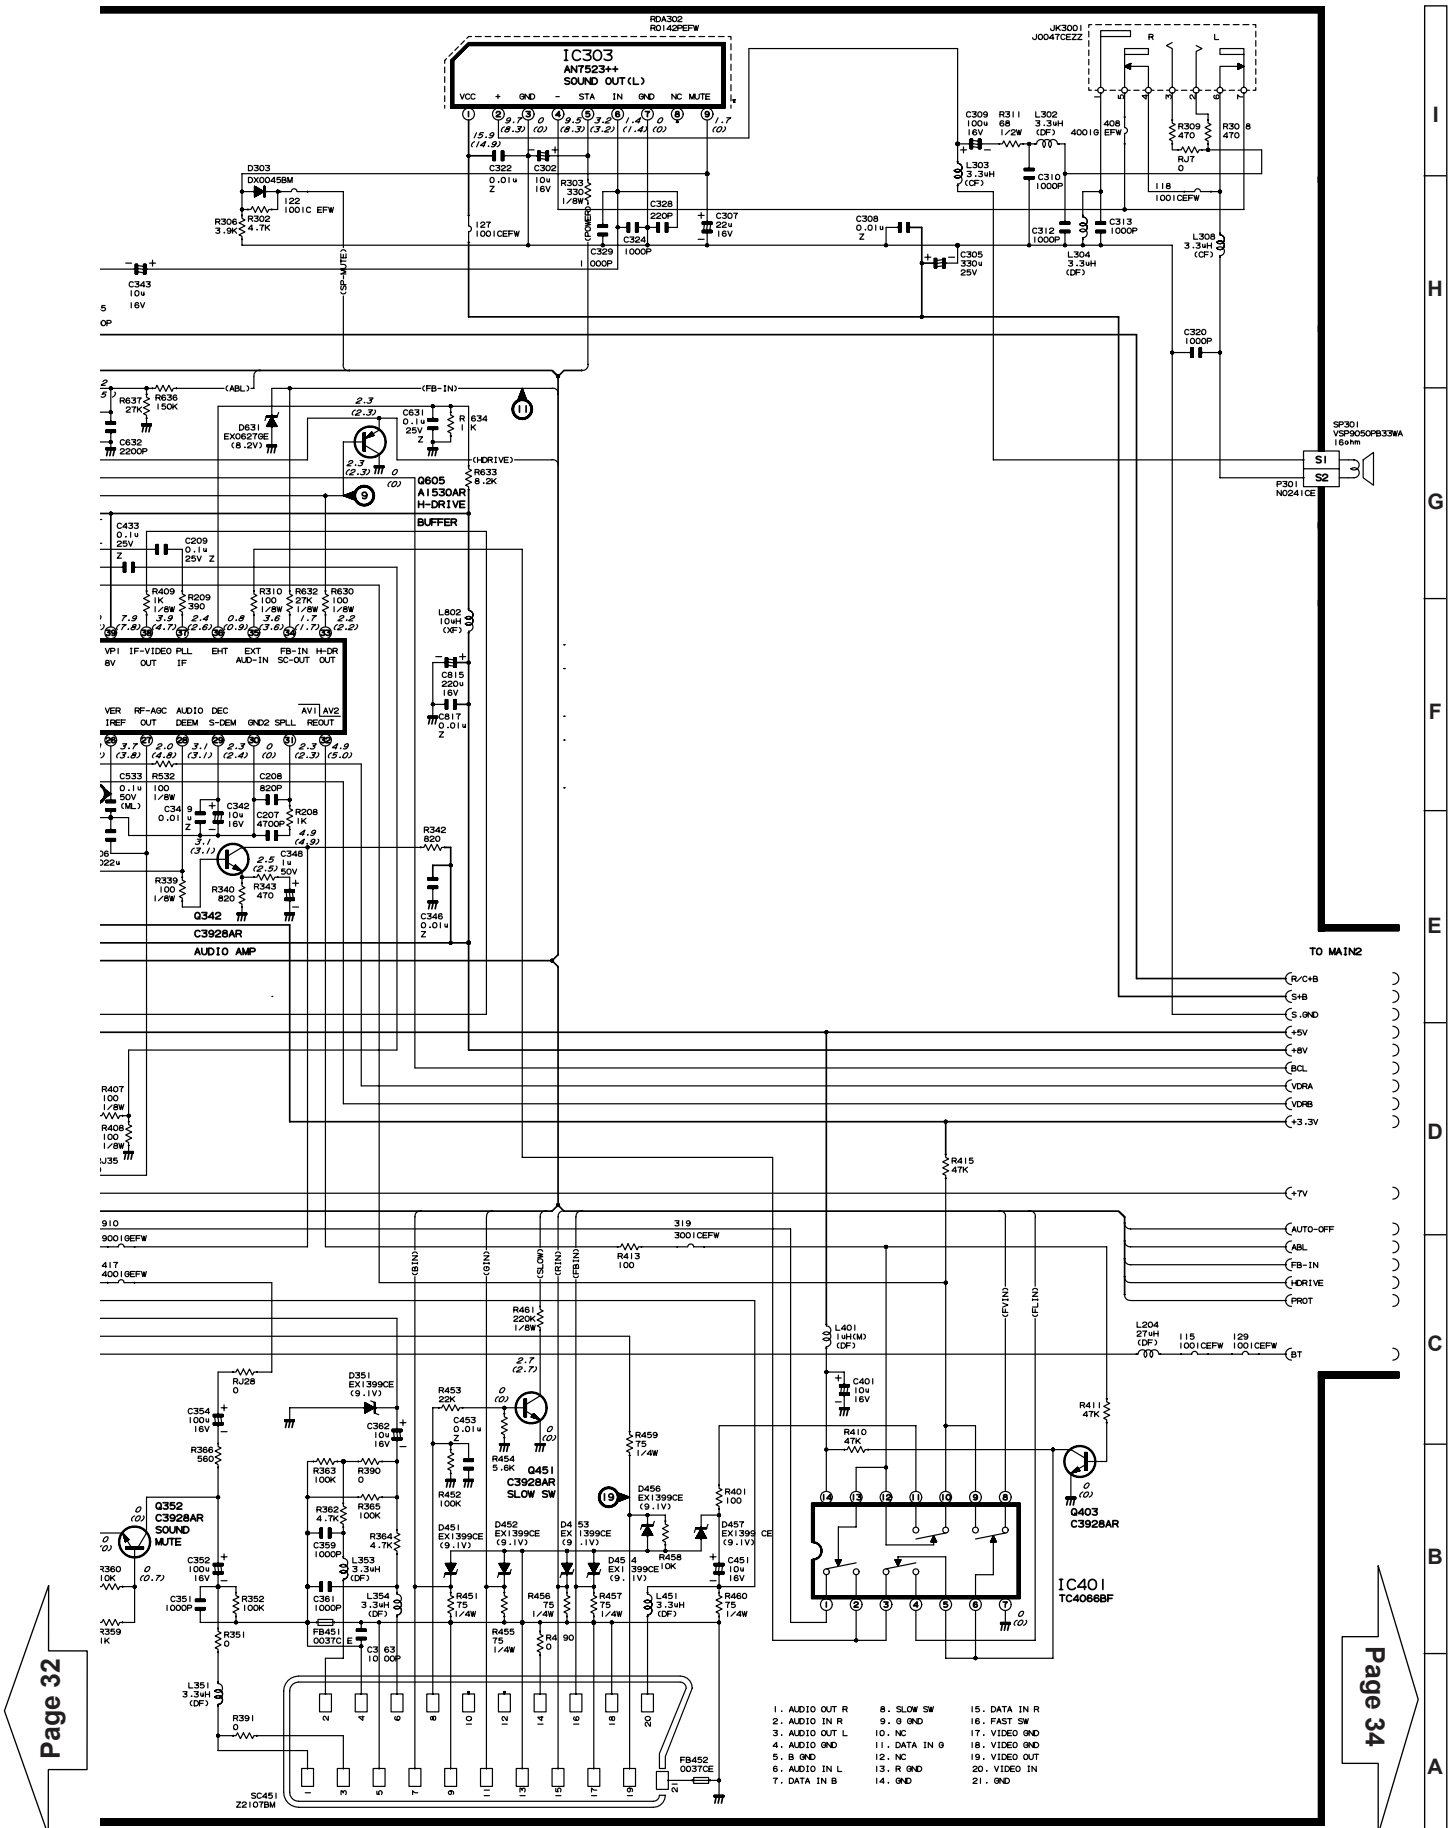

Page 32

Page 34

Schematic Diagram of Mother Unit (F7340N6, 00 Version)

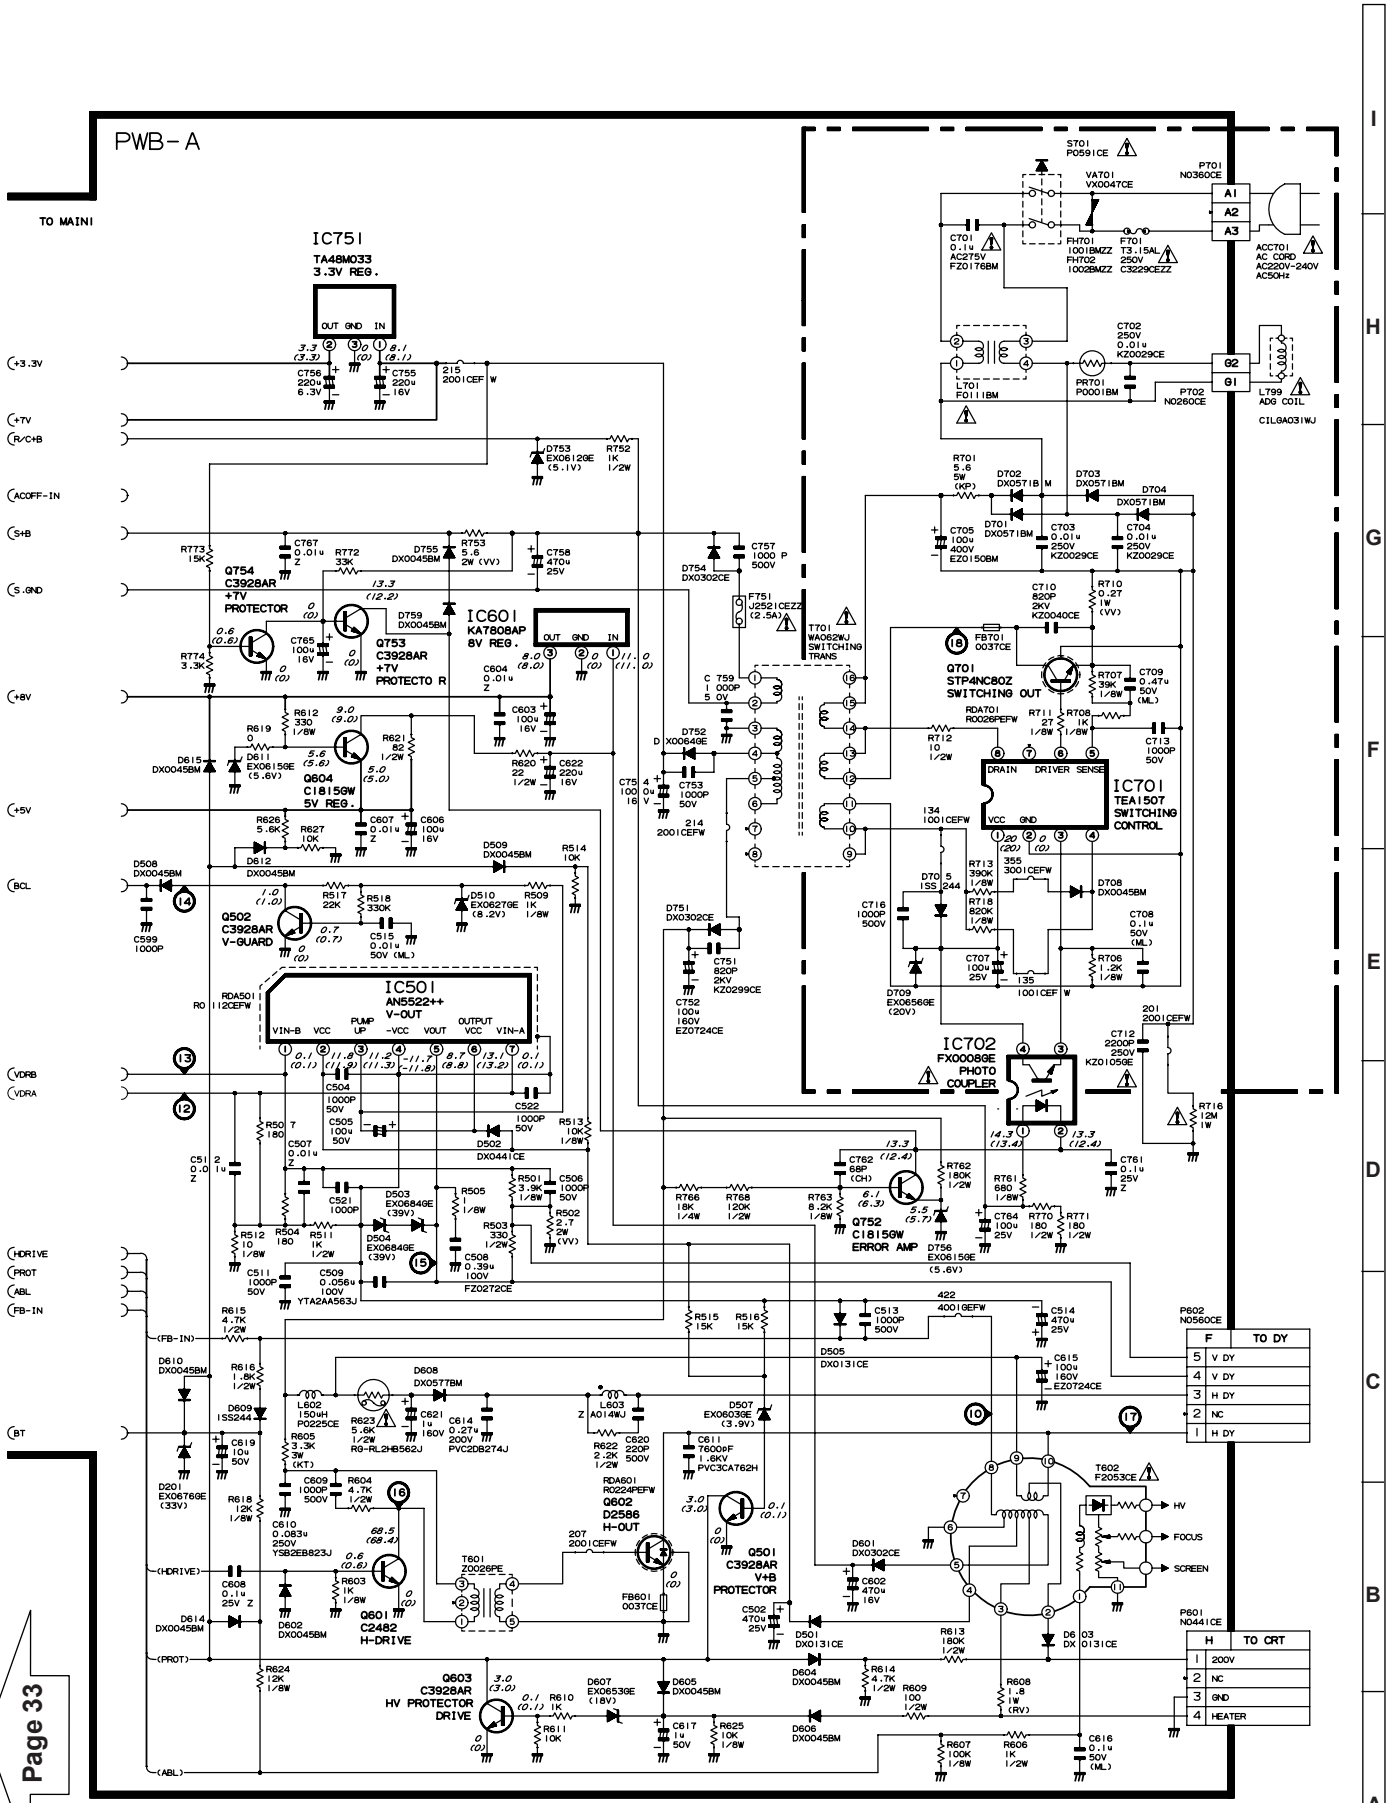

Schematic Diagram of Secam Unit (F7343N0, 00 Version)

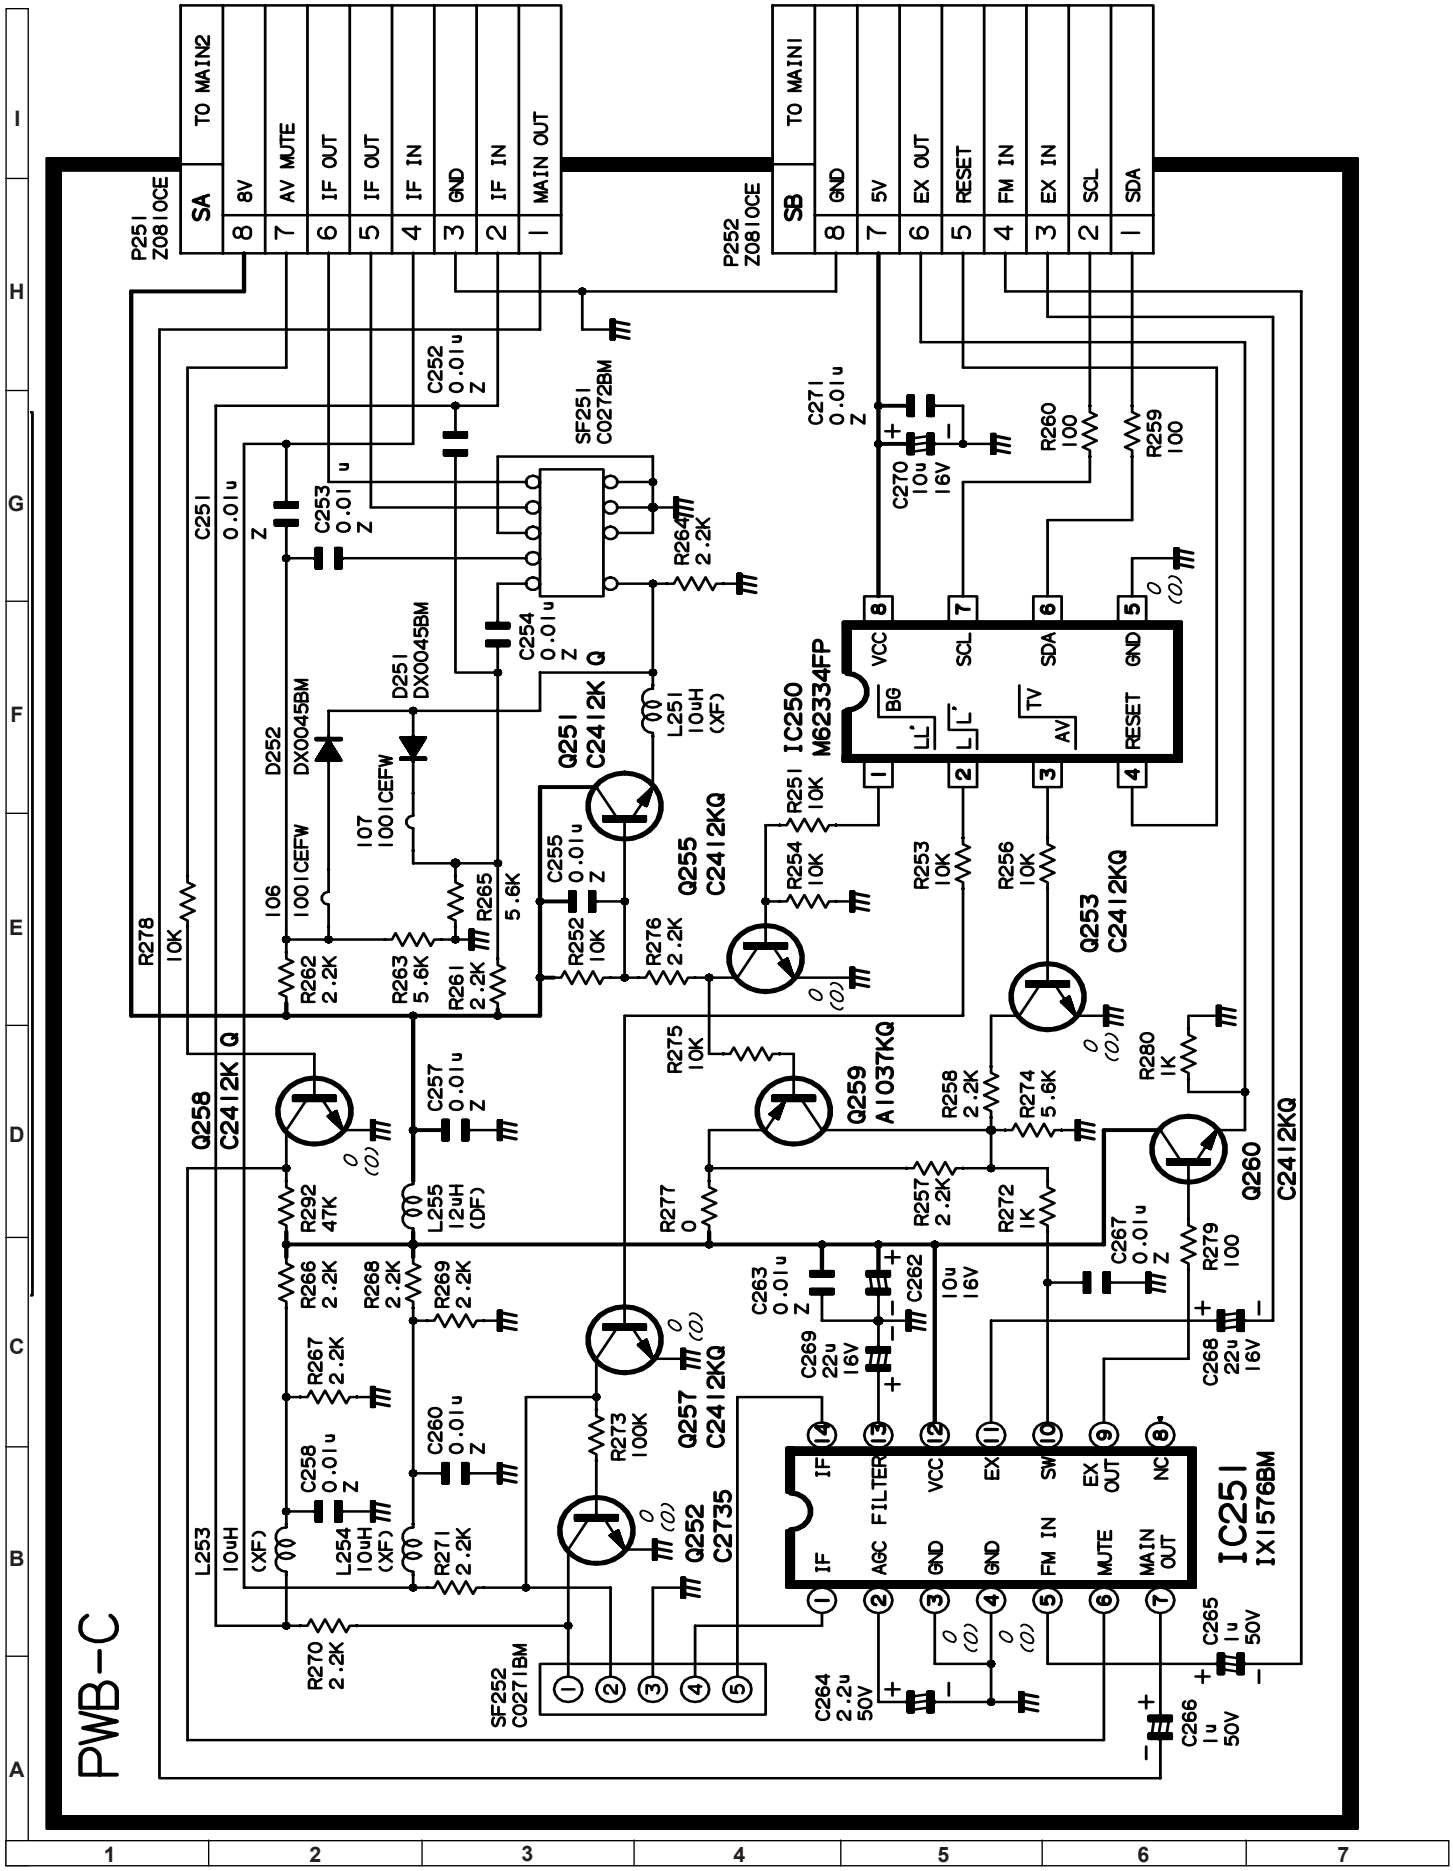

BLOCK DIAGRAMS

CRT Unit

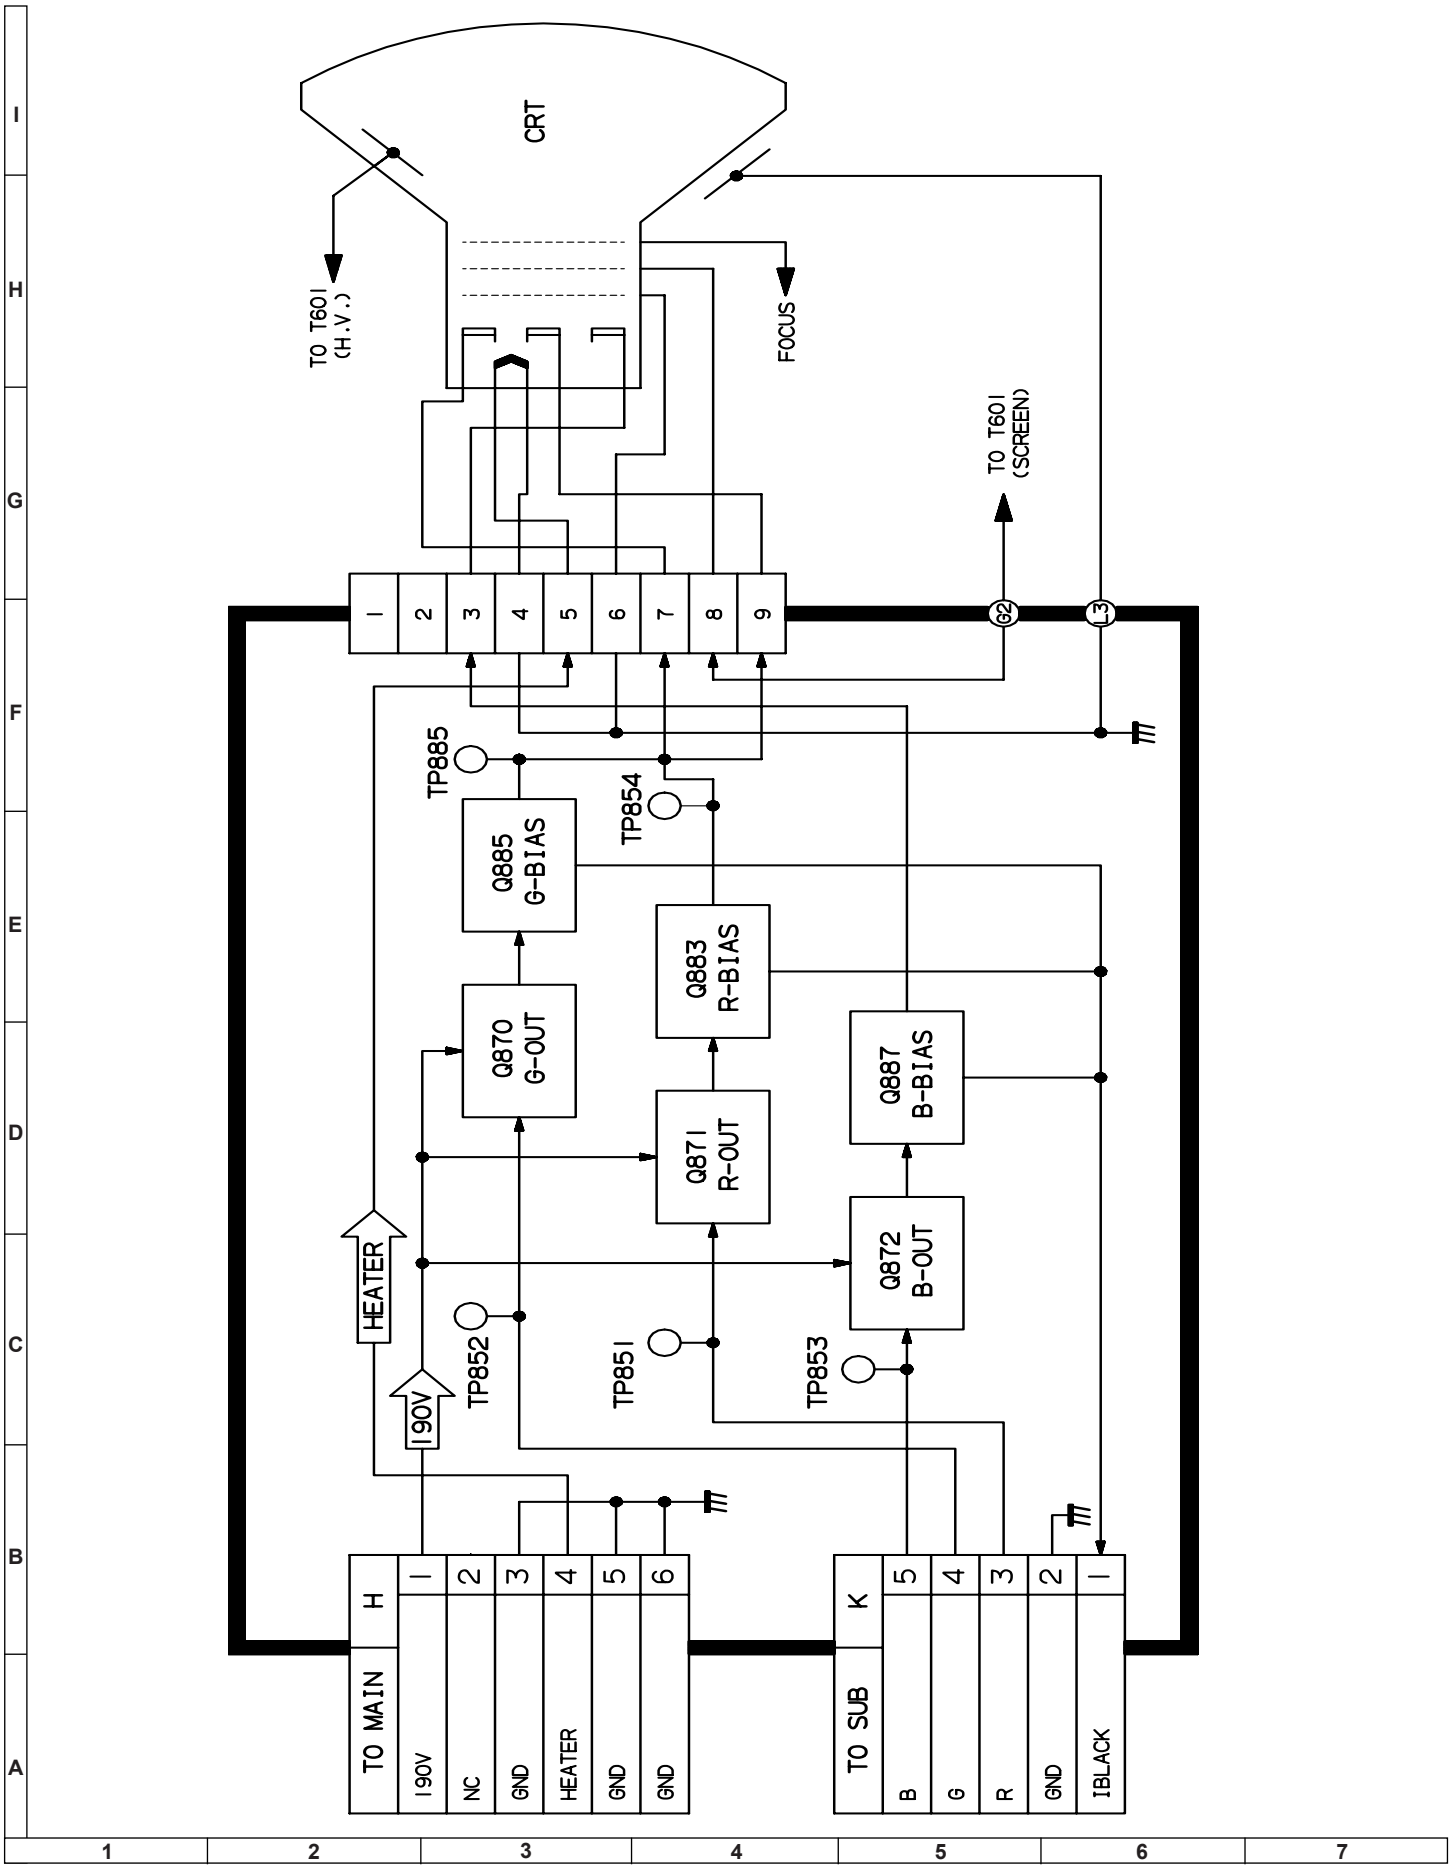

Mother Unit

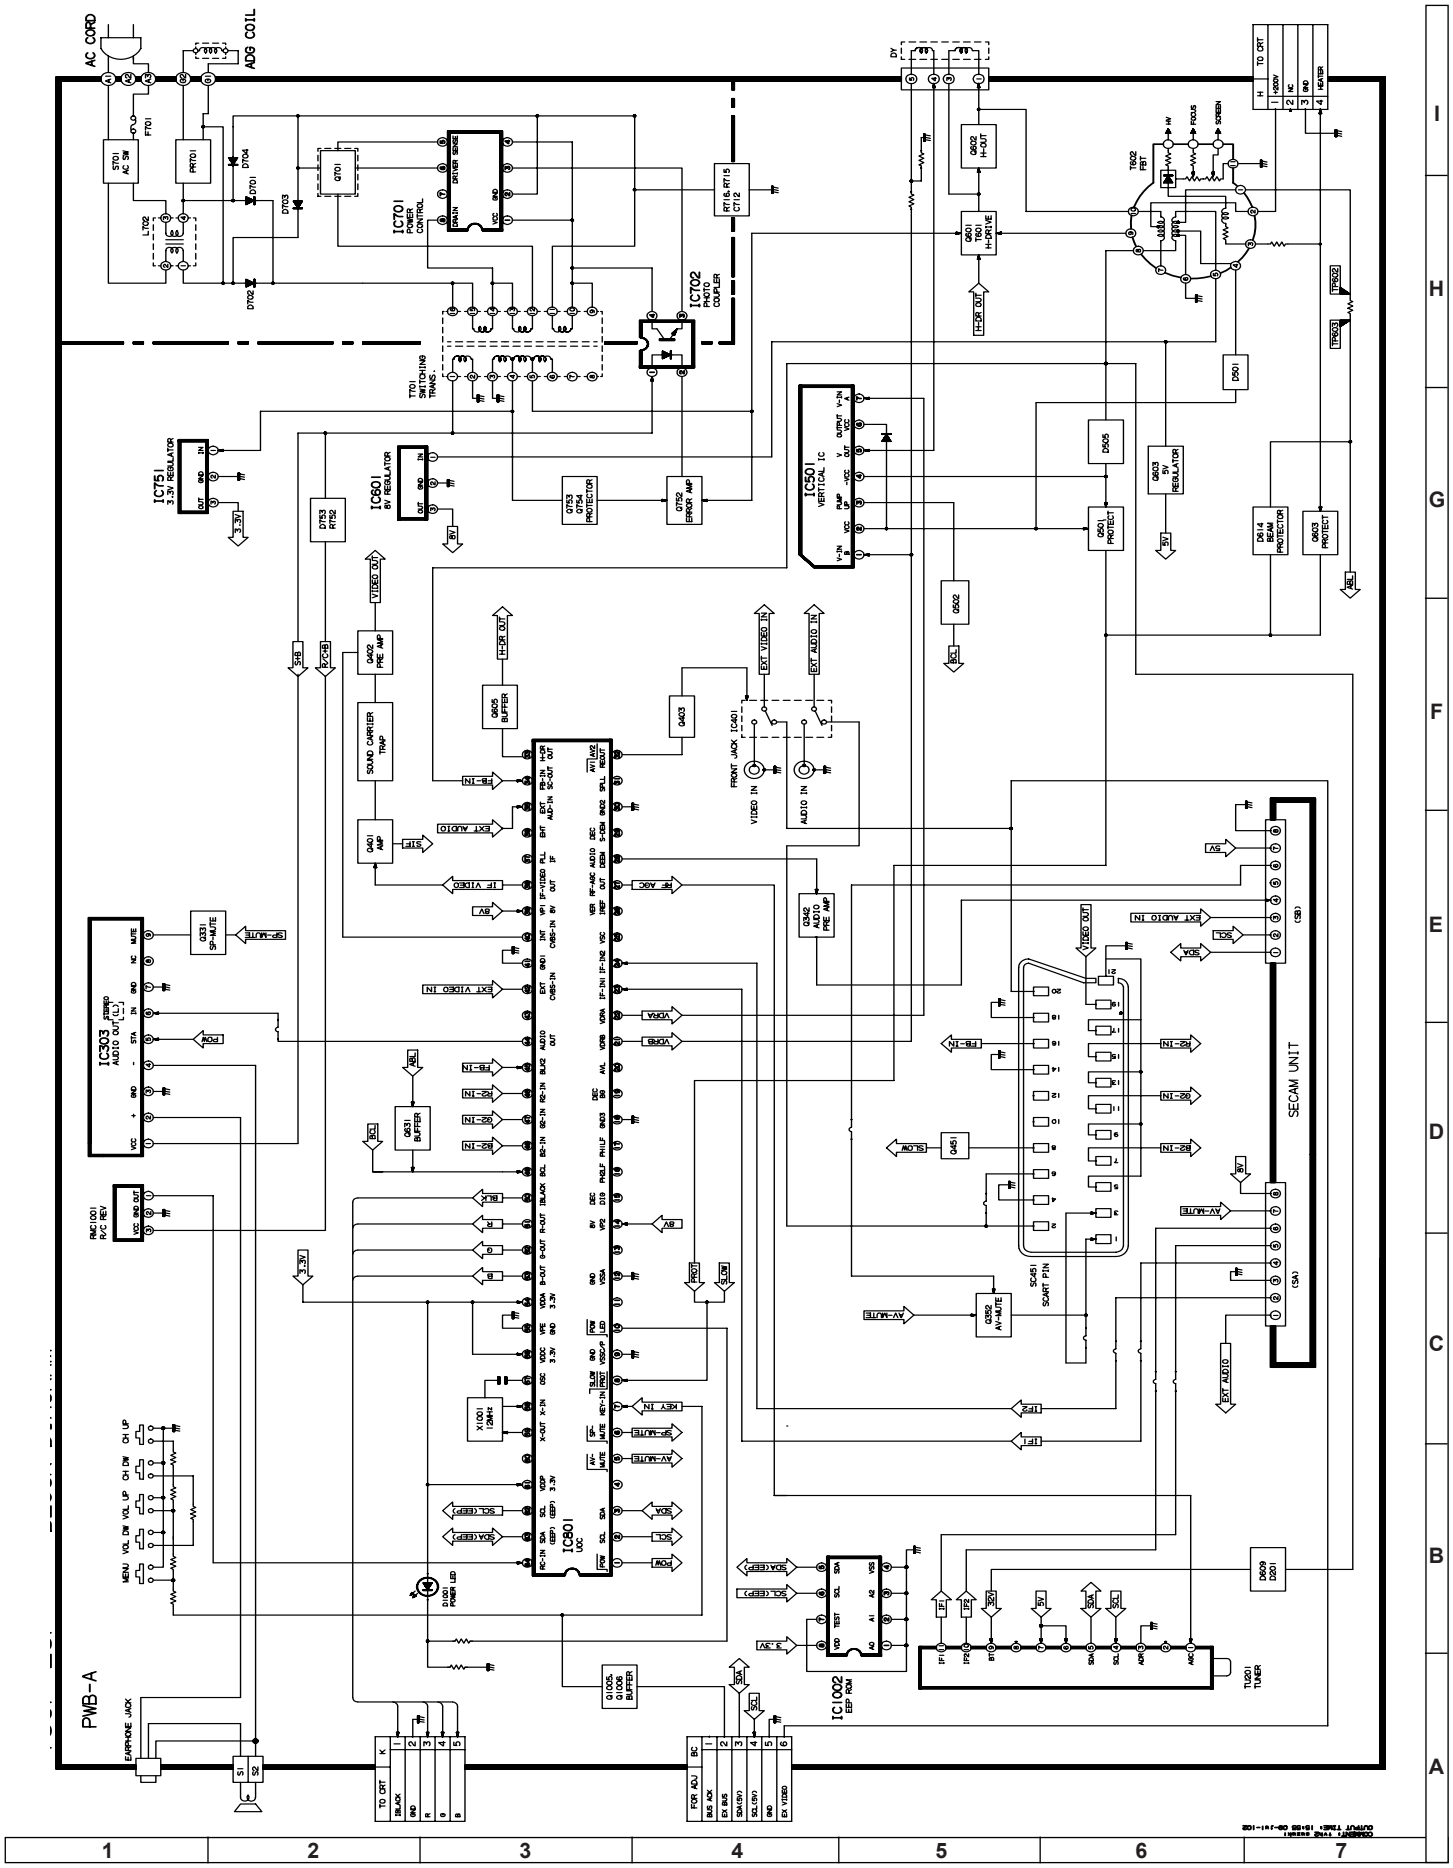
AC CORD
AC OUTLET
IC701 POWER CONTROL
IC702 PHOTO COUPLER
T701 SWITCHING TRANS.
IC751 3.3V REGULATOR
IC801 6V REGULATOR
IC501 VERTICAL IC
H-DRIVE
H-OUT
FBT
FOCUS
SCREEN
TO CRT
5V REGULATOR
BEAM PROTECTOR
PROTECT
ERROR AMP
SOUND CARRIER TRAP
PRE AMP
AMP
BUFFER
AUDIO PRE AMP
AV-MUTE
SP-MUTE
IC303 STEREO AUDIO OUT
IC801 MCU
X1001 12MHz
IC1002 EEP ROM
TU201 TUNER
SECAM UNIT
SCART PIN
FRONT JACK
VIDEO IN
AUDIO IN
EXT VIDEO IN
EXT AUDIO IN
VIDEO OUT
H-DRV OUT
PWB-A
EARPHONE JACK
CH UP
CH DW
VOL UP
VOL DW
MENU
PANEL LED
TO CRT
FOR ADJ
I
H
G
F
E
D
C
B
A
1
2
3
4
5
6
7

Secam Unit

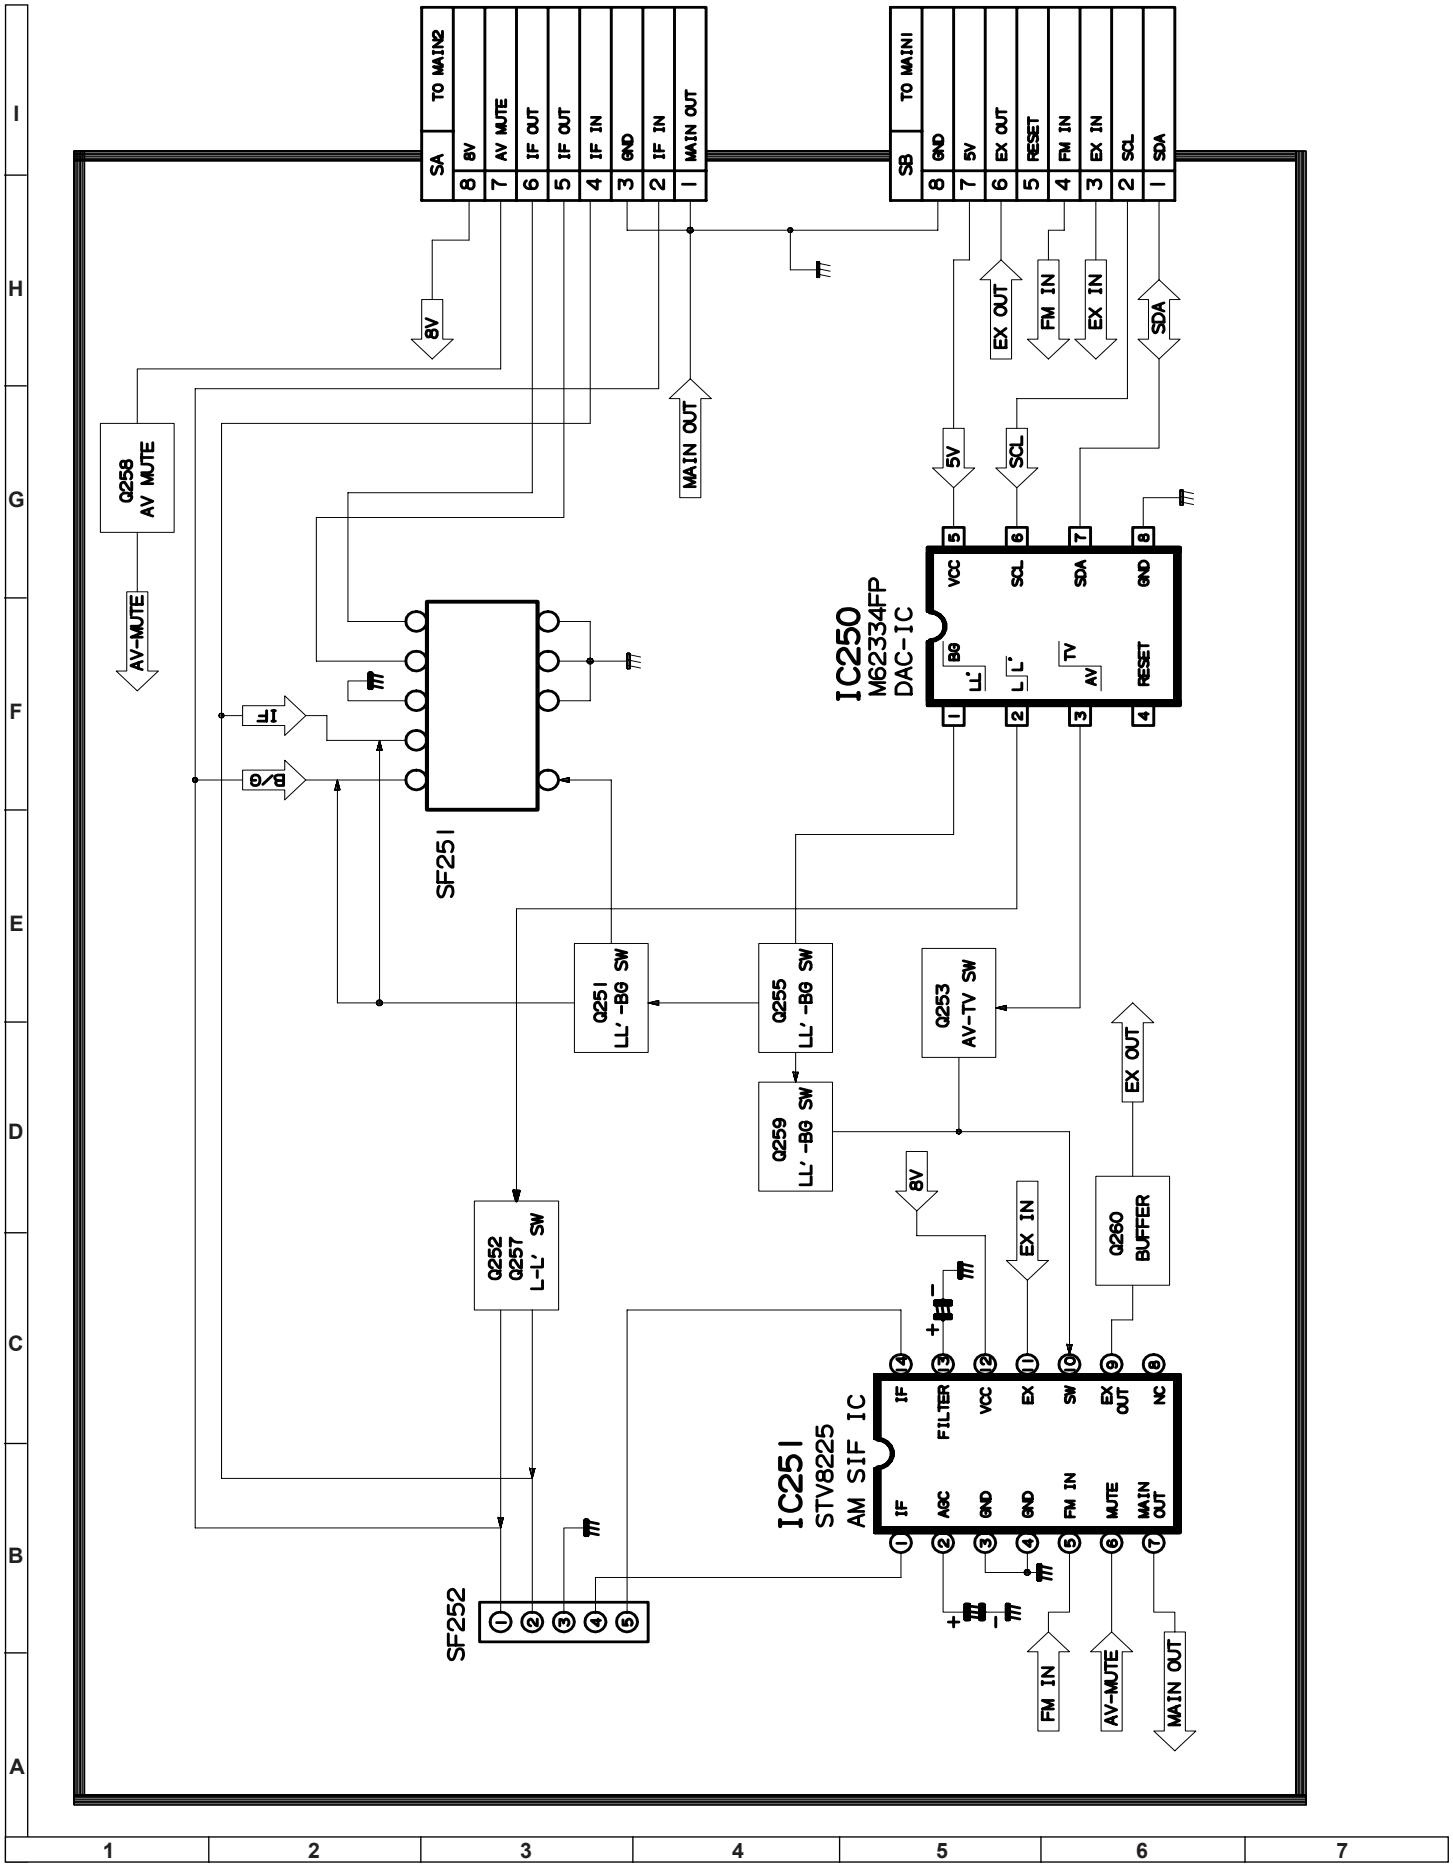
SA
TO MAIN2
8V
AV MUTE
IF OUT
IF OUT
IF IN
GND
IF IN
MAIN OUT
SB
TO MAIN1
GND
5V
EX OUT
RESET
FM IN
EX IN
SCL
SDA
Q258
AV MUTE
AV-MUTE
IC250
M62334FP
DAC-IC
VCC
SCL
SDA
GND
B6
LL'
L/L'
TV
AV
RESET
SF251
IF
B/G
Q251
LL'-B6 SW
Q255
LL'-B6 SW
Q253
AV-TV SW
Q259
LL'-B6 SW
Q260
BUFFER
Q252
Q257
L-L' SW
IC251
STV8225
AM SIF IC
IF
FILTER
VCC
EX
SW
EX OUT
NC
IF
AGC
GND
GND
FM IN
MUTE
MAIN OUT
SF252
FM IN
AV-MUTE
MAIN OUT

TROUBLESHOOTING TABLES

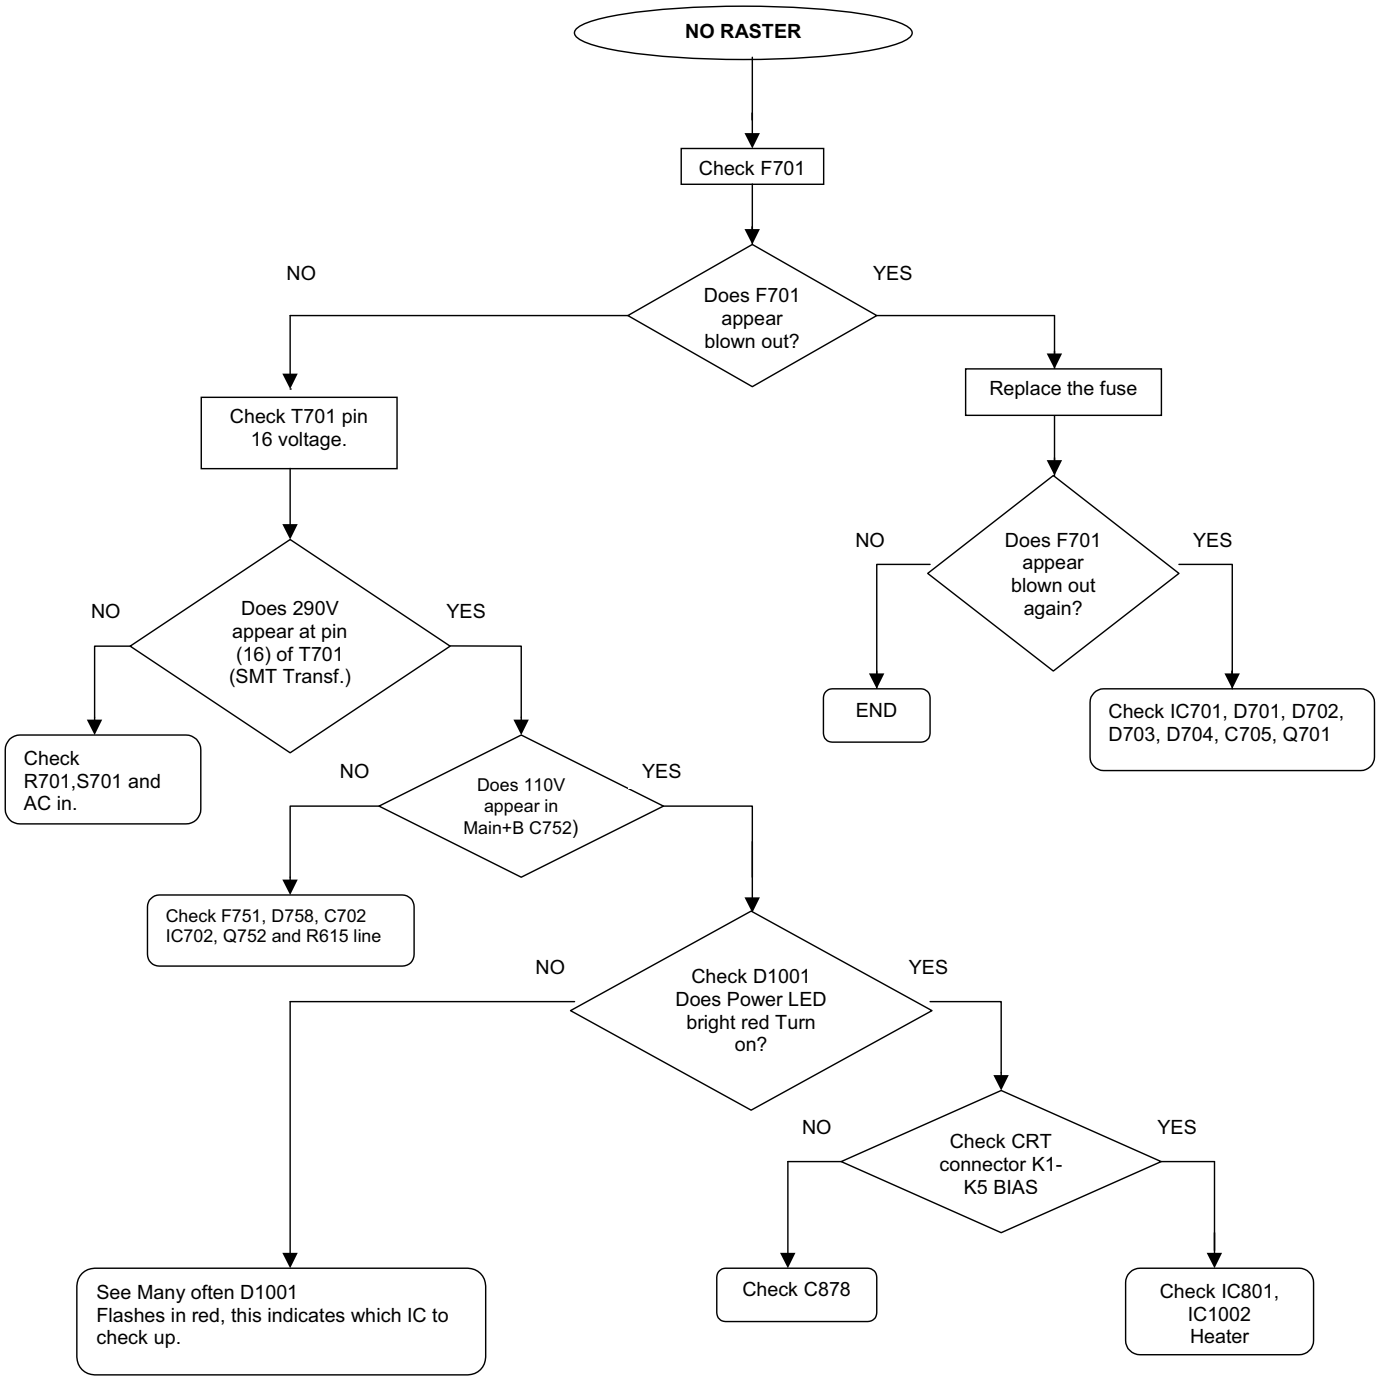

Power LED Flashes

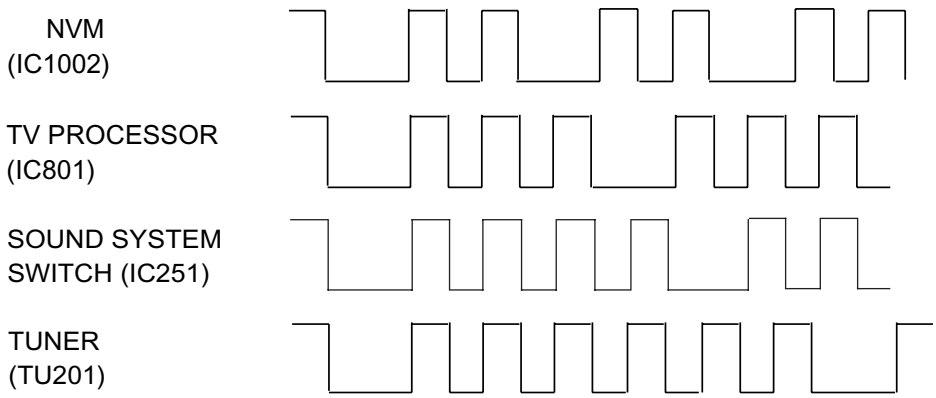

NEITHER VERTICAL NOR HORIZONTAL SYNCHRONIZATION

CIRCUIT TO BE CHECKED:
Sync. Separator Circuit.

Check pin33 and 34 of IC801.

DEFECTIVE VERTICEL AMP. AND VERTICAL LINEARITY

Readjusted vertical size. (Bass Data)

Vertical linearity and size is abnormal.

Check R502,R505

NO VERTICAL SCAN

Check IC501 bias.

Normal

Check C502 and C514.

Abnormal

Check IC501.

NO SPECIFIC COLOUR

Is some colour produced in B/W broadcast reception?

NO

Check IC801,R801,R802, R803,D804,D805,D806 and Q801.

YES

Is the white balance properly adjusted?

NO

Readjusted the white balance.

YES

The picture colour is cyan.

Check Q870,Q885 and their adjacent circuits.

The picture colour is magenta.

Check Q871,Q883 and their adjacent circuits.

The picture colour is yellow.

Check Q872,Q887 and their adjacent circuits.

NO PICTURE, NO SOUND

CIRCUITS TO BE CHECKED:
Tuner.
PIF.
Automatic Gain Control.
5V, 32V Power Source.

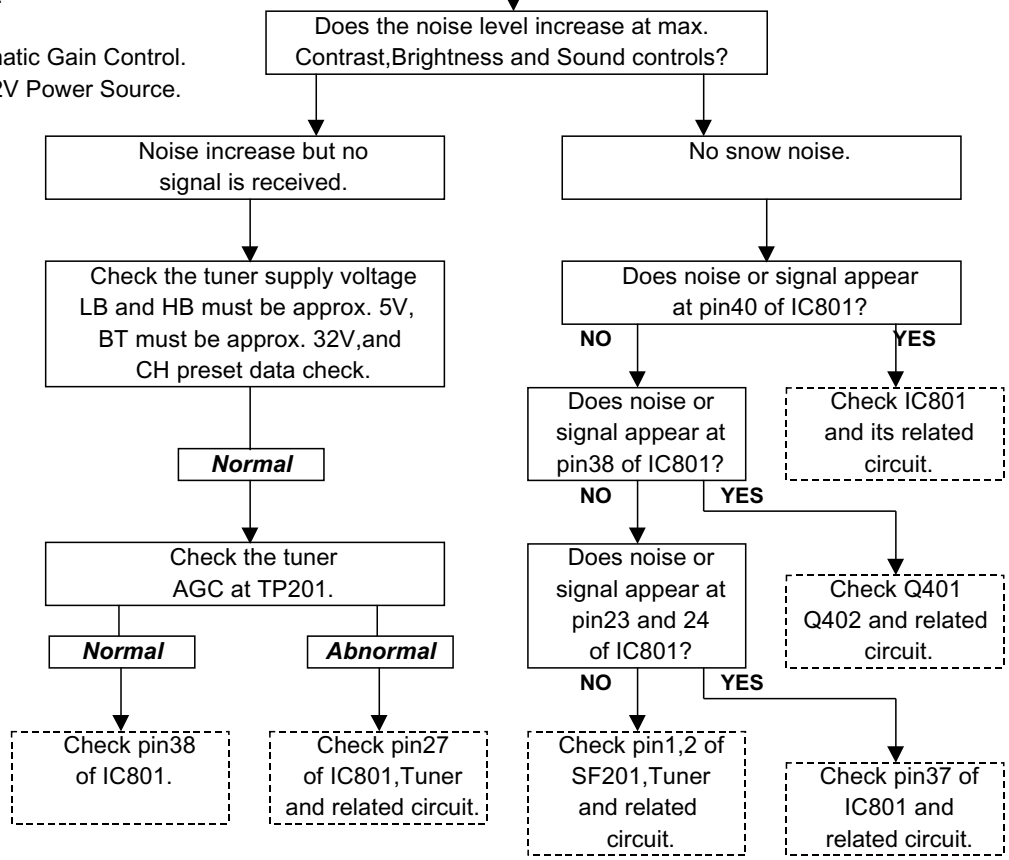
Does the noise level increase at max. Contrast,Brightness and Sound controls?
Noise increase but no signal is received.
No snow noise.
Check the tuner supply voltage LB and HB must be approx. 5V, BT must be approx. 32V,and CH preset data check.
Does noise or signal appear at pin40 of IC801?
NO
YES
Normal
Does noise or signal appear at pin38 of IC801?
Check IC801 and its related circuit.
NO
YES
Check the tuner AGC at TP201.
Does noise or signal appear at pin23 and 24 of IC801?
Check Q401 Q402 and related circuit.
Normal
Abnormal
NO
YES
Check pin38 of IC801.
Check pin27 of IC801,Tuner and related circuit.
Check pin1,2 of SF201,Tuner and related circuit.
Check pin37 of IC801 and related circuit.

NO SOUND

CIRCUITS TO BE CHECKED:
Audio Output Circuit.

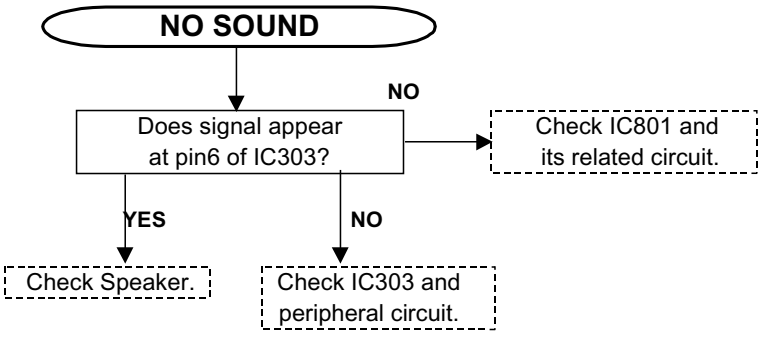

PARTS LISTING

REPLACEMENT PARTS

Replacement parts which have special safety characteristics are identified in this manual. Electrical components having such features are identified by ⚠ in the Replacement Parts Listing.
The use of a substitute replacement part which does not have the same safety characteristics as the factory recommended is not permitted.
Replacement parts not shown in this service manual may create shock fire, or other hazards.

HOW TO ORDER REPLACEMENT PARTS

To have your order completed promptly and correctly please supply the following information.

1. MODEL NUMBER 2. REF. NO.
3. PART NO. 4. DESCRIPTION
5. CODE 6. QUANTITY

MARK *: SPARE PARTS DELIVERY SECTION

	REF No.	PARTS	DESCRIPTION	*	SN CODE	EX CODE
			PICTURE TUBE			
⚠		VB36AKJ13X/1E	15" FLAT A36AKJ13X01 CHUNGWA	S	AC	AK
⚠		RCILGA031WJZZ	ADG COIL 15" FLAT	S	AD	AM
			PRINTED WIRING BOARD (Not replacement item)			
	PWB-A	DUNTK7340CJW6	ADJUST CHASSIS 15JF25F	S		
	PWB-B	DUNTK7341BMW4	CRT UNIT	S	AK	AW
	PWB-C	DUNTK7343BMV0	SECAM INS HAND	S	AR	BC
	PWB-A		**MOTHER UNIT**			
			TUNER			
	TU 0201	VTUCTF5511+++	TUNER THOMSON	S	AN	AZ
			INTEGRATED CIRCUITS			
	IC 0303	VHIAN7523++-1	IC AN7523 MATSUSHITA	S	AC	AH
	IC 0401	VHITC4066BF1E	IC TC4066BF TOSHIBA	S	AA	AE
	IC 0501	VHIAN5522++-1	IC AN5523 MATSUSHITA	S	AC	AG
	IC 0601	VHIKA7808AP-1	IC KIA7808API KOREA ELECTRONICS	S	AA	AE
	IC 0701	VHITEA1507/-1	IC TEA1507P/N1 PHILIPS	S	AC	AH
⚠	IC 0702	RH-FX0008GEZZ	P/COUPLER RANK-S SHARP	S	AA	AD
	IC 0751	VHITA48M033-1	IC TA48M033F(S) TOSHIBA	S	AB	AF
	IC 0801	RH-IX3560CEN1	IC TDA9351PS/N2 PHILIPS	S	AV	BG
	IC 1002	VHIM24C08W6-1	IC M24C08-WMN6T ST MICRO	S	AB	AF
			TRANSISTORS			
	Q 0331	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0342	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0352	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0401	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0402	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0403	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0451	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0501	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0502	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0601	VS2SC2482//-1	TRT 2SC2482 TOSHIBA	S	AA	AC
	Q 0602	VS2SD2586//1E	TRT 2SD2586 TOSHIBA	S	AC	AK
	Q 0603	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0604	VS2SC1815GW-1	TRT NPN 60V 150MA 400MW	S	AA	AA
	Q 0605	VS2SA1530ARS1	smt transistor	S	AA	AA
	Q 0631	VS2SA1530ARS1	smt transistor	S	AA	AA
	Q 0701	VSSTP4NC80Z1E	MOS FET STP4NC80ZFP TOMEN	S	AC	AH
	Q 0752	VS2SC1815GW-1	TRT NPN 60V 150MA 400MW	S	AA	AA
	Q 0753	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0754	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 1005	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 1006	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
			DIODES			
	D 0201	RH-EX0676GEZZ	ZENER DIODE MTZJ33CT ROHM	S	AA	AA
	D 0303	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0351	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0361	RH-EX0631GEZZ	ZENER DIODE MTZJ9.1CT ROHM	S	AA	AA
	D 0451	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0452	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0453	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0454	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0456	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0457	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0481	RH-EX0631GEZZ	ZENER DIODE MTZJ9.1CT ROHM	S	AA	AA
	D 0501	RH-DX0131CEZZ	DIODE EU-1 SANKEN	S	AA	AB
	D 0502	RH-DX0441CEZZ	DIODE IN4002G23 GENERAL INSTRUMENT	S	AA	AB
	D 0503	RH-EX0684GEZZ	ZENER DIODE MTZJ39BT ROHM	S	AA	AA
	D 0504	RH-EX0684GEZZ	ZENER DIODE MTZJ39BT ROHM	S	AA	AA
	D 0505	RH-DX0131CEZZ	DIODE EU-1 SANKEN	S	AA	AB
	D 0507	RH-EX0603GEZZ	Z.DIODE MTZJ 3.9A	S	AA	AA
	D 0508	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0509	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0510	RH-EX0627GEZZ	ZENER DIODE MTZJ8.2BT ROHM	S	AA	AA
	D 0601	RH-DX0302CEZZ	DIODE UZA	S	AA	AB
	D 0602	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0603	RH-DX0131CEZZ	DIODE EU-1 SANKEN	S	AA	AB
	D 0604	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0605	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0606	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0607	RH-EX0653GEZZ	DIODE ZENER MTZJ18C ROHM	S	AA	AA
	D 0608	RH-DX0577BMZZ	DIODE 1N4935 ACPA	S	AB	AE
	D 0609	VHD1SS244//-1	SW DIODE 1SS244T-72	S	AA	AA
	D 0610	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0611	RH-EX0615GEZZ	ZENER DIODE 5.6V	S	AA	AA
	D 0612	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0614	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0615	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0631	RH-EX0627GEZZ	ZENER DIODE MTZJ8.2BT ROHM	S	AA	AA
	D 0632	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0701	RH-DX0571BMZZ	DIODE 1N4005 ACPA	S	AA	AA
	D 0702	RH-DX0571BMZZ	DIODE 1N4005 ACPA	S	AA	AA
	D 0703	RH-DX0571BMZZ	DIODE 1N4005 ACPA	S	AA	AA
	D 0704	RH-DX0571BMZZ	DIODE 1N4005 ACPA	S	AA	AA
	D 0705	VHD1SS244//-1	SW DIODE 1SS244T-72	S	AA	AA
	D 0708	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0709	RH-EX0656GEZZ	ZENER DIODE MTZJ20C ROHM	S	AA	AA
	D 0751	RH-DX0302CEZZ	DIODE UZA	S	AA	AB
	D 0752	RH-DX0064GEZZ	DIODE AK04V1 SANKEN	S	AA	AC
	D 0753	RH-EX0612GEZZ	ZENER DIODE MTZJ5.1BT ROHM	S	AA	AA
	D 0754	RH-DX0302CEZZ	DIODE UZA	S	AA	AB
	D 0755	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0756	RH-EX0615GEZZ	ZENER DIODE 5.6V	S	AA	AA
	D 0759	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0804	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0805	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0806	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0807	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 1001	RH-PX0013PEZZ	LED L-53ID-13.95L/F	S	AA	AB
			PACKAGED CIRCUITS			
	PR 0701	RMPTP0001BMZZ	PTC B59250-C1080-B70	S	AA	AD
	X 1001	RCRSB0300CEZZ	CRYSTAL HC-49/U-S 12000KHz-A1 MURATA	S	AB	AF
			COILS			
	L 0201	VP-DF270K0000	PEAK COIL 27UH 10%	S	AA	AB
	L 0204	VP-DF270K0000	PEAK COIL 27UH 10%	S	AA	AB
	L 0302	VP-DF3R3K0000	PEAK COIL 3,3UH 10%	S	AB	AB
	L 0304	VP-DF3R3K0000	PEAK COIL 3,3UH 10%	S	AB	AB
	L 0308	VP-CF3R3K0000	PEAK COIL 3.3UH 10%	S	AB	AB
	L 0351	VP-DF3R3K0000	PEAK COIL 3,3UH 10%	S	AB	AB
	L 0353	VP-DF3R3K0000	PEAK COIL 3,3UH 10%	S	AB	AB
	L 0354	VP-DF3R3K0000	PEAK COIL 3,3UH 10%	S	AB	AB
	L 0361	VP-DF3R3K0000	PEAK COIL 3,3UH 10%	S	AB	AB
	L 0401	VP-DF1R0M0000	PEAK COIL 1UH 20%	S	AA	AA
	L 0403	VP-XF120K0000	PEAK COIL 12UH 10% 1/8W	S	AA	AA
	L 0451	VP-DF3R3K0000	PEAK COIL 3,3UH 10%	S	AB	AB
	L 0602	RCILP0225CEZZ	COIL SL_A TOKYO	S	AA	AD
	L 0603	RCILZA014WJZZ	COIL	S	AC	AG
	L 0701	RCILF0111BMZZ	COIL HR-19043	S	AE	AL
	L 0801	VP-XF100K0000	PEAK COIL 10UH 10% 1/8W	S	AA	AA
	L 0802	VP-XF100K0000	PEAK COIL 10UH 10% 1/8W	S	AA	AA
	L 1002	VP-XF100K0000	PEAK COIL 10UH 10% 1/8W	S	AA	AA
	L 3030	VP-CF3R3K0000	PEAK COIL 3.3UH 10%	S	AB	AB
			CERAMIC FILTERS			
	CF 0401	RFILC0020CEZZ	FILTER SIF TRAP (TAPED)	S	AE	AE
			TRANSFORMERS			
	T 0601	RTRNZ0026PEZZ	DRIVER TRANSFORMER	S	AB	AF
⚠	T 0602	RTRNF2053CEZZ	FBT BSC21-2643S SHENZHEN	S	AM	AY
⚠	T 0701	RTRNWA062WJZZ	TRANSFORMER	S	AD	AM
			CAPACITORS			
	C 0201	VCEA0A1CW227M	E CAPACITOR 220UF 16V 6.3x11	S	AA	AB
	C 0202	VCEA0A1AW107M	ELEC C 100UF 20% 10V	S	AA	AA
	C 0204	VCEA0A1HW106M	ELEC C 10UF 20% 50V	S	AA	AA
	C 0206	VCKYCY1HF223Z	SC CAPACITOR 0.022UF 50V TAPED	S	AA	AA
	C 0207	VCKYCY1HB472K	S.CHIP CAP 4700PF/50V T	S	AA	AA
	C 0208	VCKYCY1HB821K	GRM39B 821K 50 (1608)SMD CAPACITOR	S	AA	AA
	C 0209	VCKYCY1EF104Z	S CHIP TAPE CAP 0.1UF/25V	S	AA	AA
	C 0210	VCCCCY1HH220J	S. CHIP CAP 22PF/50V TAPED	S	AA	AA
	C 0211	VCKYPA1HF103Z	C.CAPACITOR 0.01U-F 50V	S	AA	AA
	C 0212	VCKYPA1HF103Z	C.CAPACITOR 0.01U-F 50V	S	AA	AA
	C 0215	VCCCCY1HH220J	S. CHIP CAP 22PF/50V TAPED	S	AA	AA
	C 0302	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0305	VCEA0A1EW337M	ELEC C 330UF 20% 25V	S	AA	AB

	REF No.	PARTS	DESCRIPTION	*	SN CODE	EX CODE
	C 0307	VCEA0A1CW226M	ELEC C 22UF 20% 16V	S	AA	AA
	C 0308	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0309	VCEA0A1CW107M	ELEC C 100UF 20% 16V	S	AA	AA
	C 0310	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0320	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0322	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0324	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0328	VCCCCY1HH221J	S. CHIP CAP 220PF/50V TAPED	S	AA	AA
	C 0329	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0331	VCEA0A1HW225M	ELEC C 2,2UF 20% 50V	S	AA	AA
	C 0341	VCKYCY1HB332K	s.chip cap 3300pf /50v	S	AA	AA
	C 0342	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0343	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0345	VCKYCY1HB222K	S CHIP CAPACITOR 0.0022UF/50V TAPED	S	AA	AA
	C 0346	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0348	VCEA0A1HW105M	ELEC C 1UF 20% 50V	S	AA	AA
	C 0349	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0351	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0352	VCEA0A1CW107M	ELEC C 100UF 20% 16V	S	AA	AA
	C 0354	VCEA0A1CW107M	ELEC C 100UF 20% 16V	S	AA	AA
	C 0359	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0361	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0362	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0363	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0381	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0382	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0401	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0402	VCCCCY1HH220J	S. CHIP CAP 22PF/50V TAPED	S	AA	AA
	C 0403	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0404	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0431	VCKYCY1HF223Z	SC CAPACITOR 0.022UF 50V TAPED	S	AA	AA
	C 0432	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0433	VCKYCY1EF104Z	S CHIP TAPE CAP 0.1UF/25V	S	AA	AA
	C 0451	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0453	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0481	VCEA0A1AW107M	ELEC C 100UF 20% 10V	S	AA	AA
	C 0502	VCEA0A1EW477M	ELEC C 470UF 20% 25V	S	AA	AB
	C 0504	VCKYPA1HB102K	C.CAPACITOR 1000PF/50V	S	AA	AA
	C 0505	VCEA0A1HW107M	ELEC C 100UF 20% 50V	S	AA	AA
	C 0506	VCKYPA1HB102K	C.CAPACITOR 1000PF/50V	S	AA	AA
	C 0507	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0508	RC-FZ0272CEZZ	C POL P 0,39UF 100V	S	AA	AC
	C 0509	VCQYTA2AA563J	POL FILM C 56NF 5% 100V	S	AA	AB
	C 0511	VCKYPA1HB102K	C.CAPACITOR 1000PF/50V	S	AA	AA
	C 0512	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0513	VCKYPA2HB102K	CERAM C 1NF 10% 500V	S	AA	AA
	C 0514	VCEA0A1EW477M	ELEC C 470UF 20% 25V	S	AA	AB
	C 0515	VCQYTA1HM103J	F. CAPACITOR 0.01UF/50V	S	AA	AA
	C 0521	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0522	VCKYPA1HB102K	C.CAPACITOR 1000PF/50V	S	AA	AA
	C 0531	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0532	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0533	VCQYTA1HM104J	F. CAPACITOR 0.1 UF 50 V	S	AA	AA
	C 0599	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0602	VCEA0A1CW477M	ELEC C 470UF 20% 16V	S	AA	AA
	C 0603	VCEA0A1CW107M	ELEC C 100UF 20% 16V	S	AA	AA
	C 0604	VCKYPA1HF103Z	C.CAPACITOR 0.01U-F 50V	S	AA	AA
	C 0605	VCEA0A1AW227M	ELEC C 220UF 20% 10V	S	AA	AA
	C 0606	VCEA0A1CW107M	ELEC C 100UF 20% 16V	S	AA	AA
	C 0607	VCKYPA1HF103Z	C.CAPACITOR 0.01U-F 50V	S	AA	AA
	C 0608	VCKYCY1EF104Z	S CHIP TAPE CAP 0.1UF/25V	S	AA	AA
	C 0609	VCKYPA2HB102K	CERAM C 1NF 10% 500V	S	AA	AA
	C 0610	VCFYSB2EB823J	POL FILM C 82NF 5% 100V	S	AA	AB
	C 0611	VCFPVC3CA762H	PP FILM C 7,6NF 3% 1,6KV	S	AA	AC
	C 0614	VCFPVC2DB274J	PP FILM C 270NF 5% 200V	S	AA	AB
	C 0615	RC-EZ0724CEZZ	ELEC C 100UF 160V KMF160VB-100MMC NICHIC	S	AB	AE
	C 0616	VCQYTA1HM104J	F. CAPACITOR 0.1 UF 50 V	S	AA	AA
	C 0617	VCEA0A1HW105M	ELEC C 1UF 20% 50V	S	AA	AA
	C 0619	VCEA0A1HW106M	ELEC C 10UF 20% 50V	S	AA	AA
	C 0620	VCKYPA2HB221K	CERAM C 220PF 10% 500V	S	AA	AA
	C 0621	VCEA0A2CW105M	ELEC C 1UF 20% 160V	S	AA	AA
	C 0622	VCEA0A1CW227M	E CAPACITOR 220UF 16V 6.3x11	S	AA	AB
	C 0631	VCKYCY1EF104Z	S CHIP TAPE CAP 0.1UF/25V	S	AA	AA
	C 0632	VCKYCY1HB222K	S CHIP CAPACITOR 0.0022UF/50V TAPED	S	AA	AA
	C 0633	VCEA0A1CW107M	ELEC C 100UF 20% 16V	S	AA	AA
⚠	C 0701	RC-FZ0176BMZZ	POL C B81130 100NF 275V X2	S	AA	AB
	C 0702	RC-KZ0029CEZZ	CERAM C 10NF 80,20% 250V	S	AC	AC
	C 0703	RC-KZ0029CEZZ	CERAM C 10NF 80,20% 250V	S	AC	AC
	C 0704	RC-KZ0029CEZZ	CERAM C 10NF 80,20% 250V	S	AC	AC
	C 0705	RC-EZ0150BMZZ	ELEC C 100uF 400V LPN100M2GN JAMICON	S	AD	AM
	C 0707	VCEA0A1EW107M	E. CAPACITOR 100UF 25V 6.3x11	S	AA	AA
	C 0708	VCQYTA1HM104J	F. CAPACITOR 0.1 UF 50 V	S	AA	AA
	C 0709	VCFYFA1HA474J	FILM CAPACITOR 474 MAT	S	AA	AB
	C 0710	RC-KZ0040CEZZ	CERAM C 820PF 2KV	S	AD	AD
⚠	C 0712	RC-KZ0105GEZZ	C. CAP 2200PF/4KV-KX	S	AA	AB
	C 0713	VCKYPA1HB102K	C.CAPACITOR 1000PF/50V	S	AA	AA

	REF No.	PARTS	DESCRIPTION	*	SN CODE	EX CODE
	C 0716	VCKYPA2HB102K	CERAM C 1NF 10% 500V	S	AA	AA
	C 0751	RC-KZ0299CEZZ	CERAM C DE1105-979BN821K2K-A3 MURATA	S	AA	AB
	C 0752	RC-EZ0724CEZZ	ELEC C 100UF 160V KMF160VB-100MMC NICHIC	S	AB	AE
	C 0753	VCKYPA1HB102K	C.CAPACITOR 1000PF/50V	S	AA	AA
	C 0754	VCEA0A1CW108M	ELEC C 1000MF 16V 10X16MM	S	AA	AB
	C 0755	VCEA0A1CW227M	E CAPACITOR 220UF 16V 6.3x11	S	AA	AB
	C 0756	VCEA0A0JW227M	E CAPACITOR 220UF/6.3V-5X11	S	AA	AA
	C 0757	VCKYPA2HB102K	CERAM C 1NF 10% 500V	S	AA	AA
	C 0758	VCEA0A1EW477M	ELEC C 470UF 20% 25V	S	AA	AB
	C 0759	VCKYPA1HB102K	C.CAPACITOR 1000PF/50V	S	AA	AA
	C 0761	VCKYCY1EF104Z	S CHIP TAPE CAP 0.1UF/25V	S	AA	AA
	C 0762	VCCCPA1HH680J	CERAM C 68PF 5% 50V	S	AA	AA
	C 0764	VCEA0A1EW107M	E. CAPACITOR 100UF 25V 6.3x11	S	AA	AA
	C 0765	VCEA0A1CW107M	ELEC C 100UF 20% 16V	S	AA	AA
	C 0767	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0801	VCEA0A1CW227M	E CAPACITOR 220UF 16V 6.3x11	S	AA	AB
	C 0803	VCFYFA1HA224J	PP FILM C 220NF 5% 50V	S	AA	AA
	C 0804	VCFYFA1HA224J	PP FILM C 220NF 5% 50V	S	AA	AA
	C 0805	VCKYCY1HB222K	S CHIP CAPACITOR 0.0022UF/50V TAPED	S	AA	AA
	C 0806	VCEA0A1HW105M	ELEC C 1UF 20% 50V	S	AA	AA
	C 0807	VCKYCY1HB472K	S.CHIP CAP 4700PF/50V T	S	AA	AA
	C 0808	VCKYCY1HF223Z	SC CAPACITOR 0.022UF 50V TAPED	S	AA	AA
	C 0809	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0810	VCEA0A1HW474M	ELEC C 0,47UF 20% 50V	S	AA	AA
	C 0811	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0812	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0813	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0814	VCKYCY1HB561K	S. CAPACITOR 560PF/50V	S	AA	AA
	C 0815	VCEA0A1CW227M	E CAPACITOR 220UF 16V 6.3x11	S	AA	AB
	C 0817	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0818	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0819	VCEA0A1CW227M	E CAPACITOR 220UF 16V 6.3x11	S	AA	AB
	C 0822	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0823	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0825	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 1001	VCCCCY1HH330J	S. CHIP CAP 33PF/50V	S	AA	AA
	C 1002	VCCCCY1HH330J	S. CHIP CAP 33PF/50V	S	AA	AA
	C 1004	VCKYCY1EF104Z	S CHIP TAPE CAP 0.1UF/25V	S	AA	AA
	C 1006	VCKYCY1HF223Z	SC CAPACITOR 0.022UF 50V TAPED	S	AA	AA
	C 1009	VCEA0A0JW107M	ELEC C 100UF 20% 6,3V	S	AA	AA
	C 1011	VCEA0A0JW107M	ELEC C 100UF 20% 6,3V	S	AA	AA
	C 1012	VCKYCY1EF104Z	S CHIP TAPE CAP 0.1UF/25V	S	AA	AA
	C 1013	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 1014	VCEA0A0JW107M	ELEC C 100UF 20% 6,3V	S	AA	AA
	C 1015	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 1017	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 1018	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 1020	VCKYCY1EF104Z	S CHIP TAPE CAP 0.1UF/25V	S	AA	AA
			RESISTORS			
	R 0201	VRD-RA2BE332J	RES 3,3KOHM 5% 1/8W	S	AA	AA
	R 0202	VRS-CY1JF681J	S. CHIP RES. 680-OHM TAPED	S	AA	AA
	R 0208	VRS-CY1JF102J	S.CHIP RES TAPE 1K OHM	S	AA	AA
	R 0209	VRS-CY1JF391J	SURFACE MOUNT CHIP RESISTOR 390 OHM	S	AA	AA
	R 0302	VRS-CY1JF472J	S. RES. 4.7K OHM TAPED	S	AA	AA
	R 0303	VRD-RA2BE331J	RES 330 OHM 5% 1/8W	S	AA	AA
	R 0306	VRS-CY1JF392J	S. CHIP RES. 3.9K-OHM TAPED	S	AA	AA
	R 0308	VRS-CY1JF471J	S. CHIP RES. 470-OHM TAPED	S	AA	AA
	R 0309	VRS-CY1JF471J	S. CHIP RES. 470-OHM TAPED	S	AA	AA
	R 0310	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
	R 0311	VRD-RA2HD680J	RES 68 OHM 5% 1/2W	S	AA	AA
	R 0312	VRS-CY1JF682J	S. CHIP RES. 6.8 K OHM TAPED	S	AA	AA
	R 0313	VRS-CY1JF223J	S.CHOP REG 22K-OHM T	S	AA	AA
	R 0331	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
	R 0332	VRS-CY1JF473J	S. CHIP RES 47K-OHM TAPED	S	AA	AA
	R 0333	VRD-RA2BE103J	RES 10KOHM 5% 1/8W	S	AA	AA
	R 0339	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
	R 0340	VRS-CY1JF821J	S. CHIP RES. 820-OHM	S	AA	AA
	R 0341	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 0342	VRS-CY1JF821J	S. CHIP RES. 820-OHM	S	AA	AA
	R 0343	VRS-CY1JF471J	S. CHIP RES. 470-OHM TAPED	S	AA	AA
	R 0351	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	R 0352	VRS-CY1JF104J	S. CHIP RES. 100K-OHM TAPED	S	AA	AA
	R 0359	VRS-CY1JF102J	S.CHIP RES TAPE 1K OHM	S	AA	AA
	R 0360	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
	R 0362	VRS-CY1JF472J	S. RES. 4.7K OHM TAPED	S	AA	AA
	R 0363	VRS-CY1JF104J	S. CHIP RES. 100K-OHM TAPED	S	AA	AA
	R 0364	VRS-CY1JF472J	S. RES. 4.7K OHM TAPED	S	AA	AA
	R 0365	VRS-CY1JF104J	S. CHIP RES. 100K-OHM TAPED	S	AA	AA
	R 0366	VRS-CY1JF561J	S. CHIP RES 560-OHM TAPED	S	AA	AA
	R 0381	VRS-CY1JF104J	S. CHIP RES. 100K-OHM TAPED	S	AA	AA
	R 0390	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	R 0391	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	R 0401	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 0403	VRS-CY1JF102J	S.CHIP RES TAPE 1K OHM	S	AA	AA
	R 0405	VRS-CY1JF181J	S CHIP RES. 180-OHM TAPED	S	AA	AA

	REF No.	PARTS	DESCRIPTION	*	SN CODE	EX CODE
	R 0406	VRS-CY1JF102J	S.CHIP RES TAPE 1K OHM	S	AA	AA
	R 0407	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
	R 0408	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
	R 0409	VRD-RA2BE102J	RES 1KOHM 5% 1/8W	S	AA	AA
	R 0410	VRS-CY1JF473J	S. CHIP RES 47K-OHM TAPED	S	AA	AA
	R 0411	VRS-CY1JF473J	S. CHIP RES 47K-OHM TAPED	S	AA	AA
	R 0413	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 0415	VRD-RA2BE473J	RES 47KOHM 5% 1/8W	S	AA	AA
	R 0451	VRD-RA2EE750J	RES 75 OHM 5% 1/4W	S	AA	AA
	R 0452	VRS-CY1JF104J	S. CHIP RES. 100K-OHM TAPED	S	AA	AA
	R 0453	VRS-CY1JF223J	S.CHOP REG 22K-OHM T	S	AA	AA
	R 0454	VRS-CY1JF562J	S. CHIP RES. 5.6K-OHM TAPED	S	AA	AA
	R 0455	VRD-RA2EE750J	RES 75 OHM 5% 1/4W	S	AA	AA
	R 0456	VRD-RA2EE750J	RES 75 OHM 5% 1/4W	S	AA	AA
	R 0457	VRD-RA2EE750J	RES 75 OHM 5% 1/4W	S	AA	AA
	R 0458	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
	R 0459	VRD-RA2EE750J	RES 75 OHM 5% 1/4W	S	AA	AA
	R 0460	VRD-RA2EE750J	RES 75 OHM 5% 1/4W	S	AA	AA
	R 0461	VRD-RA2BE224J	RES 220KOHM 5% 1/8W	S	AA	AA
	R 0482	VRD-RA2EE750J	RES 75 OHM 5% 1/4W	S	AA	AA
	R 0490	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	R 0501	VRD-RA2BE392J	RES 3,9KOHM 5% 1/8W	S	AA	AA
	R 0502	VRN-VV3DB2R7J	MET FILM R 2,7 OHM 5% 2W	S	AA	AB
	R 0503	VRD-RA2HD331J	RES 330 OHM 5% 1/2W	S	AA	AA
	R 0504	VRS-CY1JF181J	S CHIP RES. 180-OHM TAPED	S	AA	AA
	R 0505	VRD-RA2BE1R0J	RES 1 OHM 5% 1/8W	S	AA	AA
	R 0507	VRS-CY1JF181J	S CHIP RES. 180-OHM TAPED	S	AA	AA
	R 0509	VRD-RA2BE102J	RES 1KOHM 5% 1/8W	S	AA	AA
	R 0511	VRD-RA2HD102J	RES 1KOHM 5% 1/2W	S	AA	AA
	R 0512	VRD-RA2BE100J	RES 10 OHM 5% 1/8W	S	AA	AA
	R 0513	VRD-RA2BE103J	RES 10KOHM 5% 1/8W	S	AA	AA
	R 0514	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
	R 0515	VRS-CY1JF153J	S CHIP RES. 15K-OHM TAPED	S	AA	AA
	R 0516	VRS-CY1JF153J	S CHIP RES. 15K-OHM TAPED	S	AA	AA
	R 0517	VRS-CY1JF223J	S.CHOP REG 22K-OHM T	S	AA	AA
	R 0518	VRS-CY1JF334J	S. CHIP RES. 330K-OHM TAPED	S	AA	AA
	R 0531	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
	R 0532	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
	R 0533	VRD-RA2BE393J	RES 39KOHM 5% 1/8W	S	AA	AA
	R 0603	VRD-RA2BE102J	RES 1KOHM 5% 1/8W	S	AA	AA
	R 0604	VRD-RA2HD472J	RES 4.7KOHM 5% 1/2W	S	AA	AA
	R 0605	VRS-KT3LB332J	MET OX RES 3,3KOHM 5% 3W	S	AA	AD
	R 0606	VRD-RA2HD102J	RES 1KOHM 5% 1/2W	S	AA	AA
	R 0607	VRD-RA2BE104J	RES 100KOHM 5% 1/8W	S	AA	AA
	R 0608	VRN-RV3AB1R8J	MET FILM R 1.8 OHM 5% 1W	S	AA	AA
	R 0609	VRD-RA2HD101J	RES 100 OHM 5% 1/2W	S	AA	AA
	R 0610	VRS-CY1JF102J	S.CHIP RES TAPE 1K OHM	S	AA	AA
	R 0611	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
	R 0612	VRD-RA2BE331J	RES 330 OHM 5% 1/8W	S	AA	AA
	R 0613	VRD-RA2HD184J	RES 180KOHM 5% 1/2W	S	AA	AA
	R 0614	VRD-RA2HD472J	RES 4.7KOHM 5% 1/2W	S	AA	AA
	R 0615	VRD-RA2HD472J	RES 4.7KOHM 5% 1/2W	S	AA	AA
	R 0616	VRD-RA2HD182J	RES 1,8KOHM 5% 1/2W	S	AA	AA
	R 0618	VRD-RA2BE123J	RES 12KOHM 5% 1/8W	S	AA	AA
	R 0619	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	R 0620	VRD-RA2HD220J	RES 22 OHM 5% 1/2W	S	AA	AA
	R 0621	VRD-RA2HD820J	RES 82 OHM 5% 1/2W	S	AA	AA
	R 0622	VRD-RA2HD222J	RES 2,2KOHM 5% 1/2W	S	AA	AA
⚠	R 0623	VRG-RL2HB562J	FUS RES 5,6KOHM 5% 1/2W	S	AA	AB
	R 0624	VRD-RA2BE123J	RES 12KOHM 5% 1/8W	S	AA	AA
	R 0625	VRD-RA2BE103J	RES 10KOHM 5% 1/8W	S	AA	AA
	R 0626	VRS-CY1JF562J	S. CHIP RES. 5.6K-OHM TAPED	S	AA	AA
	R 0627	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
	R 0629	VRD-RA2EE151J	RES 150 OHM 5% 1/4W	S	AA	AA
	R 0630	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
	R 0631	VRD-RA2BE391J	RES 390 OHM 5% 1/8W	S	AA	AA
	R 0632	VRD-RA2BE273J	RES 27KOHM 5% 1/8W	S	AA	AA
	R 0633	VRS-CY1JF822J	S. CHIP RES. 8.2K-OHM TAPED	S	AA	AA
	R 0634	VRS-CY1JF102J	S.CHIP RES TAPE 1K OHM	S	AA	AA
	R 0636	VRS-CY1JF154J	S CHIP RES. 150K-OHM TAPED	S	AA	AA
	R 0637	VRS-CY1JF273J	S. CHIP RES. 27-OHM TAPED	S	AA	AA
	R 0638	VRS-CY1JF221J	S. CHIP RES. 220-OHM TAPED	S	AA	AA
	R 0639	VRD-RA2BE333J	RES 33KOHM 5% 1/8W	S	AA	AA
	R 0640	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
	R 0701	VRW-KP3HC5R6K	WOUND RES 5,6 OHM 10% 5W	S	AB	AC
	R 0706	VRD-RA2BE122J	RES 1,2KOHM 5% 1/8W	S	AA	AA
	R 0707	VRD-RA2BE393J	RES 39KOHM 5% 1/8W	S	AA	AA
	R 0708	VRD-RA2BE102J	RES 1KOHM 5% 1/8W	S	AA	AA
	R 0710	VRN-VV3ABR27J	MET FILM R .27 OHM 5% 1W	S	AA	AA
	R 0711	VRD-RA2BE270J	RES 27 OHM 5% 1/8W	S	AA	AA
	R 0712	VRD-RA2HD100J	RES 10 OHM 5% 1/2W	S	AA	AA
	R 0713	VRD-RA2BE394J	RES 390KOHM 5% 1/8W	S	AA	AA
⚠	R 0716	RR-HZ0014GEZZ	high vol. resistor 12m ohm	S	AA	AC
	R 0718	VRD-RA2BE824J	RES 820KOHM 5% 1/8W	S	AA	AA
	R 0752	VRD-RA2HD102J	RES 1KOHM 5% 1/2W	S	AA	AA
	R 0753	VRN-VV3DB5R6J	MET FILM R 5.6 OHM 5% 2W	S	AA	AA

	REF No.	PARTS	DESCRIPTION	*	SN CODE	EX CODE
	R 0761	VRD-RA2BE681J	RES 680 OHM 5% 1/8W	S	AA	AA
	R 0762	VRD-RA2HD184J	RES 180KOHM 5% 1/2W	S	AA	AA
	R 0763	VRD-RA2BE822J	RES 8,2KOHM 5% 1/8W	S	AA	AA
	R 0766	VRD-RA2EE183J	RES 18KOHM 5% 1/4W	S	AA	AA
	R 0768	VRD-RA2HD124J	RES 120KOHM 5% 1/2W	S	AA	AA
	R 0770	VRD-RA2HD181J	RES 180 OHM 5% 1/2W	S	AA	AA
	R 0771	VRD-RA2HD181J	RES 180 OHM 5% 1/2W	S	AA	AA
	R 0772	VRS-CY1JF333J	S. CHIP RES. 33K-OHM TAPED	S	AA	AA
	R 0773	VRS-CY1JF153J	S CHIP RES. 15K-OHM TAPED	S	AA	AA
	R 0774	VRS-CY1JF332J	S. CHIP RES. 3.3K-OHM TAPED	S	AA	AA
	R 0801	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 0802	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 0803	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 0804	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 0805	VRS-CY1JF223J	S.CHOP REG 22K-OHM T	S	AA	AA
	R 0806	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 0807	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 0808	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 0809	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 1001	VRS-CY1JF181J	S CHIP RES. 180-OHM TAPED	S	AA	AA
	R 1002	VRS-CY1JF221J	S. CHIP RES. 220-OHM TAPED	S	AA	AA
	R 1003	VRS-CY1JF331J	S CHIP RES TAPE 330 OHM	S	AA	AA
	R 1004	VRS-CY1JF681J	S. CHIP RES. 680-OHM TAPED	S	AA	AA
	R 1005	VRS-CY1JF472J	S. RES. 4.7K OHM TAPED	S	AA	AA
	R 1006	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 1008	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	R 1009	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	R 1014	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
	R 1015	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
	R 1016	VRD-RA2BE332J	RES 3,3KOHM 5% 1/8W	S	AA	AA
	R 1017	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
	R 1018	VRD-RA2BE332J	RES 3,3KOHM 5% 1/8W	S	AA	AA
	R 1019	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 1020	VRS-CY1JF153J	S CHIP RES. 15K-OHM TAPED	S	AA	AA
	R 1022	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 1023	VRD-RA2BE153J	RES 15KOHM 5% 1/8W	S	AA	AA
	R 1024	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 1025	VRS-CY1JF122J	S. RESISTOR 1.2K OHM	S	AA	AA
	R 1026	VRS-CY1JF224J	S. CHIP RES. 220K-OHM TAPED	S	AA	AA
	R 1027	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 1028	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
	R 1029	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 1033	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 1034	VRD-RA2BE332J	RES 3,3KOHM 5% 1/8W	S	AA	AA
	R 1035	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 1036	VRD-RA2BE332J	RES 3,3KOHM 5% 1/8W	S	AA	AA
	R 1037	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
	R 1038	VRS-CY1JF223J	S.CHOP REG 22K-OHM T	S	AA	AA
	R 1040	VRS-CY1JF152J	S. CHIP RES. 1.5K-OHM	S	AA	AA
	R 1041	VRS-CY1JF152J	S. CHIP RES. 1.5K-OHM	S	AA	AA
	R 1043	VRS-CY1JF562J	S. CHIP RES. 5.6K-OHM TAPED	S	AA	AA
	R 1044	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	R 1047	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	R 1048	VRS-CY1JF391J	SURFACE MOUNT CHIP RESISTOR 390 OHM	S	AA	AA
	R 1052	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	R 1053	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	R 1054	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 1056	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
	R 1057	VRS-CY1JF472J	S. RES. 4.7K OHM TAPED	S	AA	AA
	R 1058	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
			MISCELLANEOUS PARTS			
		LHLDP1066PE00	LED HOLDER	S	AA	AB
		QCNW-A512WJZZ	SHIELD WIRE	S	AA	AD
		QPWBF7340BMN6	PWB BARE BOARD HA-1 1/1	S	AF	AQ
⚠	F 0701	QFS-C3229CEZZ	FUSE S506-3.15A-A1 TOKYO COMPONENTS	S	AA	AC
⚠	F 0751	QFS-J2521CEZZ	FUSE 2,5A 125V LITTELFUSE (KURODA9	S	AC	AD
	FB 0451	RBLN-0037CEZZ	BALUN FBA04HA90088-00 T/Y	S	AB	AB
	FB 0452	RBLN-0037CEZZ	BALUN FBA04HA90088-00 T/Y	S	AB	AB
	FB 0601	RBLN-0037CEZZ	BALUN FBA04HA90088-00 T/Y	S	AB	AB
	FB 0701	RBLN-0037CEZZ	BALUN FBA04HA90088-00 T/Y	S	AB	AB
	FH 0701	QFSHD1001BMZZ	FUSE HOLD.EYF52BC=PANASON	S	AA	AA
	FH 0702	QFSHD1002BMZZ	FUSE HOLD.EYF52BC=PANASON	S	AA	AA
	J 0351	QJAKE0183CEZZ	JACK YKB11-3031 WHITE ZIYARUKO	S	AA	AD
	J 0451	QJAKE0150CEZZ	JACK JPJ2025-01-540 YELLOW HOSHIDEN	S	AA	AD
	JK 3001	QJAKJ0047CEZZ	EARPHONE JACK HSJ0998-72	S	AA	AG
	P 0301	QPLGN0241CEZZ	PLUG	S	AA	AA
	P 0601	QPLGN0441CEZZ	PLUG 4PIN	S	AA	AA
	P 0602	QPLGN0560CEZZ	CONNECTOR 5 PIN TV-50P-05-V2 A TAIKO	S	AA	AB
	P 0701	QPLGN0360CEZZ	CONNECTOR 3 PIN TV-50P-03-V2 A TAIKO	S	AA	AA
	P 0702	QPLGN0260CEZZ	CONNECTOR 2 PIN TV-50P-02-V2 A TAIKO	S	AA	AA
	P 0801	QPLGN0541CEZZ	PLUG	S	AA	AA
	P 1001	QPLGN0641CEZZ	PLUG	S	AA	AA
	RJ 0001	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0004	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0007	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA

	REF No.	PARTS	DESCRIPTION	*	SN CODE	EX CODE
	RJ 0008	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0009	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0010	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0013	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0019	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0020	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0024	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0025	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0026	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0027	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0028	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0029	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0031	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0032	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0033	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0035	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0036	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0044	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0049	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0050	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0053	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0054	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0057	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0058	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0059	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0061	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0062	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0064	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0065	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0067	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0068	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0070	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0071	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0072	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0074	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0075	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0080	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0084	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0085	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RMC1001	RRMCU0255CEZZ	R/C RECEIVER TSOP1838UH1 ELEKTRA VISHAY	S	AB	AG
⚠	S 0701	QSW-P0591CEZZ	SWITCH SDDFC3-A ALPS	S	AD	AL
	S 1001	QSW-K0003AJZZ	SWITCH	S	AA	AA
	S 1002	QSW-K0003AJZZ	SWITCH	S	AA	AA
	S 1003	QSW-K0003AJZZ	SWITCH	S	AA	AA
	S 1004	QSW-K0003AJZZ	SWITCH	S	AA	AA
	S 1005	QSW-K0003AJZZ	SWITCH	S	AA	AA
	SC 0451	QSOCZ2107BMZZ	SOCKET	S	AF	AE
	VA 0701	RH-VX0047CEZZ	VARISTOR SIOV-S14K420M4 MATSUSHITA	S	AA	AC
	PWB-B		**CRT UNIT**			
			TRANSISTORS			
	Q 0870	VSBF422////-1	TRT BF422 PHILIPS	S	AA	AA
	Q 0871	VSBF422////-1	TRT BF422 PHILIPS	S	AA	AA
	Q 0872	VSBF422////-1	TRT BF422 PHILIPS	S	AA	AA
	Q 0883	VSBF421////-1	TRT BF421 PHILIPS	S	AA	AA
	Q 0885	VSBF421////-1	TRT BF421 PHILIPS	S	AA	AA
	Q 0887	VSBF421////-1	TRT BF421 PHILIPS	S	AA	AA
			DIODES			
	D 0811	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0812	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0880	VHD1SS82///1A	DIODE 1SS82-A HITACHI	S	AA	AB
	D 0881	VHD1SS82///1A	DIODE 1SS82-A HITACHI	S	AA	AB
	D 0882	VHD1SS82///1A	DIODE 1SS82-A HITACHI	S	AA	AB
			CAPACITORS			
	C 0871	VCKYPA1HB471K	CERAM C 470PF 10% 50V	S	AA	AA
	C 0872	VCKYPA1HB471K	CERAM C 470PF 10% 50V	S	AA	AA
	C 0873	VCKYPA1HB471K	CERAM C 470PF 10% 50V	S	AA	AA
	C 0875	VCKYPA2HB102K	CERAM C 1NF 10% 500V	S	AA	AA
	C 0876	RC-KZ0150CEZZ	CERAM C DE0707-726E102Z3K-A MURATA	S	AA	AB
	C 0878	VCEAGA2EW336M	ELEC C 33UF 20% 250V	S	AA	AD
	C 0880	VCKYPA1HB471K	CERAM C 470PF 10% 50V	S	AA	AA
	C 0881	VCKYPA1HB471K	CERAM C 470PF 10% 50V	S	AA	AA
	C 0882	VCKYPA1HB471K	CERAM C 470PF 10% 50V	S	AA	AA
			RESISTORS			
	R 0870	VRD-RA2BE563J	RES 56KOHM 5% 1/8W	S	AA	AA
	R 0879	VRD-RA2BE471J	RES 470 OHM 5% 1/8W	S	AA	AA
	R 0880	VRD-RA2BE471J	RES 470 OHM 5% 1/8W	S	AA	AA
	R 0881	VRD-RA2BE471J	RES 470 OHM 5% 1/8W	S	AA	AA
	R 0882	VRS-VV3DB153J	MET OX RES 15KOHM 5% 2W	S	AA	AA
	R 0883	VRD-RA2HD272J	RES 2,7KOHM 5% 1/2W	S	AA	AA
	R 0884	VRS-VV3DB153J	MET OX RES 15KOHM 5% 2W	S	AA	AA
	R 0885	VRD-RA2HD272J	RES 2,7KOHM 5% 1/2W	S	AA	AA

	REF No.	PARTS	DESCRIPTION	*	SN CODE	EX CODE
	R 0886	VRS-VV3DB153J	MET OX RES 15KOHM 5% 2W	S	AA	AA
	R 0887	VRD-RA2HD272J	RES 2,7KOHM 5% 1/2W	S	AA	AA
	R 0888	VRD-RA2BE471J	RES 470 OHM 5% 1/8W	S	AA	AA
	R 0892	VRD-RA2BE102J	RES 1KOHM 5% 1/8W	S	AA	AA
	R 0893	VRD-RA2BE102J	RES 1KOHM 5% 1/8W	S	AA	AA
	R 0894	VRD-RA2BE102J	RES 1KOHM 5% 1/8W	S	AA	AA
	R 0898	VRD-RA2BE471J	RES 470 OHM 5% 1/8W	S	AA	AA
	R 0899	VRD-RA2BE471J	RES 470 OHM 5% 1/8W	S	AA	AA
			MISCELLANEOUS PARTS			
	P 0851	QPLGN0441CEZZ	PLUG 4PIN	S	AA	AA
	P 0882	QPLGN0541CEZZ	PLUG	S	AA	AA
	P 0883	QTIPM0017CEFM	TIP	S	AA	AA
	SC 0881	QSOCV0017PEZZ	CRT SOCKET 14" ISMM045 INCHANG	S	AA	AE
	PWB-C		**SECAM UNIT**			
			INTEGRATED CIRCUITS			
	IC 0250	VHIM62334FP-1	4XD/A MOD OUTPUT IC W/I2C	S	AD	AM
	IC 0251	RH-IX1576BMZZ	IC STV8225 SGS-THOMSON	S	AS	AZ
			TRANSISTORS			
	Q 0251	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0252	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0253	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0255	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0257	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0258	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0259	VS2SA1530ARS1	smt transistor	S	AA	AA
	Q 0260	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
			DIODES			
	D 0251	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0252	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
			COILS			
	L 0251	VP-XF100K0000	PEAK COIL 10UH 10% 1/8W	S	AA	AA
	L 0253	VP-XF100K0000	PEAK COIL 10UH 10% 1/8W	S	AA	AA
	L 0254	VP-XF100K0000	PEAK COIL 10UH 10% 1/8W	S	AA	AA
'	L 0255	VP-DF120K0000	PEAK COIL 12UH 10%	S	AA	AA
			CAPACITORS			
	C 0251	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0252	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0253	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0254	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0255	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0257	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0258	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0260	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0262	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0263	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0264	VCEA0A1HW225M	ELEC C 2,2UF 20% 50V	S	AA	AA
	C 0265	VCEA0A1HW105M	ELEC C 1UF 20% 50V	S	AA	AA
	C 0266	VCEA0A1HW105M	ELEC C 1UF 20% 50V	S	AA	AA
	C 0267	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0268	VCEA0A1CW226M	ELEC C 22UF 20% 16V	S	AA	AA
	C 0269	VCEA0A1CW226M	ELEC C 22UF 20% 16V	S	AA	AA
	C 0270	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0271	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
			RESISTORS			
	R 0251	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
	R 0252	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
	R 0253	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
	R 0254	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
	R 0256	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
	R 0257	VRS-CY1JF222J	S. CHIP RES. 2.2K-OHM TAPED	S	AA	AA
	R 0258	VRS-CY1JF222J	S. CHIP RES. 2.2K-OHM TAPED	S	AA	AA
	R 0259	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 0260	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 0261	VRS-CY1JF222J	S. CHIP RES. 2.2K-OHM TAPED	S	AA	AA
	R 0262	VRS-CY1JF222J	S. CHIP RES. 2.2K-OHM TAPED	S	AA	AA
	R 0263	VRS-CY1JF562J	S. CHIP RES. 5.6K-OHM TAPED	S	AA	AA
	R 0264	VRS-CY1JF222J	S. CHIP RES. 2.2K-OHM TAPED	S	AA	AA
	R 0265	VRS-CY1JF562J	S. CHIP RES. 5.6K-OHM TAPED	S	AA	AA
	R 0266	VRS-CY1JF222J	S. CHIP RES. 2.2K-OHM TAPED	S	AA	AA
	R 0267	VRS-CY1JF222J	S. CHIP RES. 2.2K-OHM TAPED	S	AA	AA
	R 0268	VRS-CY1JF222J	S. CHIP RES. 2.2K-OHM TAPED	S	AA	AA
	R 0269	VRS-CY1JF222J	S. CHIP RES. 2.2K-OHM TAPED	S	AA	AA
	R 0270	VRS-CY1JF222J	S. CHIP RES. 2.2K-OHM TAPED	S	AA	AA
	R 0271	VRS-CY1JF222J	S. CHIP RES. 2.2K-OHM TAPED	S	AA	AA
	R 0272	VRS-CY1JF102J	S.CHIP RES TAPE 1K OHM	S	AA	AA
	R 0273	VRS-CY1JF104J	S. CHIP RES. 100K-OHM TAPED	S	AA	AA
	R 0274	VRS-CY1JF562J	S. CHIP RES. 5.6K-OHM TAPED	S	AA	AA
	R 0275	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA

	REF No.	PARTS	DESCRIPTION	*	SN CODE	EX CODE
	R 0276	VRS-CY1JF222J	S. CHIP RES. 2.2K-OHM TAPED	S	AA	AA
	R 0277	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	R 0278	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
	R 0279	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 0280	VRS-CY1JF102J	S.CHIP RES TAPE 1K OHM	S	AA	AA
	R 0292	VRS-CY1JF473J	S. CHIP RES 47K-OHM TAPED	S	AA	AA
			MISCELLANEOUS PARTS			
	P 0251	QPLGZ0810CEZZ	CONNECTOR	S	AA	AC
	P 0252	QPLGZ0810CEZZ	CONNECTOR	S	AA	AC
	RJ 0001	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0002	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	SF 0251	RFILC0272BMZZ	FILTER K6256K SIEMENS	S	AL	AS
	SF 0252	RFILC0271BMZZ	FILTER L9453M SIEMENS	S	AM	AQ
			MISCELLANEOUS PARTS			
⚠		CACCZ2049WEV5	A.C CORD 14" 15" 20" 21"	S	AK	AR
		LHLDKA001WJZZ	AC CORD HOLDER	S	AA	AA
		LHLDW1009CEZZ	HOLDER	S	AA	AA
		LHLDW1060CEZZ	HOLDER	S	AA	AA
		LHLDZ1714BMZZ	HOLDER ANODE CAP	S	AA	AA
		QCNW-5971CEZZ	WIRE (SP)	S	AA	AC
		RRMCG1060BMSA	R/C 37DT25S	S	AM	AU
		SPAKPA060WJZZ	CEL-AIR WRAPPER	S	AA	AA
		SPAKR500A1650	WRAPPER BOBINE 15" JF	S	--	--
		UBATU0013TAZZ	BATTERY R6(X2) TOSHIBA	S	AA	AC
		QSOCN0302CEZZ	SOCKET SMK W-A5303-1N	S	AA	AB
		QTIPM0025TAZZ	PIN SMK W-T0512-11	S	AA	AA
		LHLDZ0015PEZZ	HOLDER	S	--	--
		LHLDZ0147PEZZ	HOLDER	S	--	--
		SPAKAA024WJZZ	CENTER BOARD	S	--	--
		SPAKAA026WJZZ	SIDE BOARD	S	--	--
		SPAKAA027WJZZ	TOP-BTM BOARD	S	--	--
		SPAKAA028WJZZ	REAR BOARD	S	--	--
		SPAKKA014WJZZ	CASE	S	--	--
		SPAKPA024WJZZ	MIRROR MAT	S	--	--
		GBFL-0014PEKA	SPEAKER SUPPORT	S	AA	AD
		XTASD30P12000	SCREW	S	AA	AA
	SP 0301	VSP9050PB33WA	SPEAKER 509SF32C001MA MISAWA	S	AC	AK
		SPAKAA025WJZZ	FRONT BOARD	S	--	--
		SPAKAA029WJZZ	CENTER BOARD	S	--	--
		SPAKAA030WJZZ	SIDE BOARD	S	--	--
		SPAKAA031WJZZ	TOP-BTM BOARD	S	--	--
		SPAKAA032WJZZ	FRONT-REAR BOARD	S	--	--
		SPAKKA015WJZZ	CASE	S	--	--
		SPAKPA025WJZZ	MIRROR MAT	S	--	--
		LHLDZA030WJZZ	FBT HOLDER	S	AB	AE
		TINS-7245BMN0	OWNERS MANUAL 15JF25F	S	AD	AK
		SPAKCA108WJZZ	PACKING CASE	S	AK	AV
		SPAKXA042WJZZ	PACKING-AD	S	AF	AQ
		LHLDW1033CE00	HOLDER	S	AA	AA
		QCNW-A510WJZZ	(H) WIRE	S	AA	AC
		QCNW-A511WJZZ	(K) WIRE	S	AA	AC
		LHLDW1514BM00	HOLDER UNEX 2233	S	AA	AA
		LHLDWA011WJKA	DEGAUSSING HOLDER 40mm DGCE-4-2-19	S	AA	AA
		QEARCA013WJZZ	COATING EARTH 15"	S	AB	AG
			CABINET PARTS			
⚠	1	CCABAA057BMV1	CABINET SET+ELEC ASS	S	AW	BK
	1.1	JBTN-A025WJSA	POWER BUTTON	S	AA	AC
	1.2	GCOVAA074WJSA	R/C LED COVER	S	AA	AD
	1.3	JBTN-0403PESA	CONTROL BUTTON	S	AA	AD
	1.4	HDECAA001WJSB	SP DECORATION	S	AB	AF
⚠	2	GCABBA023WJKA	REAR CABINET	S	--	--
	3	XTASB40P20000	SCREW	S	AA	AA
	4	XTASD40P12000	SCREW	S	AA	AA

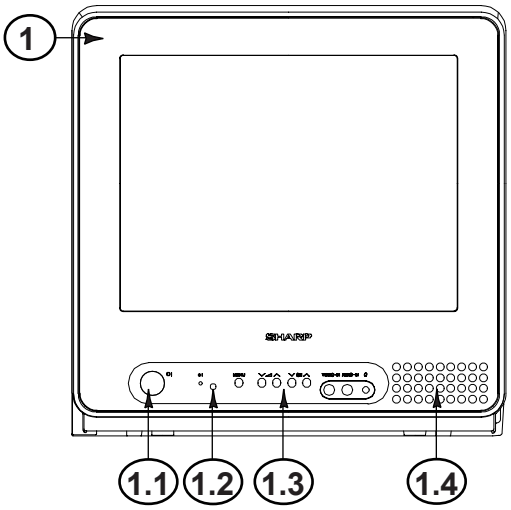

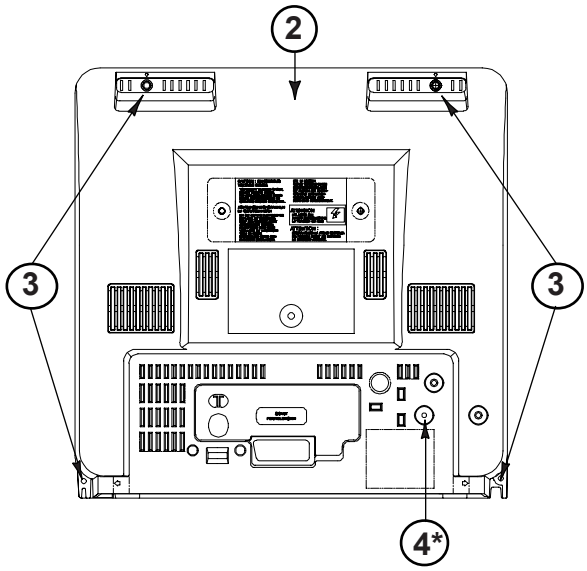

*Do not retrieve to remove the Rear Cabinet.

ACCESSORIES

R/C Battery Cover GCOVHA009WJSA 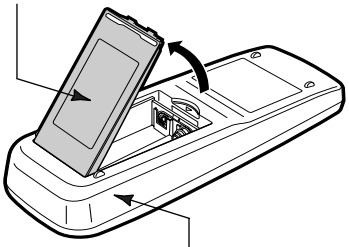 Remote Control RRMCG1060BMSA	Batteries R6(x2) UBATU0013TAZZ 	Operation Manual Set TINS-7245BMN0, Operation Manual

SHARP®

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of the publisher.

SHARP ELECTRONICA ESPAÑA S.A.
TV Division
Engineering Dept.
Polígono Industrial Can Sant Joan
Sant Cugat del Vallès
Barcelona
Spain

PRINTED BY: ON:

Think Ecology, please use

RECYCLED PAPER

Other ManualsLib Projects

www.manualslib.com

www.manualslib.de

www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ Languages